

Calibration Guide

1500 Series

Model: R1500 (RB109), E1500 (CB121)

This guide will assist you in entering the Engineering Mode of the console to view and/or change the following variables:


- Console Tests
 - LCD display testing
- Machine Accumulated Variables/ ECB testing
 - Total Time
 - Total Distance
 - ECB test
- Software Version and Measurement Variables
 - Software version test
 - Miles or Kilometers
- Default Time
- Default Level
- Setting the console for:
 - Miles or Kilometers
 - Bike or Elliptical

ENTER ENGINEERING MODE

- Press and hold the **"UP"** and **"DOWN"** buttons simultaneously for approximately three seconds.
- You will hear a series of beeps and the display will read **"ENGI"**. You are now in ENGINEERING MODE.
- Use the **"UP"** and **"DOWN"** buttons to scroll through the five Eng mode subgroups. Press **"ENTER"** to select mode.

ENGINEERING MODE SUBGROUPS

- Eng1 (LCD Display testing)
 - Press **"UP"** and **"DOWN"** buttons to test LCD displays.
 - To exit, press **"PAUSE"**.
- Eng2 (Total Time, Total Distance, ECB test)
 - Press **"UP"** and **"DOWN"** buttons to test brake movement through cycle.
 - Lower left display shows location of ECB brake.
 - Left center display shows the accumulated hours of use on machine.
 - Right center display shows the accumulated distance in miles or kilometers on machine.
 - To exit, press **"PAUSE"**.
- Eng3 (Software version test, MI or KM)
 - Matrix display shows Miles or Kilometers.
 - Lower left display shows Bike or Elliptical mode.
 - Left center display shows software version.
 - To exit, press **"PAUSE"**.

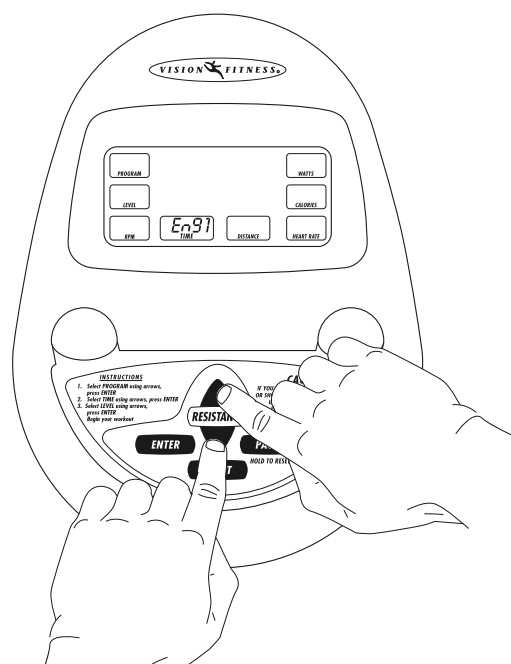

Calibration Guide

1500 Series

Model: R1500 (RB109), E1500 (CB121) continued

- Eng4 (Default Time)
 - Press **"UP"** and **"DOWN"** buttons to set the default workout time.
 - To save, press and hold **"ENTER"**.
 - To exit, press **"PAUSE"**.
- Eng5 (Default Level)
 - Press **"UP"** and **"DOWN"** buttons to set the default workout level.
 - To save, press and hold **"ENTER"**.
 - To exit, press **"PAUSE"**.

EXIT ENGINEERING MODE

- To exit engineering mode, press and hold **"PAUSE"** for approximately three seconds.

SETTING: MILES VS. KILOMETERS AND BIKE VS. ELLIPTICAL

- The console can be configured for A) **Bike or Elliptical**; and B) **Miles or Kilometers**. These settings are selected via small DIP switches inside the console. Remove the console to access the switches.

