


Calibration Guide

X1500 Series

Model: X1500 (EP108)

This guide will assist you in entering the Engineering Mode of the console to view and/or change the following variables:

- User Defined Variables:
 - Default Workout Time
 - Default Level (of resistance)
- Machine Accumulated Variables:
 - Total Time
 - Total Distance
- Console and Brake Tests
 - Display Test
 - Hardware and Software Test
- Setting the console for:
 - Miles or Kilometers
 - Bike or Elliptical

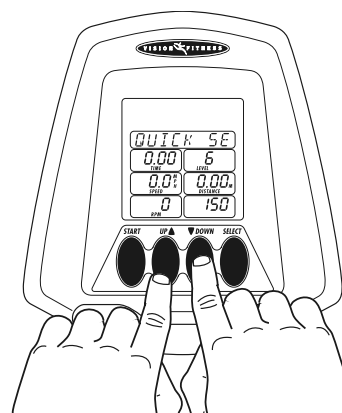

ENTER ENGINEERING MODE

- Press and hold the **"UP"** and **"DOWN"** buttons simultaneously for five seconds.
- You will hear a series of beeps and the display will read **"USER SET"**. You are now in ENGINEERING MODE.

SELECTING ENGINEERING SUBGROUP

- Use the **"UP"** and **"DOWN"** buttons to switch between the various Engineering Subgroups (modes).
- Press **"START"** to enter the desired subgroup (mode).

USER SET MODE (use the **"SELECT"** button to move between variables)

- SETTING DEFAULT WORKOUT TIME
 - The top left window will be flashing the default time. Use the **"UP"** and **"DOWN"** buttons to change the time.
 - To save changes, press and hold **"START"** for approximately three seconds.
 - Press **"SELECT"** to go to Default Level.
- SETTING DEFAULT LEVEL (resistance)
 - The top right window will be flashing the default resistance level. Use the **"UP"** and **"DOWN"** buttons to set default level.
 - To save changes, press and hold **"START"** for approximately three seconds.
- DISPLAY TEST (will appear as DIS TEST)
 - Viewing Accumulated Time (total time on machine)
 - « The left center window will show accumulated hours of use.
 - Viewing Accumulated Distance (total distance on machine)
 - « The right center window will display accumulated distance in miles or kilometers.
 - « To exit USER SET MODE press and hold **"SELECT"** for approximately three seconds.

Calibration Guide

X1500 Series

Model: X1500 (EP108) *continued*

ENTER ENGINEERING MODE (CONTINUED)

DISPLAY TEST (will appear as DIS TEST)

- This test checks all display LCDs
 - Press the **"UP"** button to test the LCD in the display windows.
 - Press the **"DOWN"** button to test the LCD in the matrix display.
 - To exit DIS TEST MODE press and hold **"SELECT"** for approximately three seconds.

HARDWARE/BRAKE AND SOFTWARE TEST (will appear as HW TEST)

- Displays software version in the Scrolling Display window.
- Shows RPM rate in the bottom left window.
- Shows brake movement in the bottom right window. Press and hold the **"UP"** button or the **"DOWN"** button to have the brake move through its cycle.
- To exit HW TEST MODE press and hold **"SELECT"** for approximately three seconds.

EXIT ENGINEERING MODE

- Press and hold **"SELECT"** for approximately three seconds.

SETTING: MILES VS. KILOMETERS AND BIKE VS. ELLIPTICAL

- The console can be configured for A) **Bike or Elliptical**; and B) **Miles or Kilometers**. These settings are selected via small DIP switches inside the console. Remove the console to access the switches.

