

Elliptical Trainer General Maintenance

Models: X1400/X1500/X6100/X6200/X6200HRT/X6600HRT

PREVENTATIVE MAINTENANCE TIPS

- Locate Elliptical Trainer in a cool, dry place.
- Make sure all bolts and fasteners are kept tight.
- Keep the display console free from fingerprints and salt buildup caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the Elliptical Trainer. Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

PREVENTATIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

ITEM	WEEKLY	MONTHLY	BI-ANNUALLY	ANNUALLY
DISPLAY CONSOLE	CLEAN	INSPECT		
ALL BOLTS AND HARDWARE			INSPECT	
FRAME	CLEAN			INSPECT
HANDLEBARS	CLEAN	INSPECT		
GUIDE RAILS	CLEAN			
ROLLER WHEELS	CLEAN		INSPECT	
PLASTIC COVERS	CLEAN			
FOOTPLATES	CLEAN			