



Escape with Passport™

The Passport Media Player lets you experience global HD destination footage on your big screen by wirelessly connecting your home TV to your Passport-ready exercise equipment.

Virtual Active™ programming guides you through inspiring locales while displaying workout data on your television screen. It's interactive, responsive and seamless. The footage is synced to the intensity and speed of your workout, creating one of the most immersive exercise and entertainment experiences available. That means you'll really climb hills and race down stairways as your incline or resistance change automatically to match the screen.

Passport Player featuring Virtual Active programming offers an escape unlike anything else.

New Features for an Even Better Passport Player Experience



Smaller Size

The next generation of our popular Passport Player is now offered in a compact stick format, which fits perfectly behind wall-mounted TVs.

Better Performance

Improved user experience offers better controls and intuitive navigation.

Easier WiFi Connectivity

Just connect your console and Passport to WiFi, and they'll communicate over your home network.

No WiFi? No Problem.

The Passport Player can act as a hot spot to connect your TV to your equipment even without WiFi.

More Options

Load custom music, movies and photos onto the Virtual Active content stick to play during your workout. Play your own music during your virtual destination workout or listen to your music while enjoying a different program, all while your workout information displays on your TV.

Point-anywhere Remote

Passport includes a Bluetooth remote so you don't even have to aim at your TV.



Get Started in 5 Easy Steps

- 1 Plug Virtual Active content pack USB into Passport stick
- 2 Plug Passport stick into your television
- 3 Plug into wall outlet
- 4 Turn on your TV and follow the on-screen instructions to connect Passport Player to your WiFi network
- 5 Connect your fitness equipment to your WiFi network per the instructions provided with the equipment

What's in the Box?

- Passport stick
- Remote control
- Power cable
- Power adapter with USB port
- HDMI extender cable
- Virtual Active content pack with seven destinations

What do you need?

- Compatible Matrix Fitness or Horizon Fitness equipment*
- TV with an HDMI port and a power outlet

Specifications

DIMENSIONS (L x W x H)	110 x 40 x 10.5 mm
PORTS AND CONNECTORS	• HDMI (to connect directly to TV) • Micro USB for power • Micro USB for data • USB-A port for Virtual Active content and additional media • Micro SD port for additional media
RESOLUTION	• Virtual Active content supports up to 720p • Additional media supports up to 4K
WIRELESS	802.11 b/g/n @ 2.4GHz
POWER INPUT	DC 5V 2A
REMOTE CONTROL	Point-anywhere Bluetooth remote
VIRTUAL ACTIVE CONTENT PACK	Course lengths are 20–40 minutes each • American Southwest • Northern Italy • Tierra Del Fuego • Oregon • Canadian West Coast • Taipei • Maui Mountains
SYSTEM REQUIREMENTS	• Compatible Matrix Fitness or Horizon Fitness equipment* • Television with available HDMI input • Power outlet • Internet connection via WiFi (optional, Passport Player supports hotspot mode)
HOME WARRANTY	90 days (North America only)

Additional Virtual Active Destinations

PACK A



- Canadian Rockies
- French Riviera
- Trinity Mountains
- Washington State
- South Island
- Vancouver

PACK B



- Southern Utah
- Rocky Mountains
- California Desert
- Acadia National Park
- British Columbia
- Paris & Reims

PACK C



- New England
- Arizona
- California Coast
- Italian Alps
- Oregon
- Auckland & Wellington

* Earlier equipment models are not compatible with the new Passport Player version. Ask your local Horizon or Matrix retailer which Passport Player version your equipment is compatible with before purchasing.