

Troubleshooting: Bikes *continued*

R2600iNetTV/E3600iNetTV

iNET TROUBLESHOOTING

Symptom	Solution
No Display on Console	1. Check computer power 2. Check the power supply 3. Check the VGA connectors 4. Try resetting console • Turn power off on console • Press & hold the START button while you turn the power on to the console. 5. Replace a new console.
Symptom	Solution
No Power to Machine	1. Check the wall outlet. 2. Check fuse in the power socket on machine.
Symptom	Solution
Resistance is Abnormal When Using	1. Check wire harness at the back of the console to make sure the adapter is installed. • 10 pins on the harness means the adapter is missing. • 12 pins on the harness means the adapter is installed. 2. Replace ECB brake 3. Replace the console.
Symptom	Solution
Touch Pad Doesn't Respond	1. Reset console. • Turn power off on console. • Press & hold the START button while you turn the power on to the console. 2. Replace the console.

Troubleshooting: Bikes *continued*

R2600iNetTV/E3600iNetTV *continued*

iNET TROUBLESHOOTING

Symptom	Solution
RPM'S Missing or Incorrect	1. Check wire harness for correct number of pins • X6600inet 11 pins • E3600inet or R2600inet 10 pins 2. Check RPM sensor for continuity. 3. Check to make sure the RPM magnet is glued into the crank sprocket. 4. Replace the console.
Symptom	Solution
Contact Heart Rate Erratic or Missing	1. Check all connections on the hand pulse set. 2. Check all connections from hand pulse set to the back of the console. 3. Replace the console. 4. Replace handpulse set.
Symptom	Solution
Telemetric Heart Rate Erratic or Missing	1. Check for interference • Alarm systems, invisible dog fences, florescent lighting, computers, or anything that may give off a strong electronic signal. • Test with a new chest transmitter or HR simulator. • Replace console.
Symptom	Solution
Television Channels not Clear	1. Try adding an amplifier to the antenna or cable line. 2. Hook antenna or cable line through a VCR before hooking into the console. 3. Check to see how many lines are branched off of the incoming cable line or antenna.
Symptom	Solution
Black and White TV Screen only when using DVD Player	1. Reset the DVD player in NTSC format.