 


ENDURANCE B2R.2

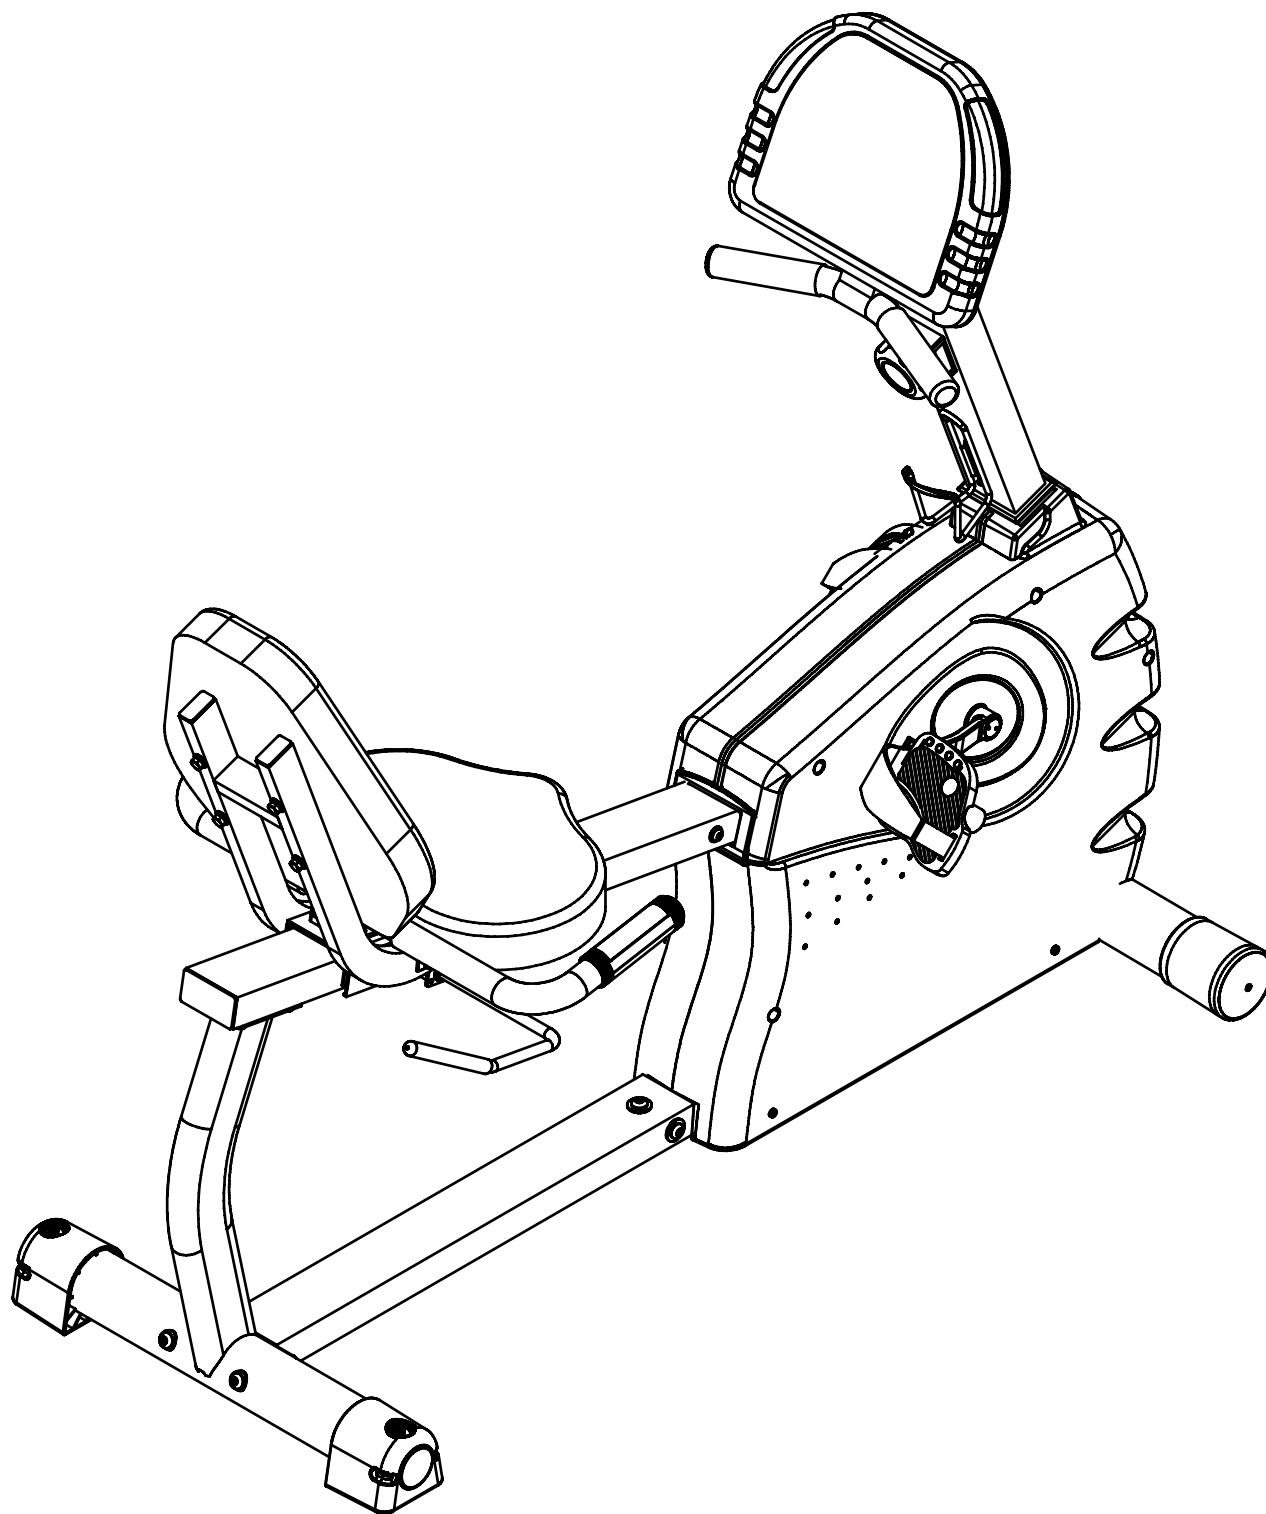

VERSION 0701

ENDURANCE B2R.2 HADWARE ILLUSTRATION SHEET

 
A1.M4x10 ROUND CROSS SCREW-----[2PCS]




A2.M5x15 ROUND CROSS SCREW-----[4PCS]




A3.M5x45 ROUND CROSS SCREW-----[1PCS]



 
A4.M8x10 ROUND INNER HEX SCREW-----[2PCS]



 
A5.M8x15 ROUND INNER HEX SCREW-----[8PCS]




A6.M8x60 HEX HEAD BOLT-----[8PCS]

 

 
A7.M8x90 ROUND INNER HEX SCREW-----[1PCS]




 
A8.M10x16 ROUND INNER HEX SCREW-----[5PCS]

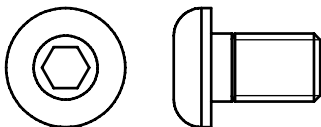

 A9.M10x65 ROUND INNER HEX SCREW-----[2PCS]

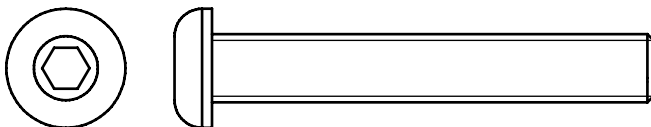


  A10.M10x90 ROUND INNER HEX SCREW-----[4PCS]

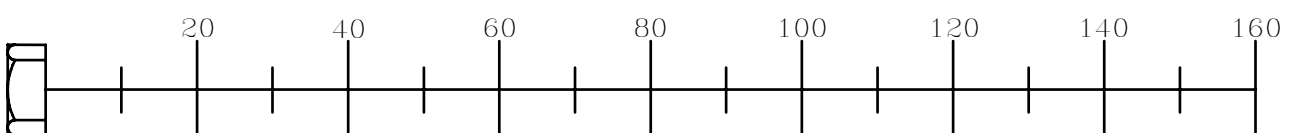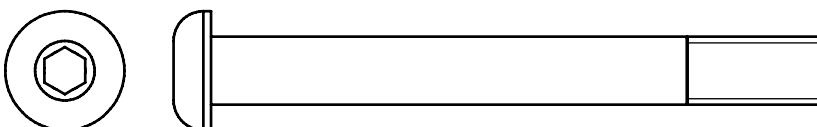

ENDURANCE B2R.2 HADWARE ILLUSTRATION SHEET

 
C1.M4 (I.D)WASHER-----[2PCS]




C2.M5 (I.D)WASHER-----[1PCS]



 C3.M8 (I.D)WASHER-----[10PCS]

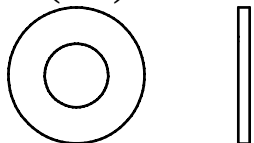


C4.M8xØ14 WASHER-----[5PCS]

 


C5.M8 SPRING WASHER-----[17PCS]




 
C6.M10 (I.D)WASHER-----[5PCS]

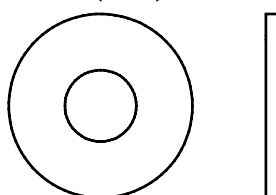

C7.M10 SPRING WASHER-----[2PCS]

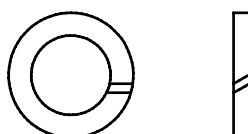 


C8.M10 ARC WASHER-----[4PCS]

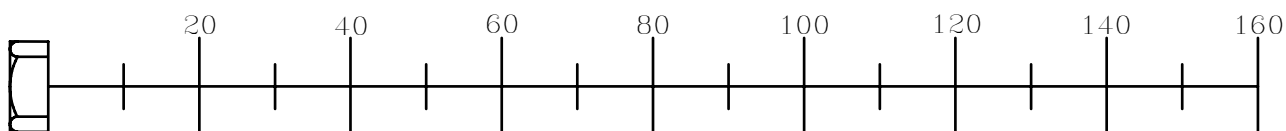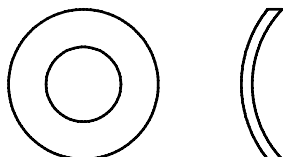  


ENDURANCE B2R.2 PARTS ILLUSTRATION SHEET

 
A [1PCS]

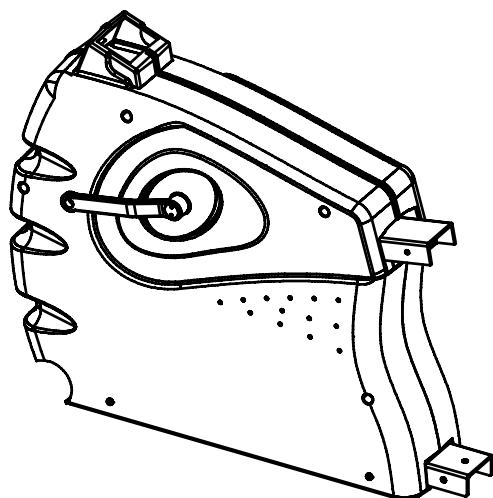


E [1PCS]

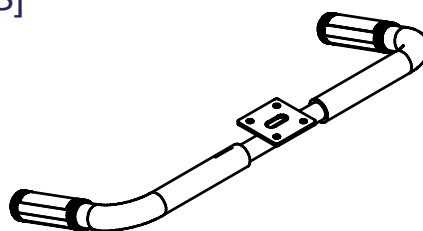 


F [1PCS]

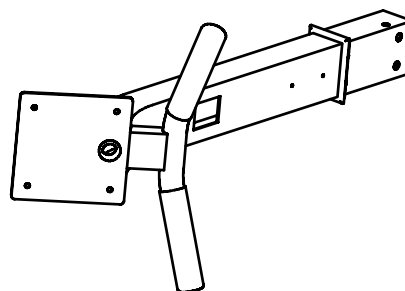 


B [1PCS]

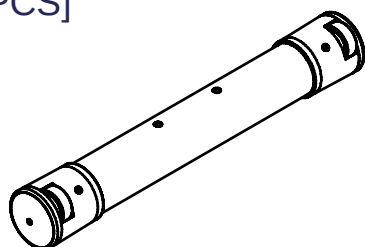 


O [1PCS]

 

C [1PCS]

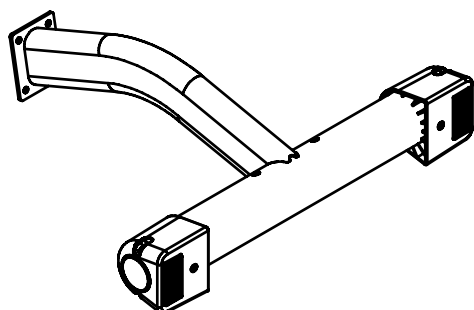 

G [1PCS]

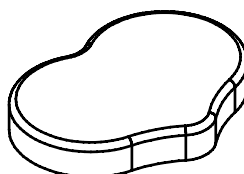 


J [1PCS]



K [1PCS]



 
H [1PCS]

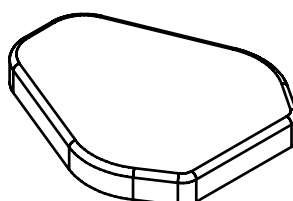

L [1PCS]



 
D [1PCS]

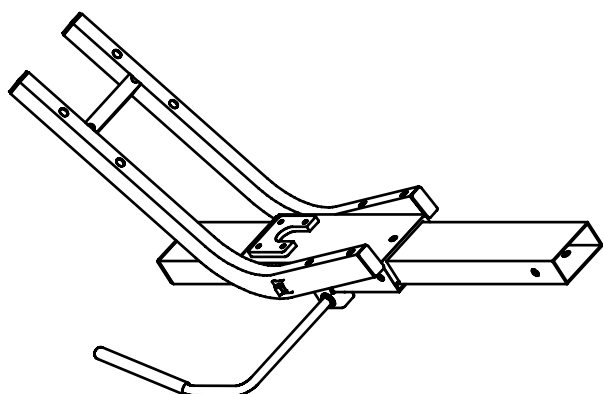

M [1PCS]



 
I [1PCS]

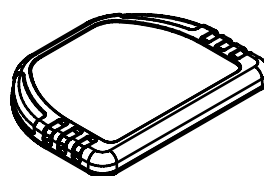


N [1PCS]



 
ENDURANCE B2R.2 ASSEMBLE INSTRUCTION

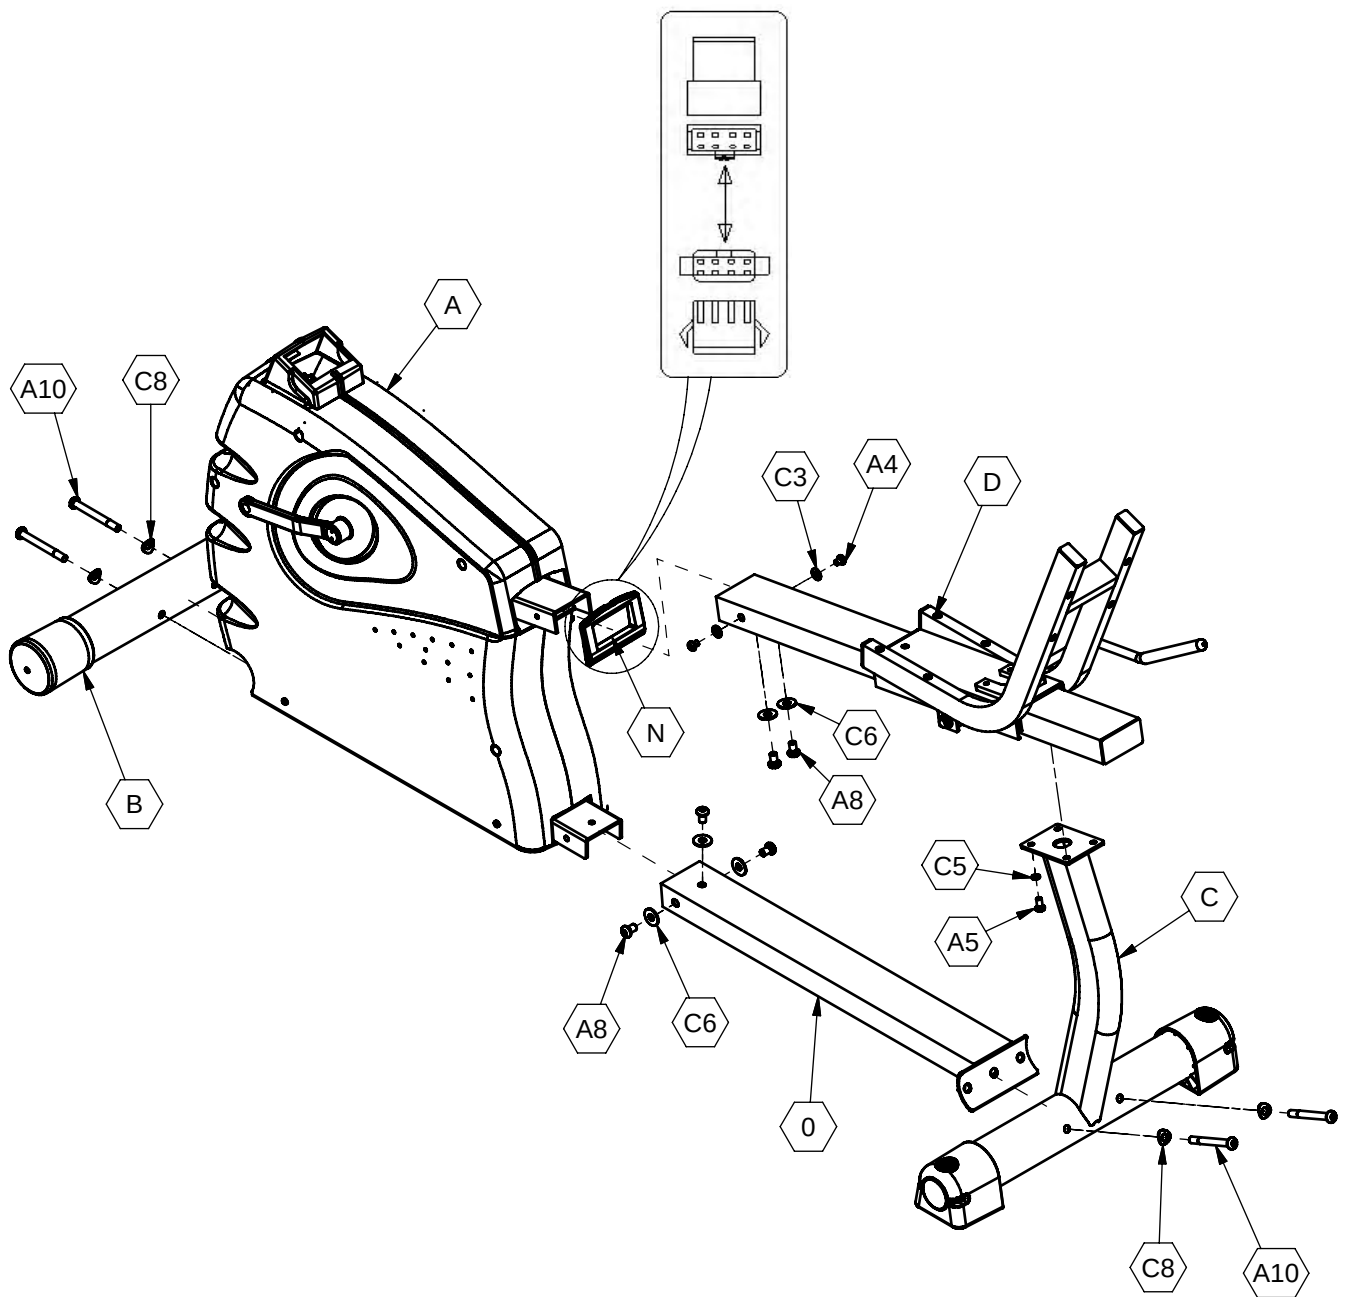

ENDURANCE B2R.2 ASSEMBLE INSTRUCTION

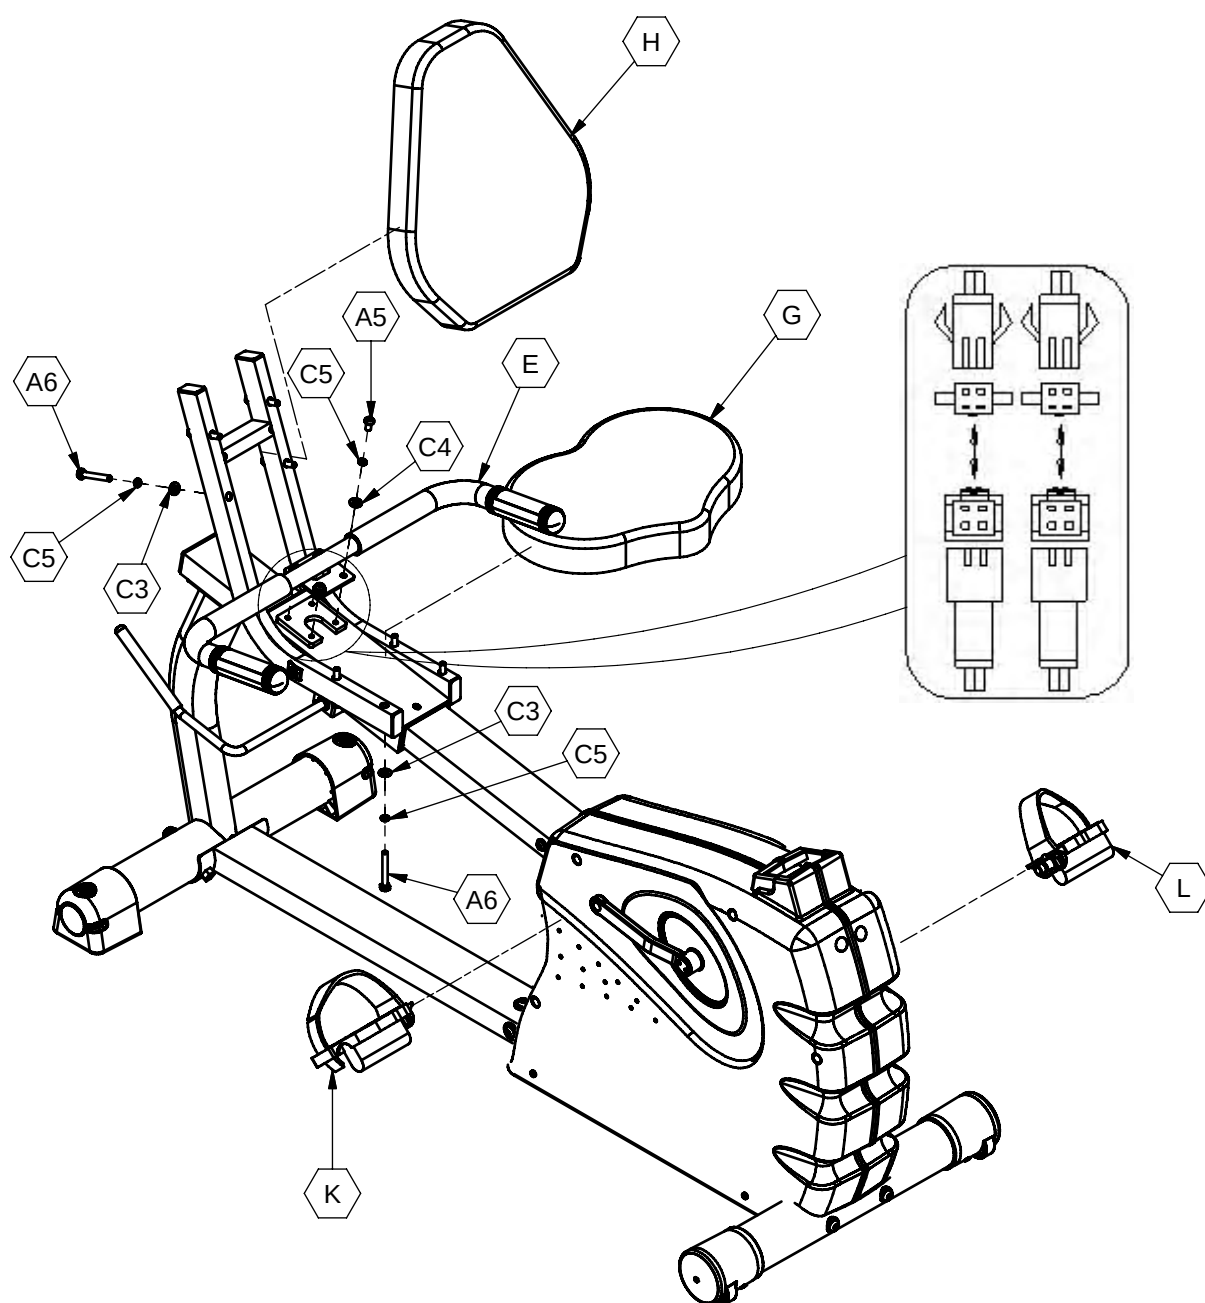 

ENDURANCE B2R.2 ASSEMBLE INSTRUCTION

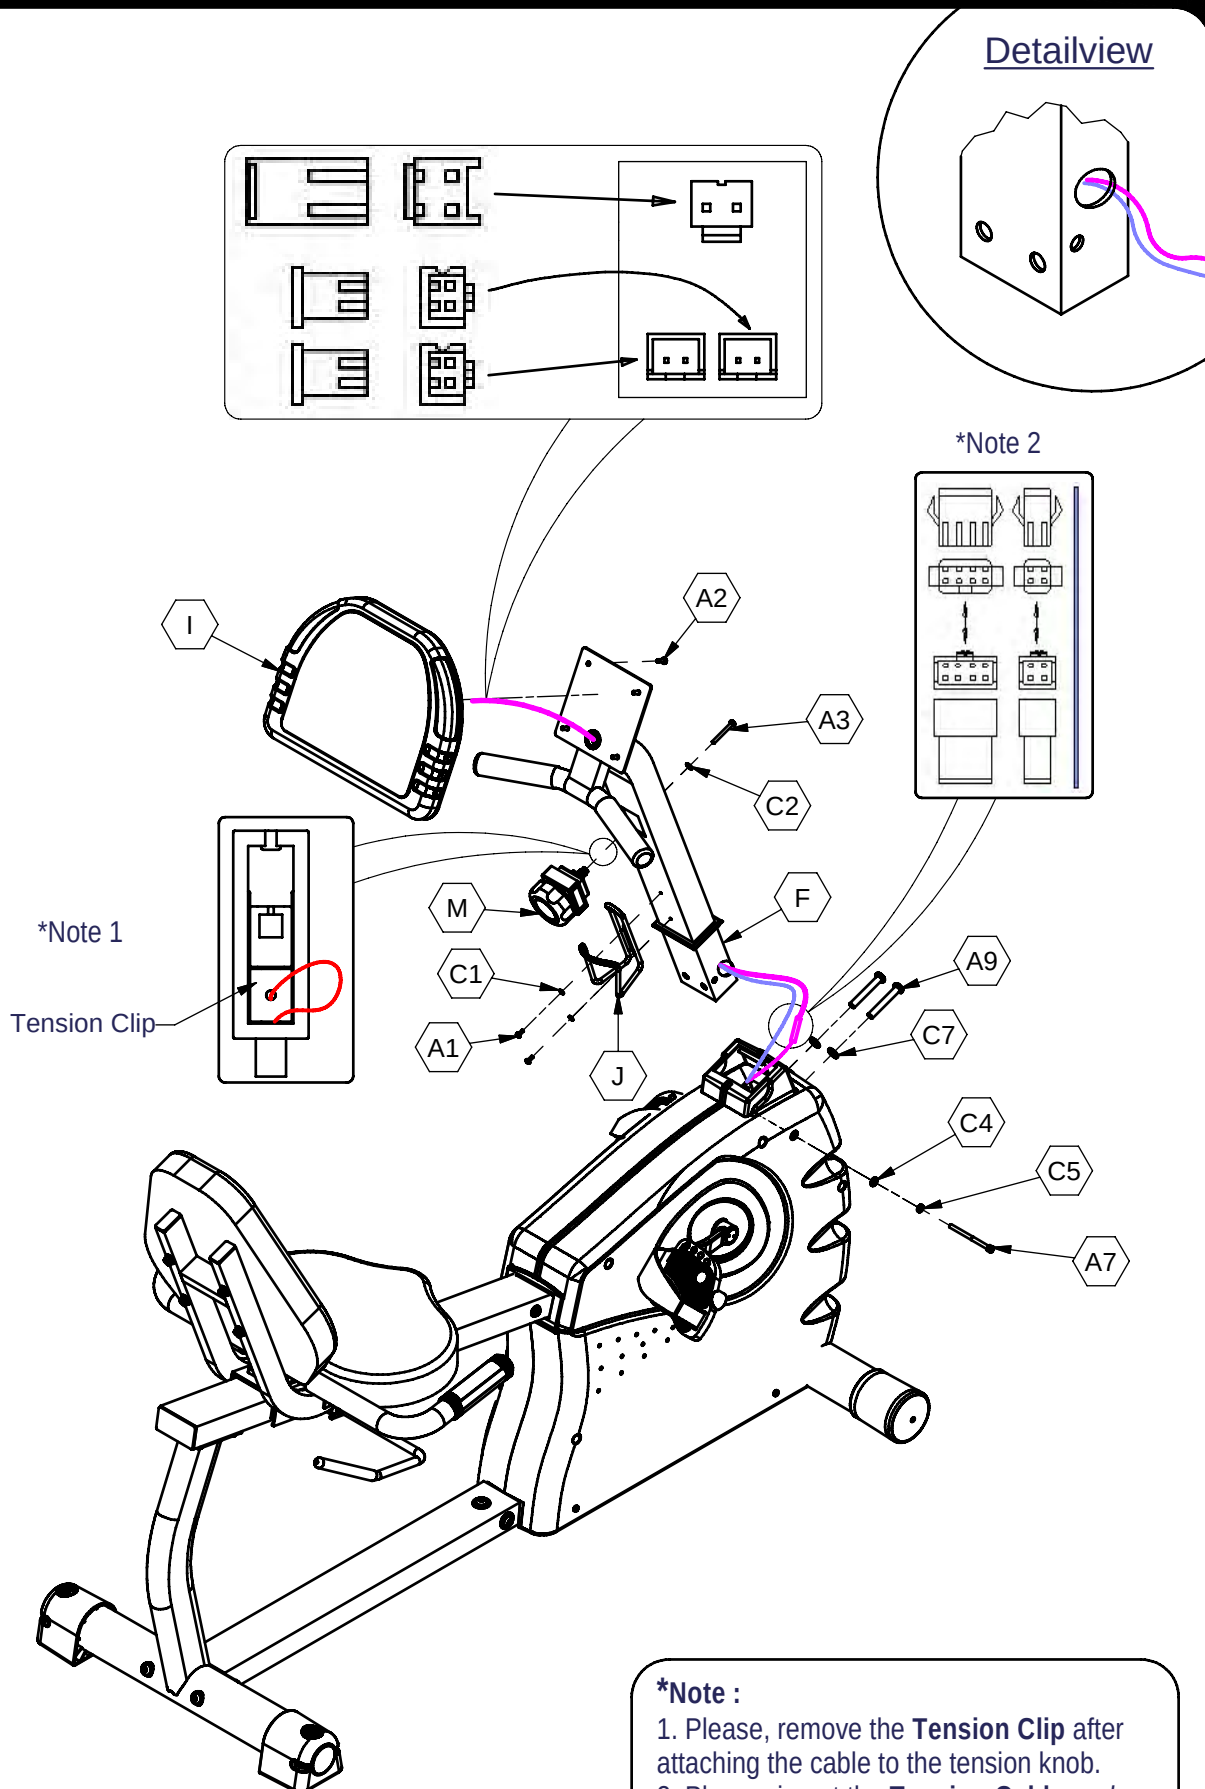 

Detailview

*Note 2

*Note 1

Tension Clip

***Note :**

1. Please, remove the **Tension Clip** after attaching the cable to the tension knob.
2. Please, insert the **Tension Cable and Wire Harness** through the hole provided on the main upright before finalizing its position.