



HOW TO REMOVE THE MOTOR FLYWHEEL

- 1) Lock the motor spindle, in the rear of motor, with your vise-grip.
- 2) Stand motor up, so that flywheel is up and the vise-grip is on the ground.
- 3) Balance the motor between your legs, with your foot on the vise-grip to prevent it from spinning.
- 4) Turn motor flywheel clockwise to remove.
- 5) Use the reverse procedure to attach to the new motor.