


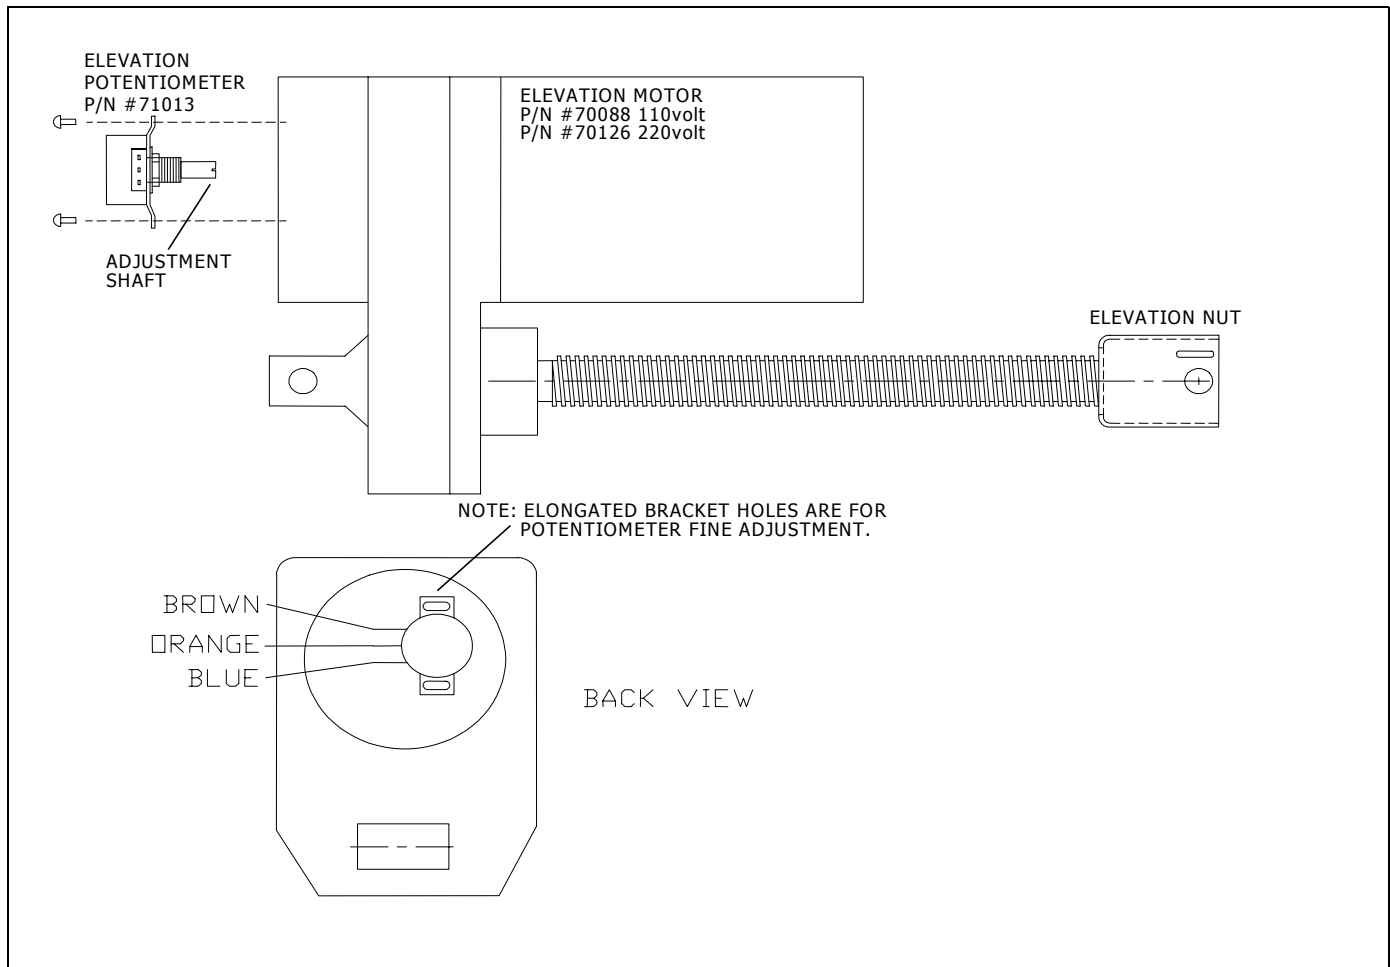

### To Enter Diagnostic Mode:

Turn off the treadmill.

L7 & L8 ET's – Press MENU & START simultaneously.

L7 & L8 CT's – Press MANUAL (or DISPLAY UP ARROW) & START simultaneously.

L7 & L8 ST, PST, PT, CRT – Press DISPLAY (or DISPLAY UP ARROW) & START simultaneously.

### To calibrate the potentiometer:

1. Visually confirm treadmill is level. (0% grade). If it is not at 0% grade go into diagnostics and press down arrow for elevation until at 0% grade.

2. Adjust the pot settings as follows:

All L7 & L8's (From 11/7/2000) - The potentiometer should read ZERO.

**NOTE:** Elevation window on display shows Actual Elevation. Display window shows POT reading.

3. If the setting is incorrect, follow the steps below.

**STEP 1:** Turn the post of the potentiometer all the way **CLOCKWISE**.

**STEP 2:** Slowly turn the potentiometer **COUNTER-CLOCKWISE** until the setting is correct.

4. Carefully install potentiometer into the motor housing.

**\*NOTE:** The setting may vary when inserting the potentiometer into the motor. As long as the change is minimal, fine adjustment can be achieved after the potentiometer is secured in motor housing.