

TROUBLESHOOTING LC9500R BIKE

Check cables where they plug into the console...make sure there is power on the cables. If not, check output at lower board.

Underneath the bike in the back there is a battery. You will have to flip bike over to see it. Battery should read about 6v.

If battery is good check alternator - terminal B positive E-ground. Check for 9v between B and E.

Bring 9v battery - plug into back of console. If it lights up the console is good.

Call Newton from site if you need help. There are no good schematics for this unit.