





ASSEMBLY, U916

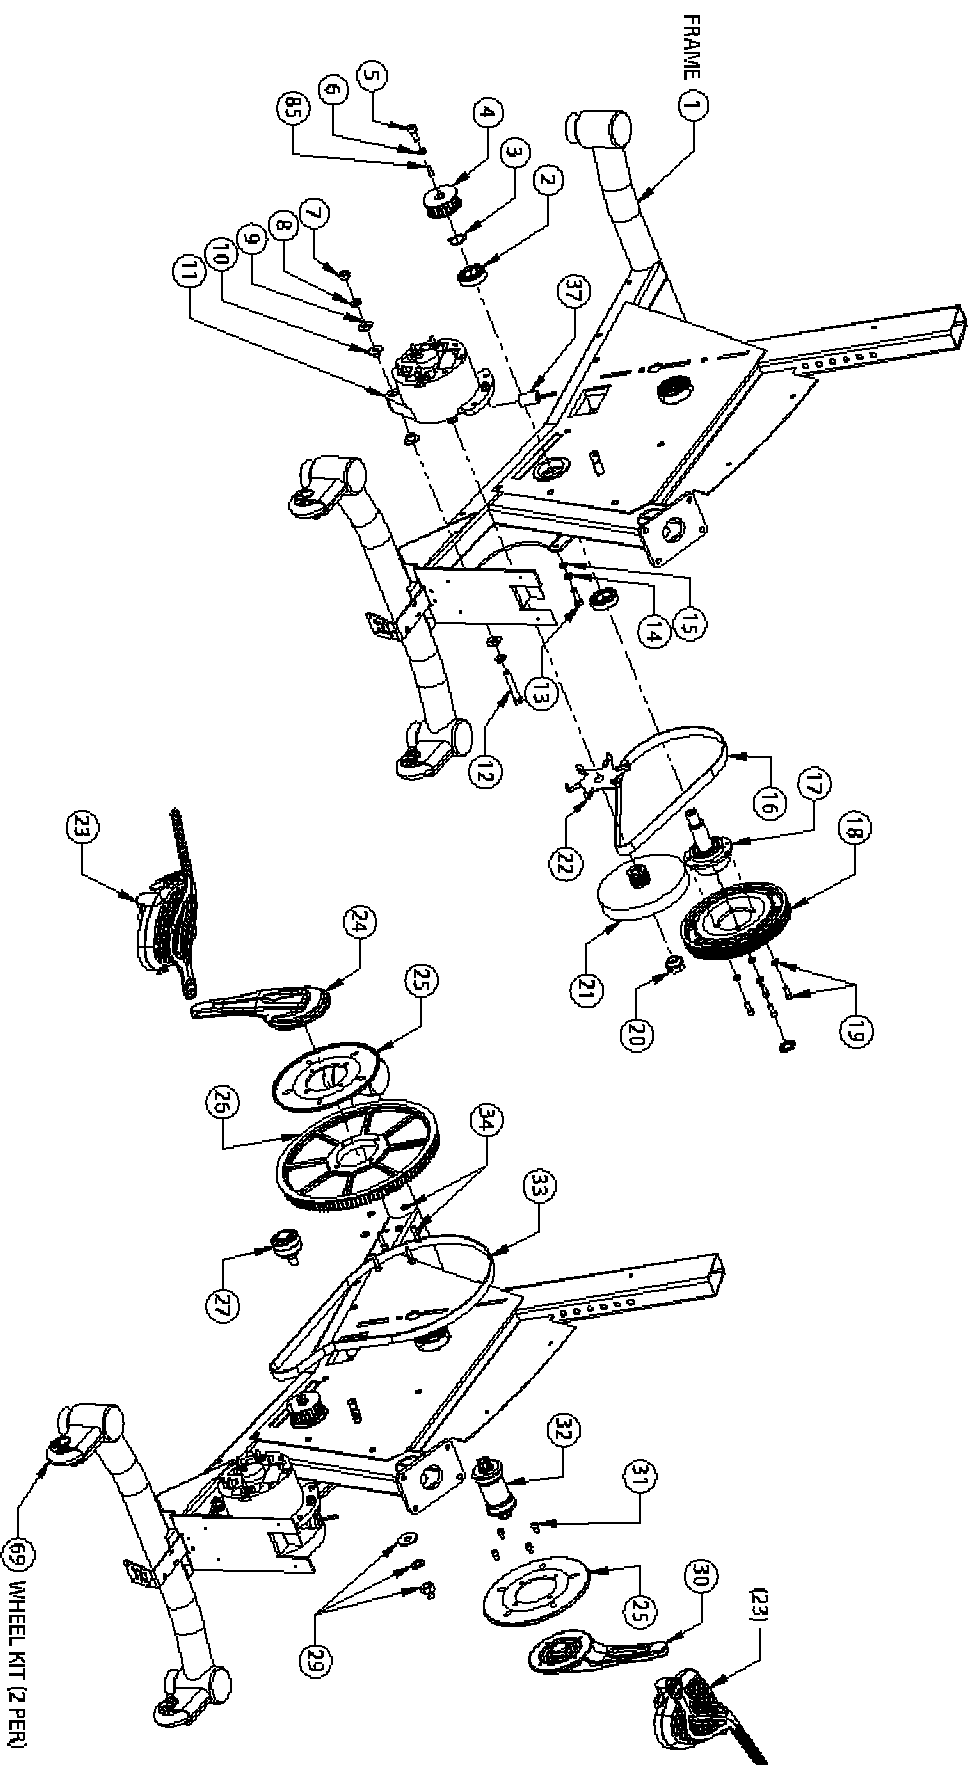

ASSEMBLY, U916

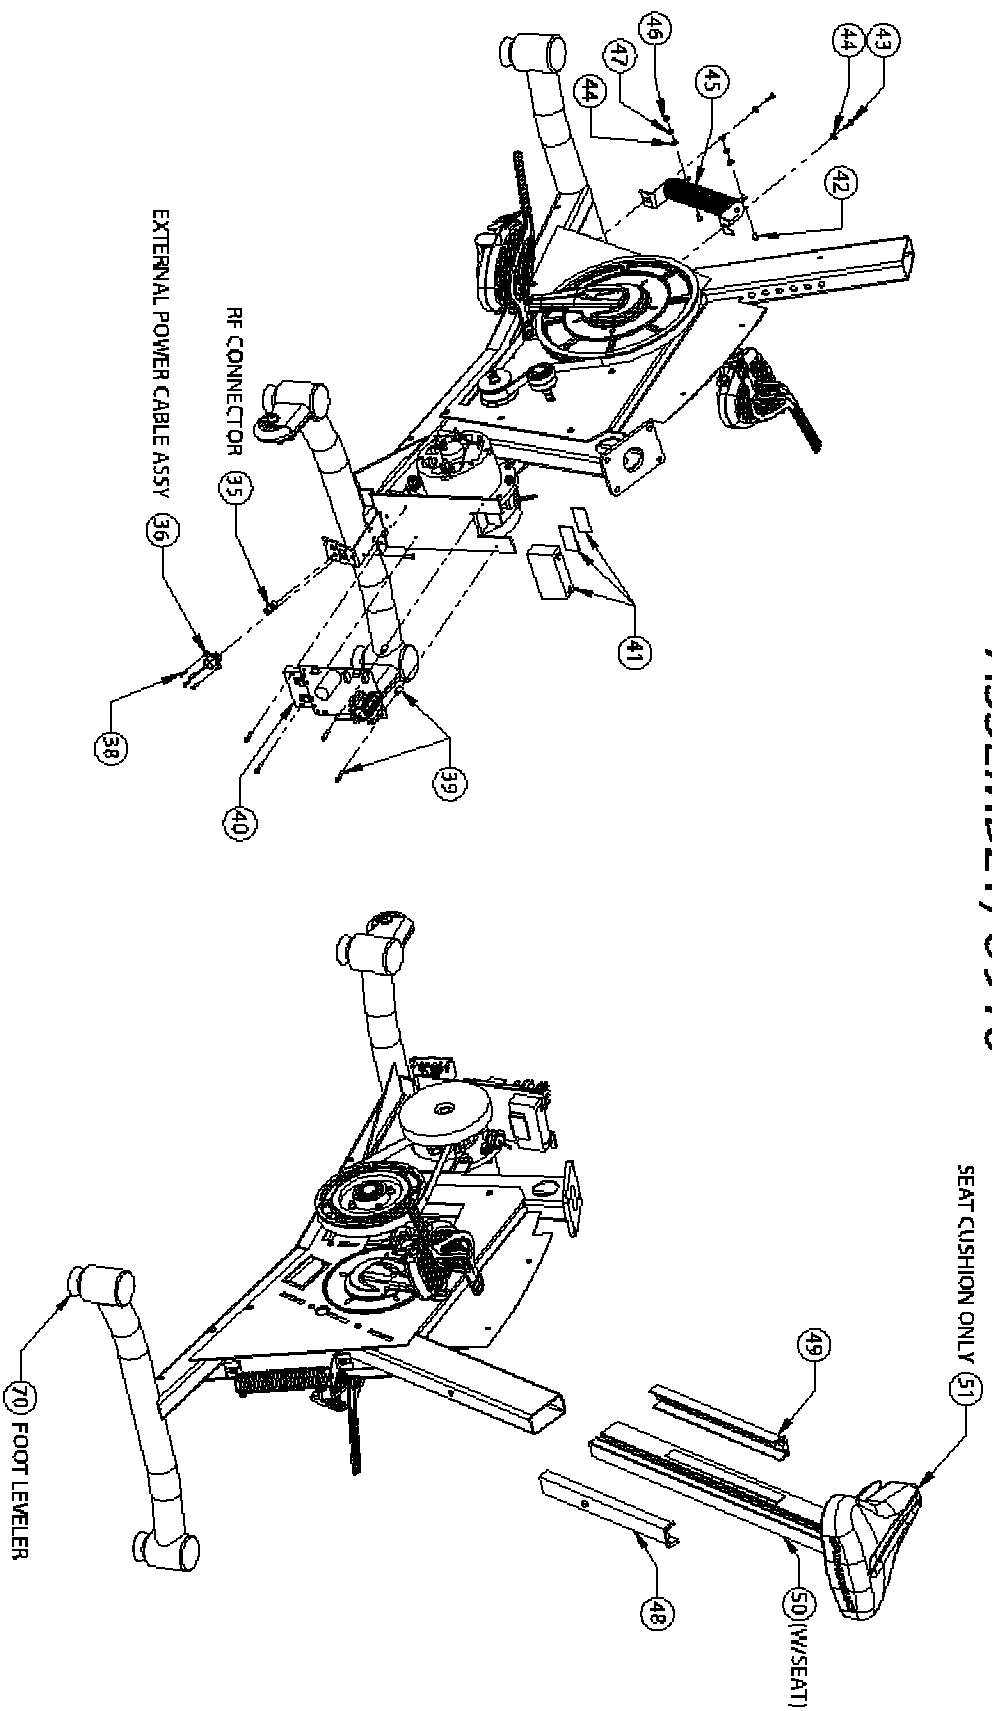


ASSEMBLY, U916

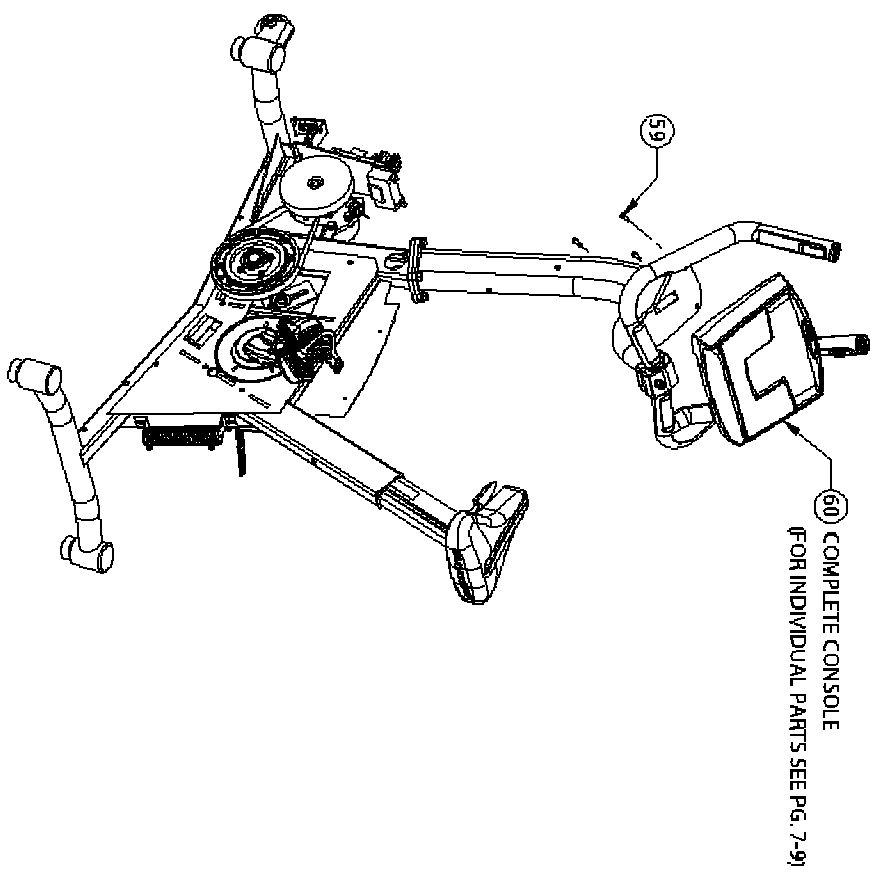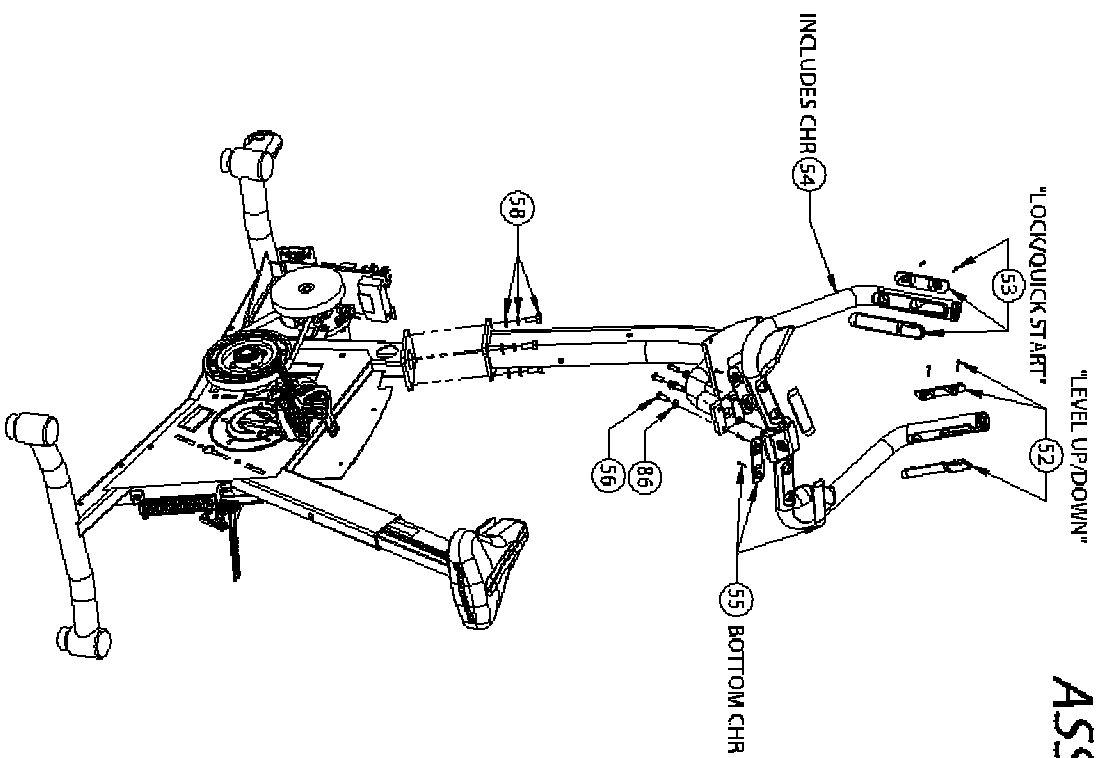


ASSEMBLY, U916


NOTE 1: PLEASE PROVIDE MACHINE SERIAL NUMBER
SO A DUPLICATE MAY BE MADE FOR THE MAST

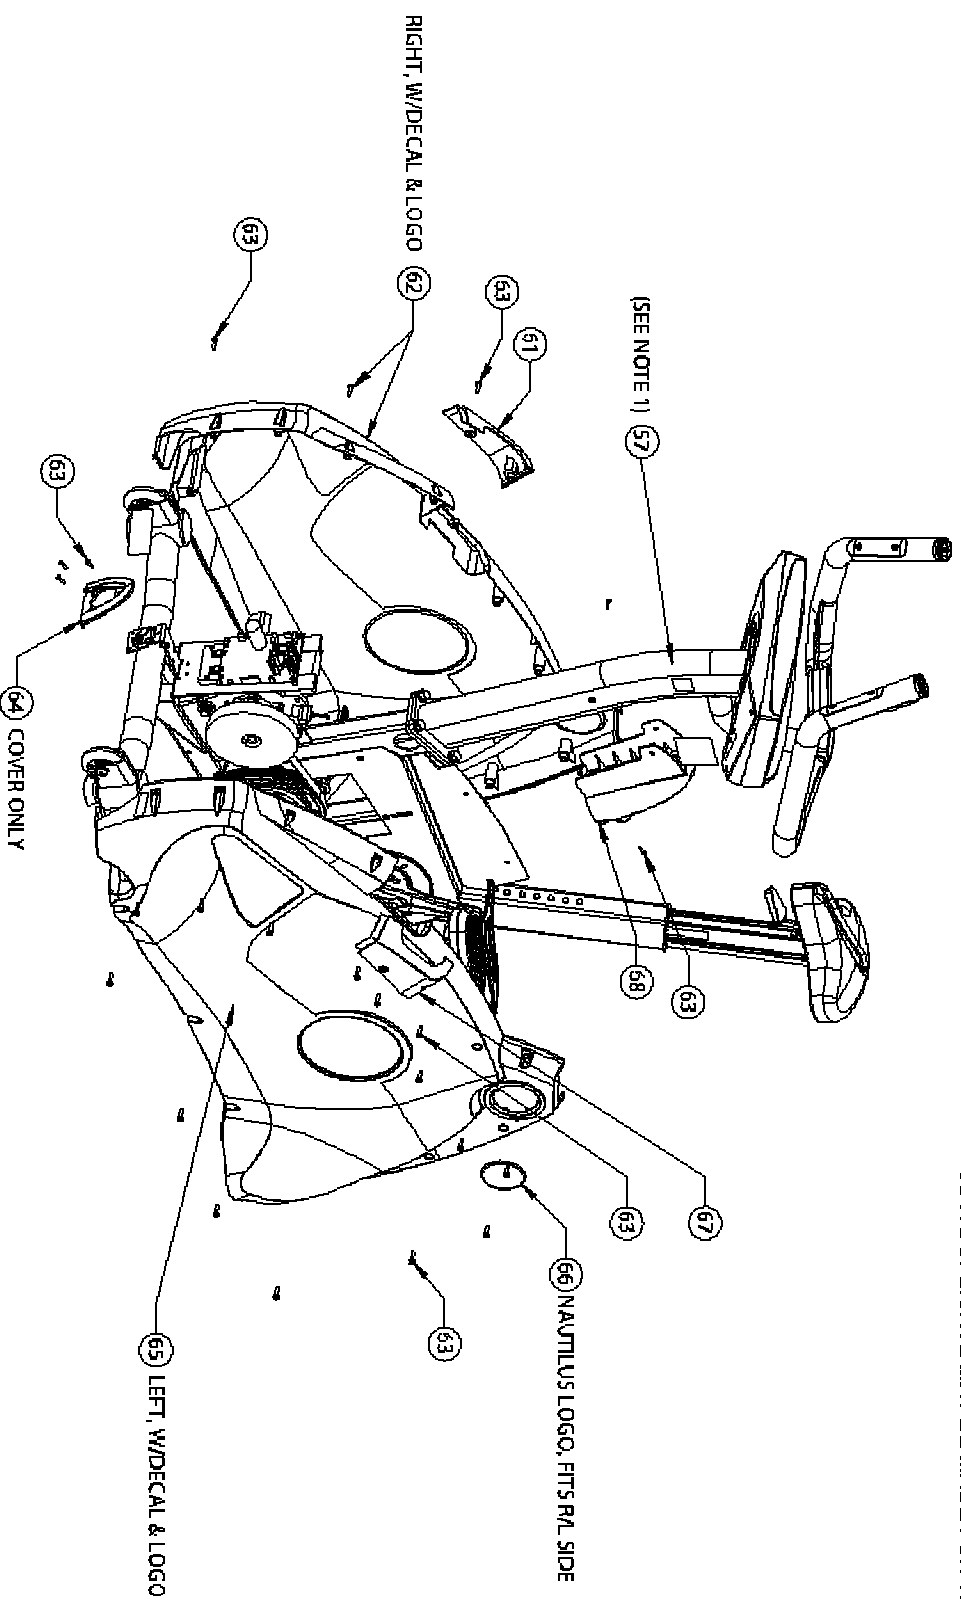



PROCESSOR BOARD CONNECTIONS U916

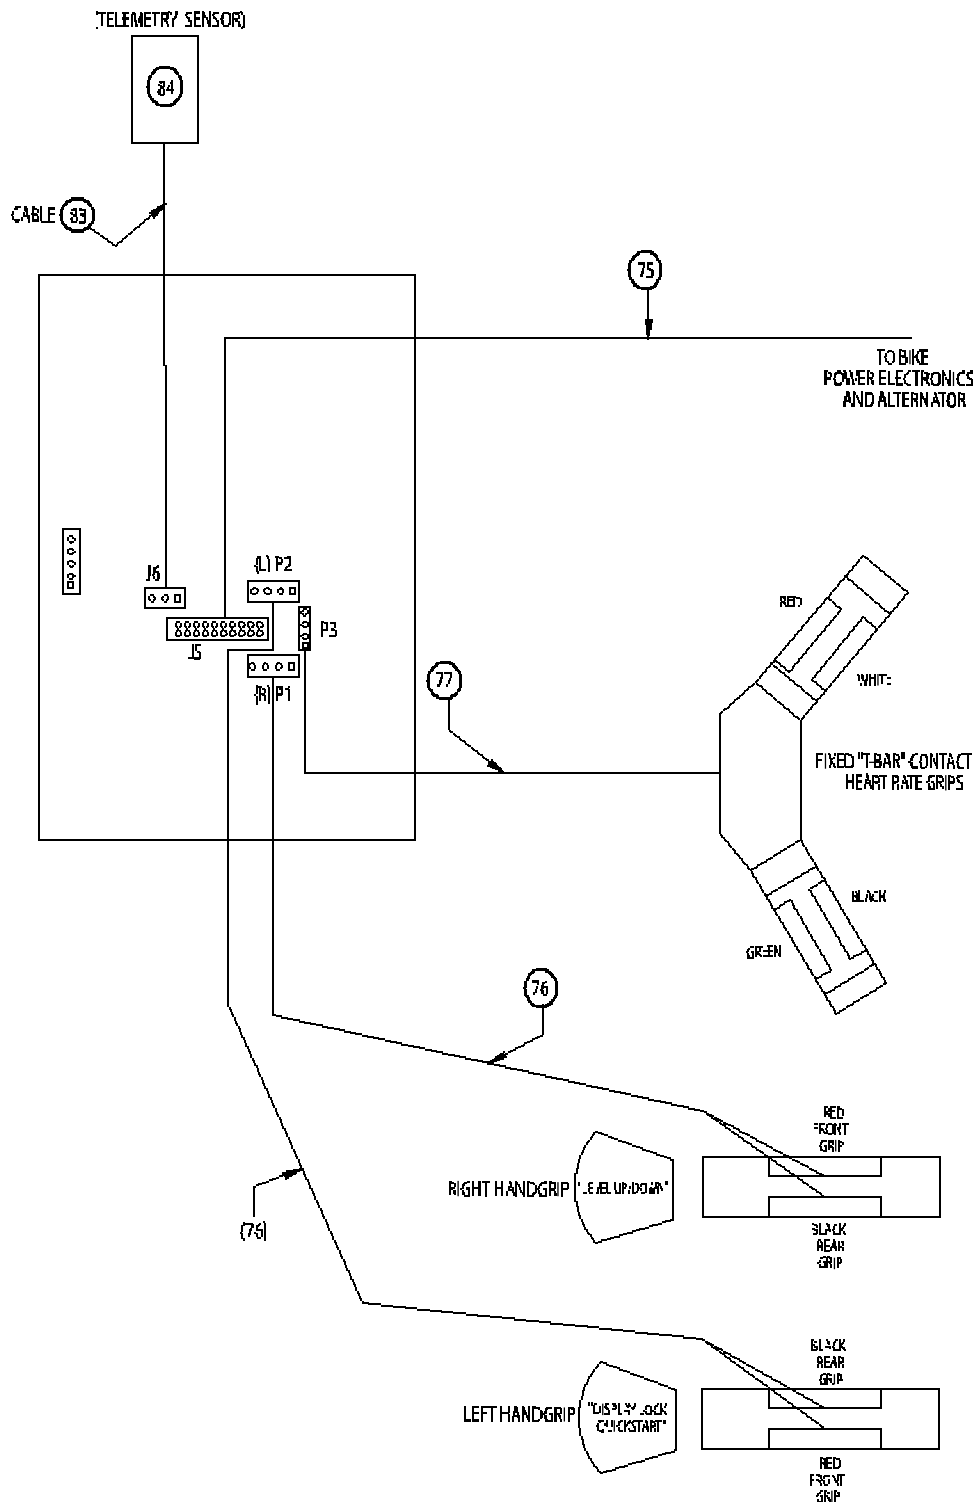



POWER BOARD CONNECTIONS

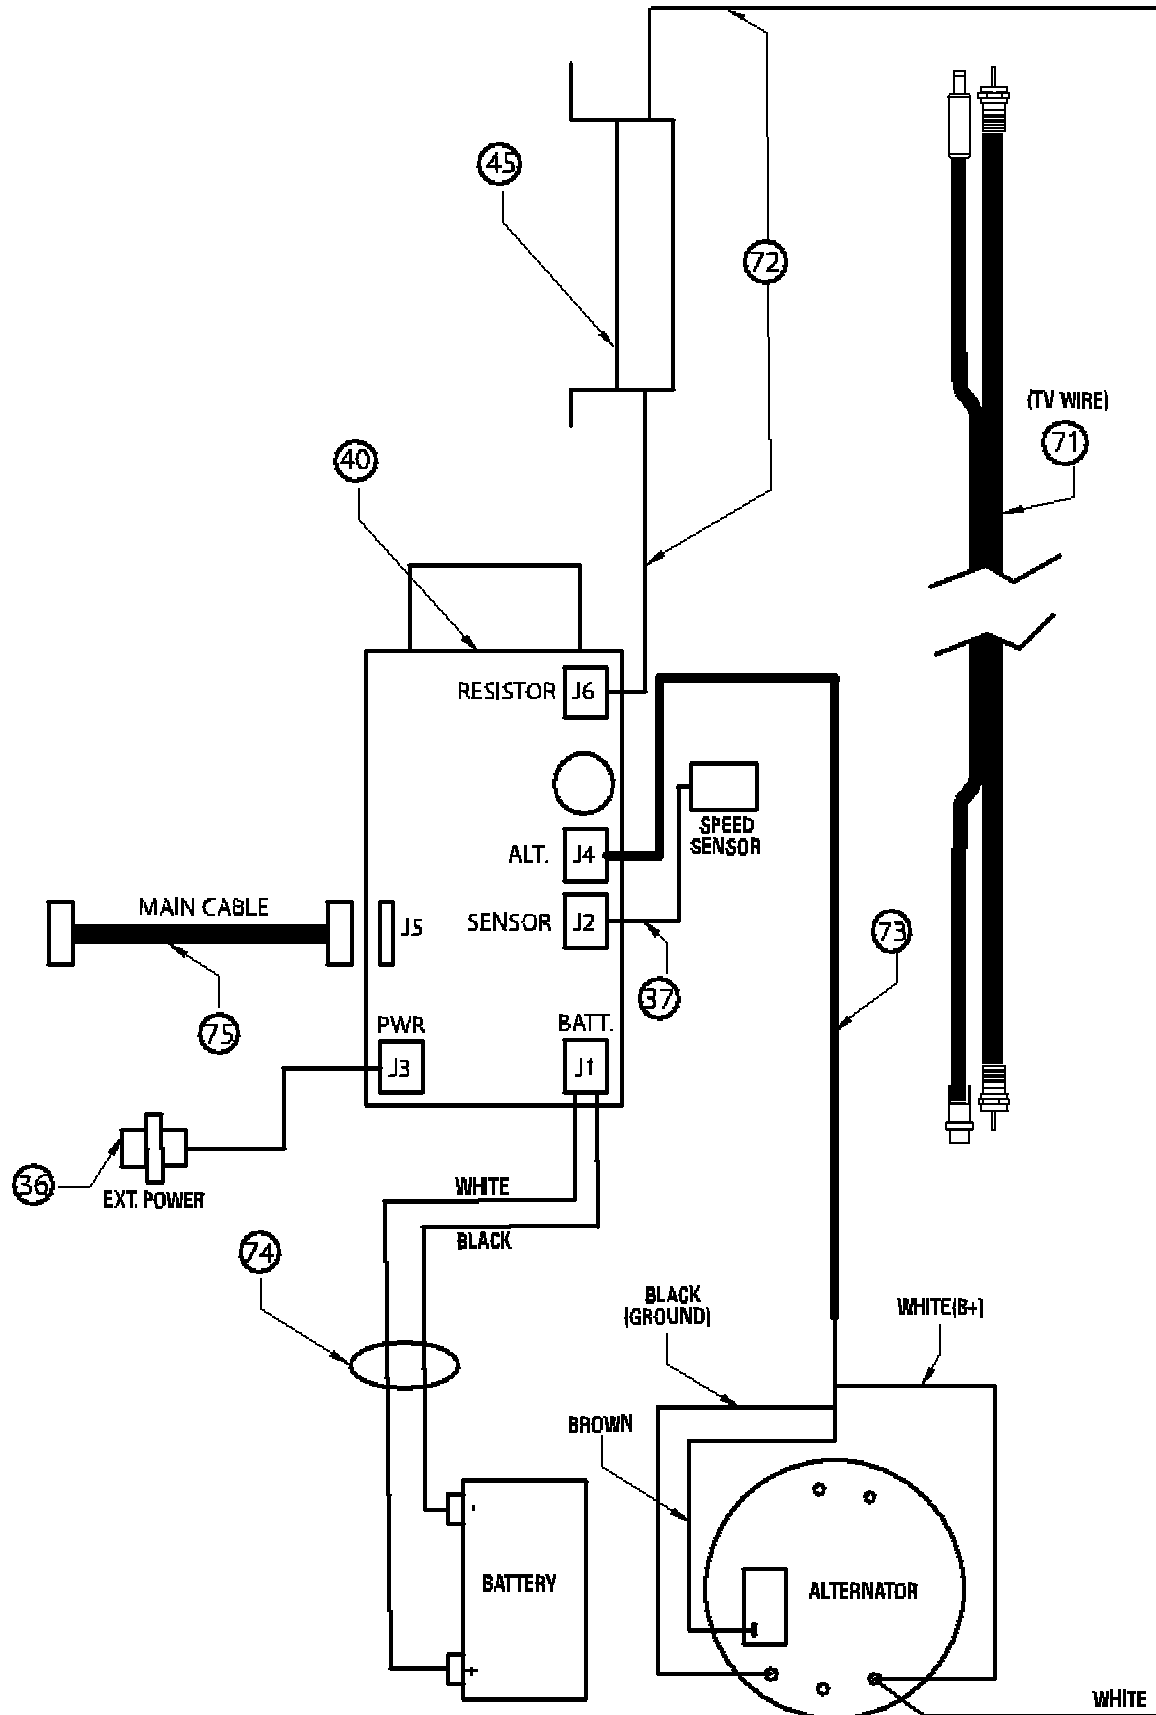


CONSOLE ASSEMBLY U916

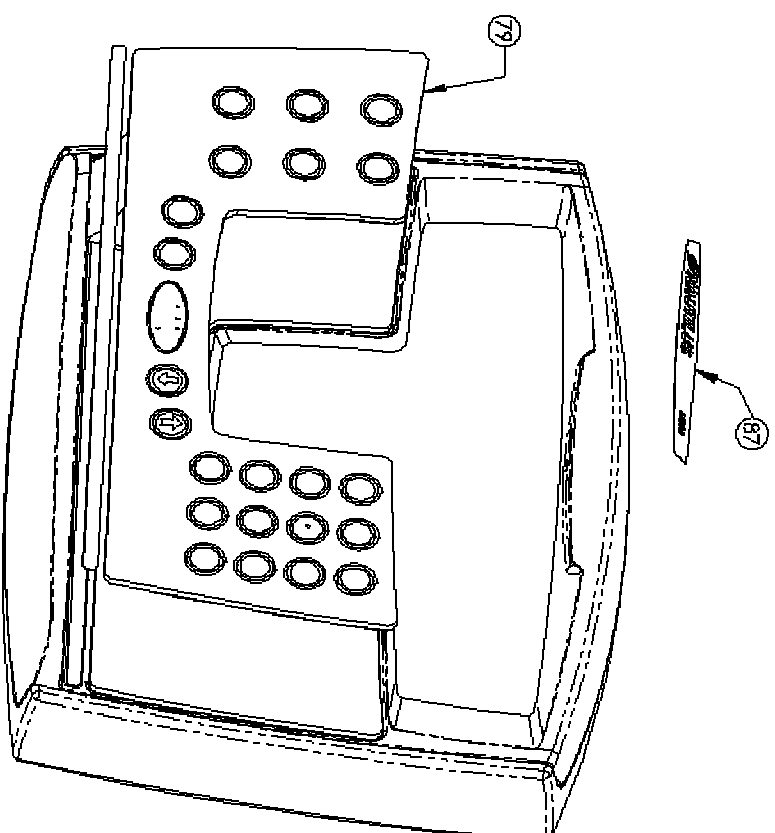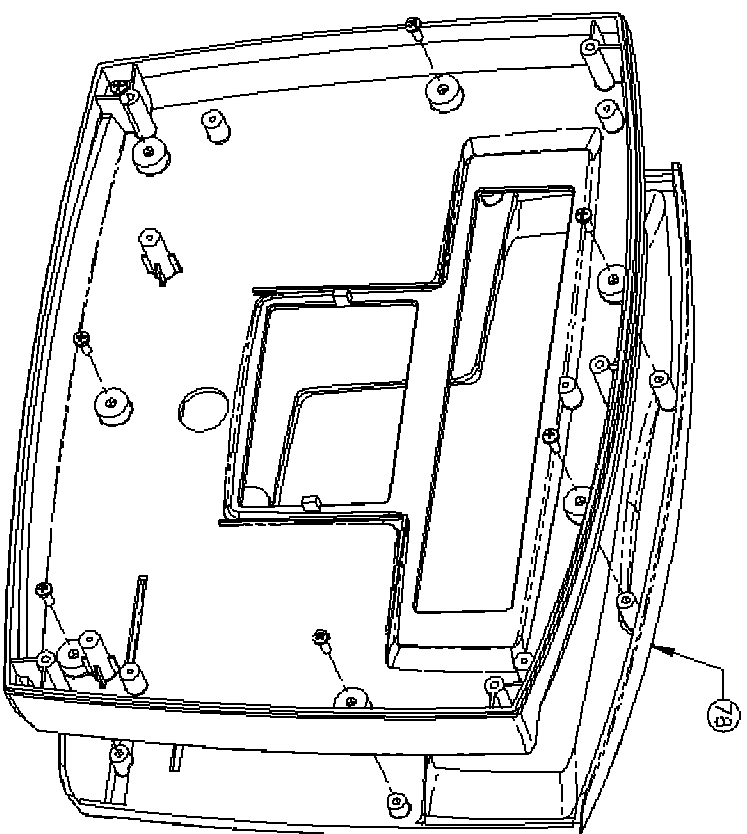

CONSOLE ASSEMBLY U916

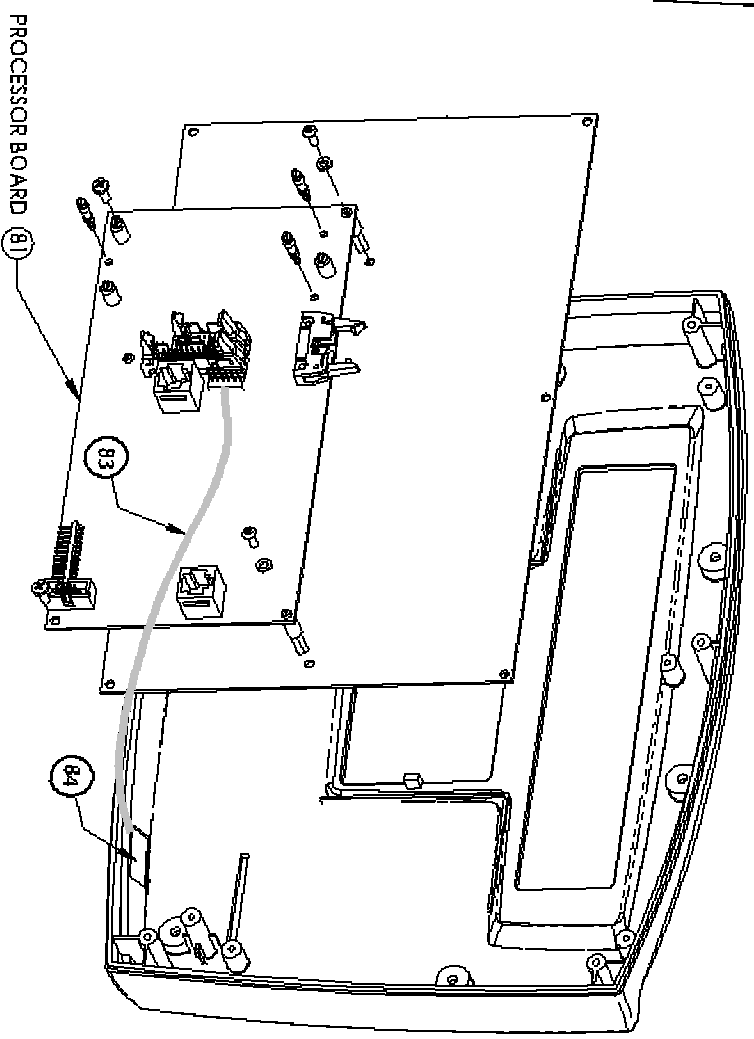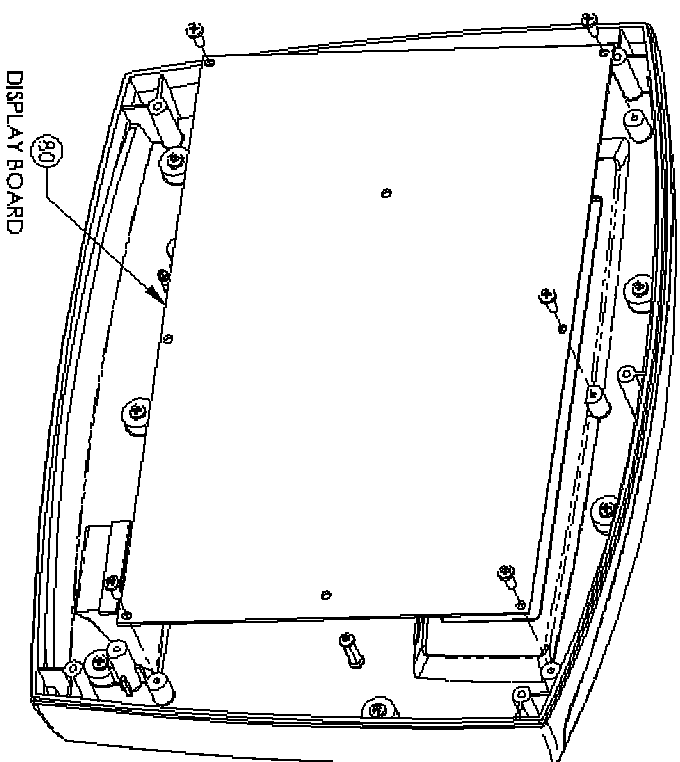

CONSOLE ASSEMBLY U916

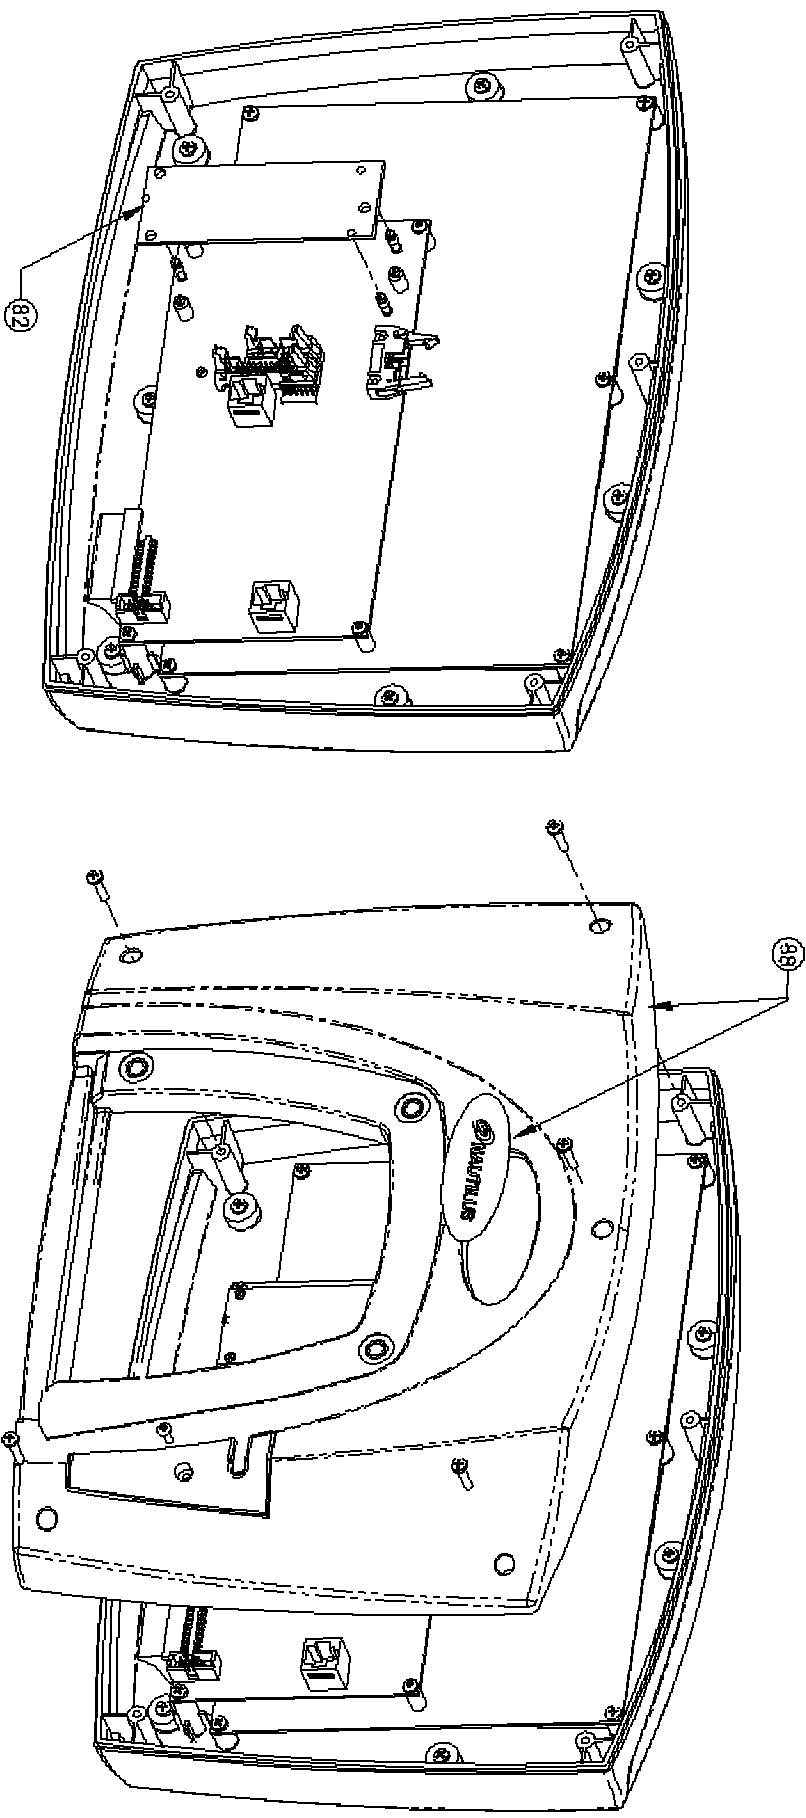

U916, UPRIGHT BIKE, WBOM, DOMESTIC SKU#380000

REF. NO:	PART NO.	DESCRIPTION
1	001-0343	(CS) Assy, Frame, U916
2	SM40694	BRNG, Ball, 25mmx47mmx12mm
3	SM17692	SNAP RING, EXTERNAL, 25MM DIA.
4	000-6229	PULLEY, 8M INTERMEDIATE 22T
5	902-4725	SCW-SHCS M8-1.25 x 20 G2 BLKZ
6	902-6024	WSH-FLAT M8 WIDE BLKZ
7	SM22077	Nut, Hex, .375
8	SM23729	Washer, 3/8 Split Lock Zinc PL
9	SM22030	Washer, 3/8 USS Flat - Zinc
10	SM22191	WASHER, SHOULDER, .38 I.D.
11	000-6240	Assembly, Alternator/Sensor clamp
12	902-0401	HHCS 0375-16 x 2.25
13	SM22165	SCREW, .312-18X1.00, HEX HD CAP
14	SM22070	Washer, 5/16 Med Lock
15	SM22128	WASHER, STEP SHAFT 5/16 FLAT
16	000-6432	BELT, ALTERNATOR, U/R916
17	SM002-0636	Assy, Intermid Hub, W/shaft, U/R916
18	000-6214	INTERMEDIATE pulley
19	SM002-0637	HW, Mntg, Intermid Pulley, U/R916
20	SM21778	NUT, FLANGE, .635 UNF 18, ALT/FLY
21	000-6238	Flywheel, U/R916
22	SM22517	DISK, SPEED SENSOR
23	001-0342	(CS) Kit, Pedals, LH/RH, U/R916
24	001-0391	Right Crank Arm, U/R916
25	001-6365	DISC CRANK
26	000-6248	PULLEY, 112 TOOTH, 8M
27	000-6232	Belt Tensioner
29	SM002-0638	HW, Mntg, Belt Tensioner, U/R916
30	000-6324	Left Crank Arm
31	902-4707	SCW-SHCS M6-1.0 x 10 G2 BLKZ
32	000-6244	ISIS BB, 73 x 128mm
33	000-6291	BELT JASON 1120-8MT-16
34	SM002-0639	HW, Mntg, Pulley 112 Tooth, U/R916
35	SM17787	CONNECTOR, RF, 3mm, F
36	SM13587	Assembly, Cable, External Power
37	SM21445	ASSY, SPEED SENSOR, CLIM.SYS, CL
38	002-0356	SCREW, 6-32 X 1/2, PHIL HD
39	SM002-0640	HW, Mntg, Power Board, U/R916
40	SM27451	Assembly, PCBA, Power Control
41	SM14123	5100 Battery kit (includes Battery, Loop & Hook Velcro, and Tyrap)
42	SM22134	Screw, 8-32 NC X 3/8 Phillips
43	902-5864	SCREW, PHP, M4-0.7X12 SS
44	SM13580	Washer, #8 Sae Flat
45	000-6217	POWER RESISTOR
46	SM22110	Nut, 8-32 NC Hex Mach,
47	SM22109	Washer, #8 Int, Tooth Lock
48	000-6297	SEAT POST SLEEVE

U916, UPRIGHT BIKE, WBOM, DOMESTIC SKU#380000

REF. NO:	PART NO.	DESCRIPTION
49	000-6255	SEAT ADJUSTMENT TEETH
50	000-6269	ASSEMBLY, SEAT POST
51	000-6264	SEAT, MED WIDTH
52	001-0349	KIT, CHR,RH UPPER HANDLE, U/R916 "LEVEL UP & LEVEL DOWN"
53	001-0348	KIT, CHR,LH UPPER HANDLE, U/R916 "DISPLAY LOCK & QUICK START"
54	001-0459	Assy, U9, Handlebar
55	001-6341	ASSYEMBLY,CHR,NON ROC
56	902-5681	SCW-SHCS, M8-1.25 X 25 SS
57	000-6221	ASSEMBLY,MAST
58	SM002-0641	HW,MNTG.MAST TO LWR BODY,U/R916
59	SM40670	SCREW,1/4-20X.75,PAN HD,W/LOCK
60	SM41700	Assembly, Console, U916
61	000-6260	Shroud, Mast, Plastic, Right
62	001-0341	(CS) Assy, Side Cover, RH, U916
63	901-5493	PHILLIPS 10-32 x .75
64	000-6257	INLET COVER
65	001-0340	(CS) ASSY,SIDE COVER,LH,U916
66	000-6491	BADGE,3",COMMERCIAL.NAUTILUS
67	000-6259	Shroud, Mast, Plastic, Left
68	001-0424	WATER BOTTLE HOLDER
69	003-3811	KIT,WHEELS,TRANSPORT,U/R/SC916
70	SM17686	STABILIZER FOOT
71	000-6490	Cable, Coaxial, TV/Power
72	002-9071	Assembly, Cable, Load Resistor
73	002-9070	Assembly, Cable, Alternator
74	SM25465	Assembly, Cable, Battery
75	SM25473	Assembly, Cable, Console Interface
76	001-5378	Assembly, Cable, Contact Heart Rate
77	SM40679	Assembly, Cable, T-Bar Grip
78	SM40803	LENS,C51 CONSOLE
79	SM40468	KEYPANEL,CONSOLE
80	SM40826	PCB ASSY, C51 LCD DISPLAY
81	SM40820	PCBA ASSY
82	SM27767	IC, CONTACT HR W/MOUNT HEADER
83	SM41702	Assembly, Cable, Telemetry Heart Rate
84	SM41187	Assembly, PCBA, Heart Rate telemetry
85	002-0631	WOODRUFF KEY,6mm x 6mm x 20mm
86	SM27592	WASHER,M8,SPLIT LOCK
87	SM41701	DECAL,CONSOLE TOP,U916
88	003-3688	(CS)ASSY,REAR HOUSING,C51

PARTS NOT SHOWN ON DRAWING

REF. NO:	PART NO.	DESCRIPTION
Not shown	002-0677	POWER SUPPLY,9VDC,1.5A
Not shown	001-6882	U/R916 Owner's Manual
Not shown	001-6883	U916 Assembly Manual
Not shown	001-6884	U/R916 Service Manual
Not shown	001-6992	CD, Owners manual
Not shown	002-0523	DECAL,SEAT POST,U916