

Seat Wheel

Tools Required


5/32" hex key
7/16" socket and ratchet
Torque wrench

**CAUTION**

To avoid injury, and to ensure safe operation of this product, fasteners must be tightened to the proper torque.

1. Remove seat assembly. See *Seat Assembly Removal* instructions.

2. Remove wheel(s).

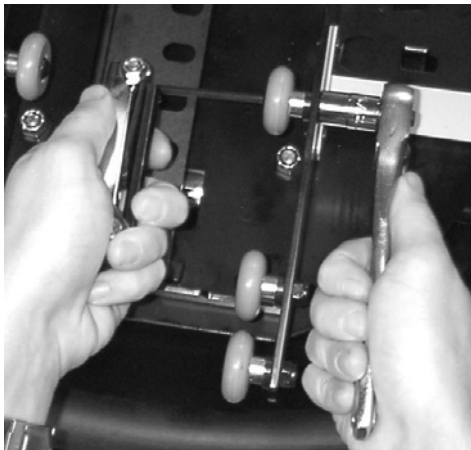

3. Install new wheel(s) and tighten bolts to 80 in-lbs.

No photo.

Torque Setting:

80 inch-lbs

NOTE: For units with S/N $\leq$ 420357, discard the washer between the seat wheel and the seat channel. New seat wheels do not require the washer.