


PROII Side Cover Removal

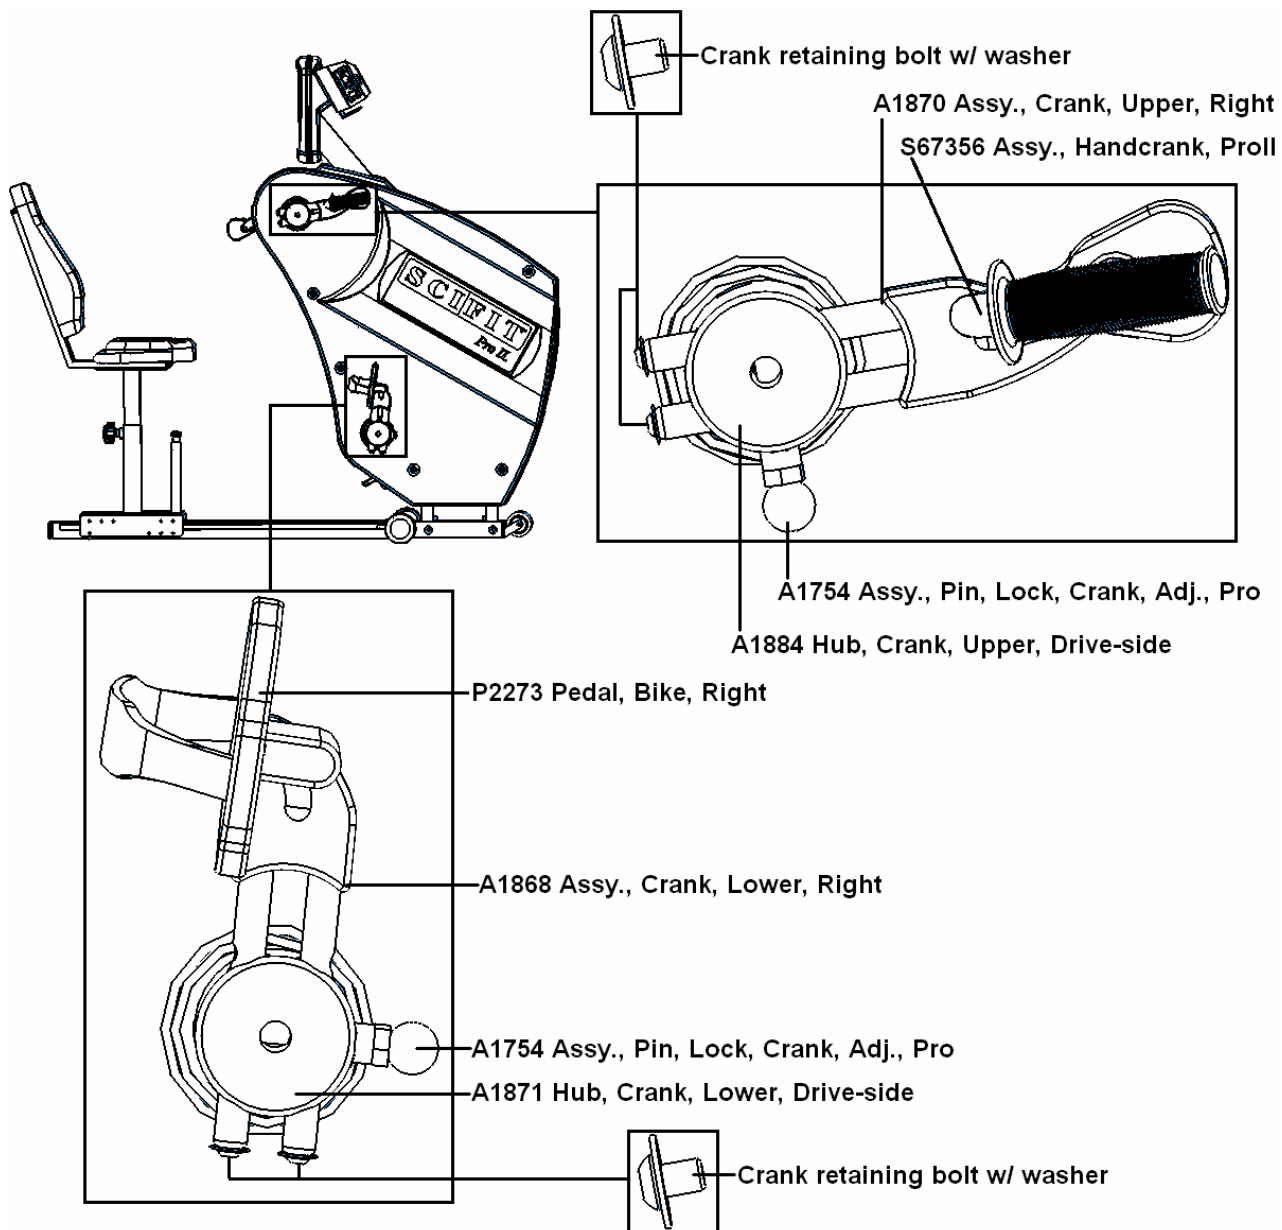

1. Remove all adjustable crank assemblies and locking pins using the Adjustable Crank Locking Pin Removal / Replacement procedure.
2. Using a Philips screwdriver, remove the cover screws.
3. Remove the side cover (P1860 or P1861) from the unit.