


PROII Crank / Right Side Cover Removal

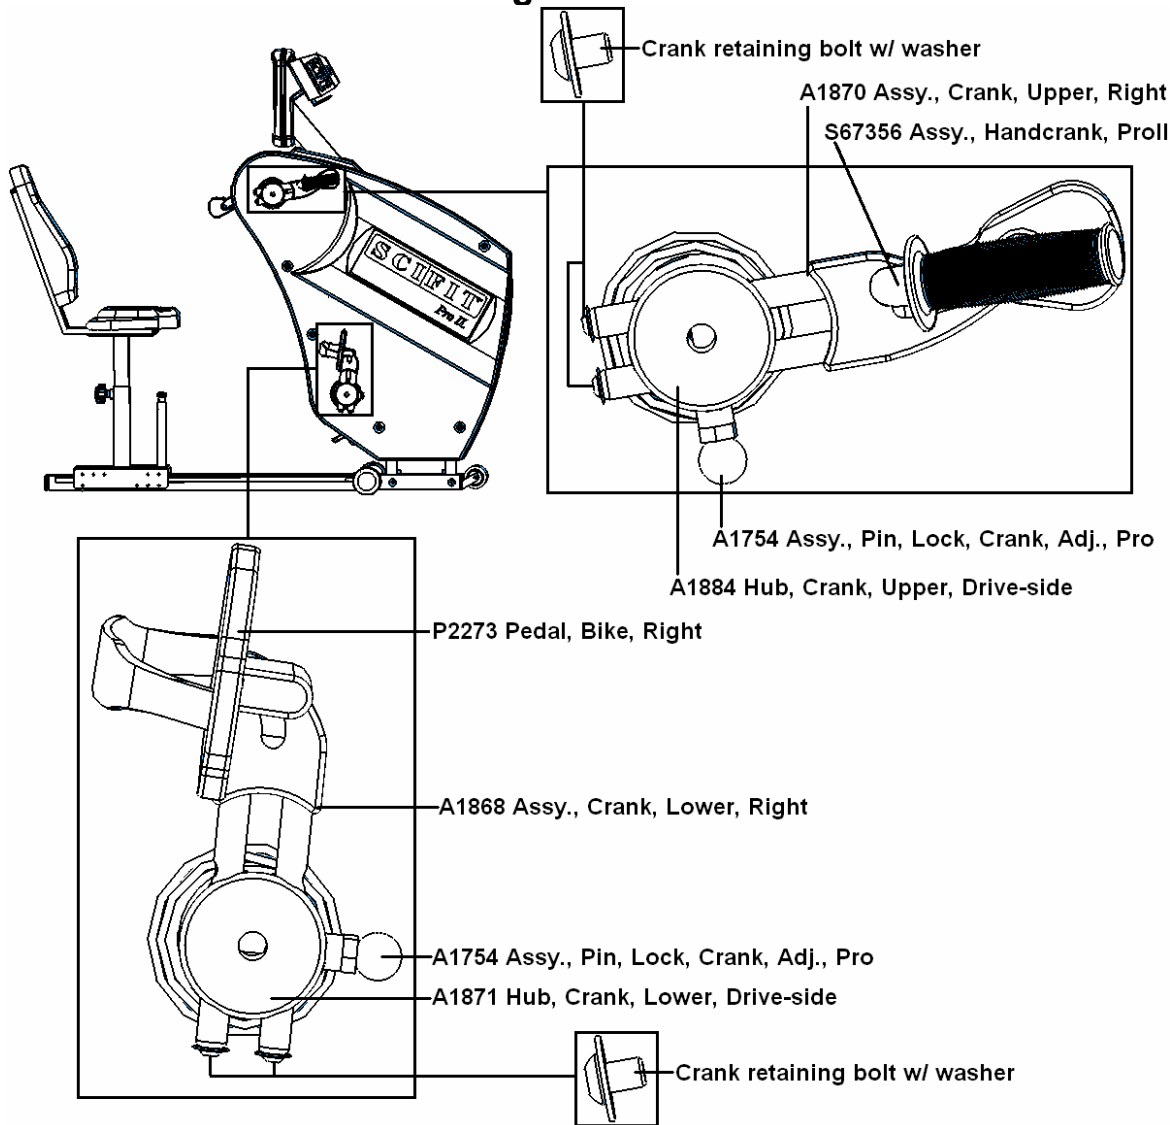

1. Remove crank retaining bolts and washers, using a 5/32" Allen wrench.
2. On the lower right side crank hub assembly (A1871), pull the black knob on the popper pin assembly (A1754) out and slide the crank assembly (A1868) out.
3. On the upper right side crank hub assembly (A1884), pull the black knob on the popper pin assembly and slide the crank assembly (A1870) out.
4. Remove the popper pin assembly by turning it counterclockwise with a crescent wrench.
5. Remove the six (6) cover screws and washers holding the right side cover in place, using a Philips screwdriver.
6. Place new cover in place.
7. Reinsert the six (6) cover screws and washers.
8. Reinstall popper pins.
9. Pull each popper pin knob and reinsert each crank assembly.