

	Troubleshooting Guide: “No Console” Error	
Prepared by: Regina Templeton	Date Prepared: 3/2/2015	Models Affected: AFG 7.3AIC, Horizon Elite IC7

PROBLEM

Improper battery installation in the console may cause a “No Console” error on the AFG 7.3AIC and Horizon Elite IC7 models. If the battery is placed on top of the positive (+) pins in the battery compartment, the console does not operate.

REQUIRED TOOLS

Screwdriver


SOLUTION

The console battery compartment is redesigned. The production serial number breaks are shown below:

- AFG 7.3AIC: FCO036-14100001
- Horizon Elite IC7: FCO35-14100001



Old

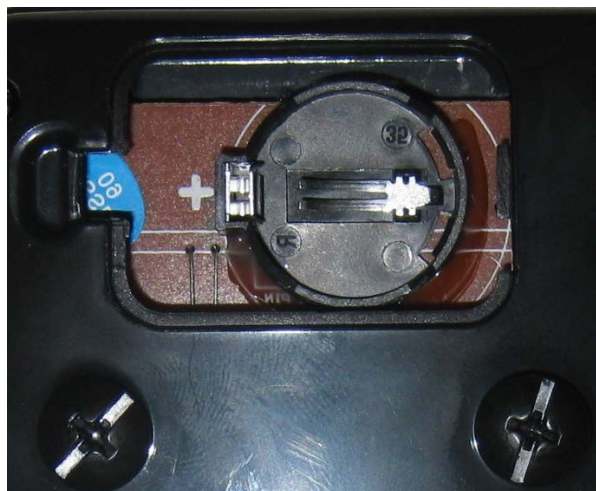


New

The negative (-) side of the battery must press on the negative (-) pins, and the positive (+) pins must press on the positive (+) side of the battery. If the “No Console” error shows, follow these steps to align the pins:

1. Use the screwdriver to remove the cover from the battery compartment on the back of the console.

2. Bend the positive (+) pins up on the right side (beside the hole for the compartment cover screw), as shown below.

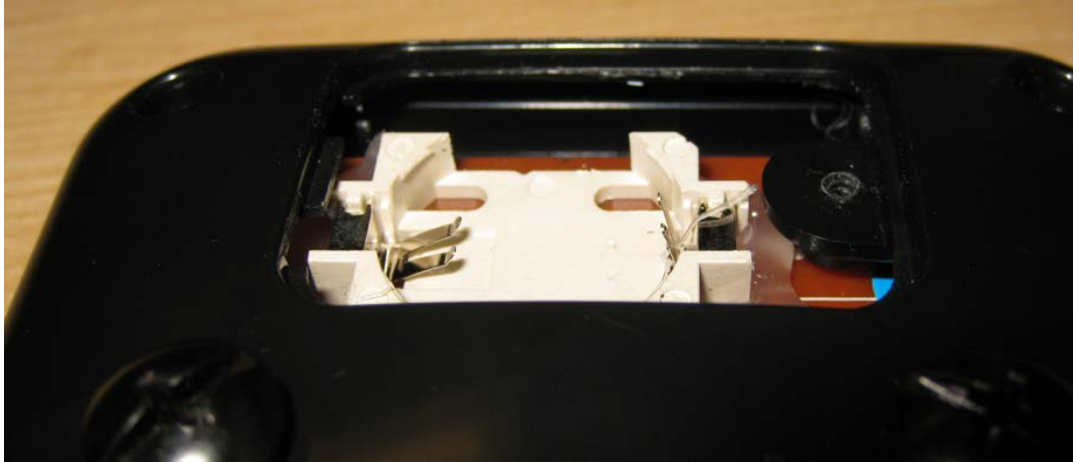

3. Insert the battery at an angle with the positive (+) side facing up. Make sure to keep the positive (+) pins upright as shown below.



4. Replace the battery compartment cover.