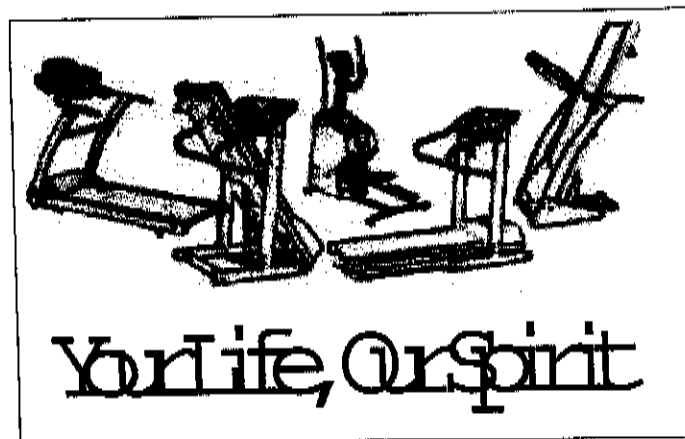


SOLE F63 CALIBRATION

Turn on power switch

Remove Tether cord Hold the Start and Fast switches down

Replace the Tether cord. The display will go into a test mode checking all the lights on the LCD screen.

The Display should read "Factory Setting" Press Enter

Display will read "Units" (This should be English if not press UP to change) Press Enter

Display should read "Adjust Wheel Size" (this should be 2.30 if not press UP or Down to change)

Press Enter

Display should read "Adjust Min Spd" (should be .5 if not use Fast or Slow to change) Press Enter

Display should read "Adjust Max Spd" (should be 10 if not use Fast or Slow to change)

Press Enter

Display should read "Adjust Max Elevation" (should be 15 if not use UP or Down to change)

Press Enter

Display should read "Grade Return ON" (if this reads Grade return off use up/down to change)

Press Start

Machine will now go into an auto calibration process. First the speed will calibrate and then the Incline.

The display will now reset and the machine is ready to use.



SPIRIT Manufacturing, Inc.

2601 Commerce Drive

P.O. Box 2037 - Jonesboro, AR 72402

Phone: 870-935-1107

Fax: 870-935-7611