



SERVICE

XT10 Calibration

1. Remove tether cord. Press and hold the START and FAST buttons and put the tether cord back on. Display will go into a test mode then FACTORY SETTING will scroll across the screen. Press ENTER.
2. "POWER ON" will scroll across the screen. Use UP or DOWN buttons to change. (ON) Press ENTER.
3. "UNITS ENGLISH" will scroll across the screen. Use UP or DOWN buttons to change from English to Metric. Press ENTER.
4. "ADJUST WHEEL SIZE" will scroll across the screen. A number will be in the time window. Use UP or DOWN buttons to change. (2.50) Press ENTER.
5. "ADJUST MIN SPEED" will scroll across the screen. A number will be in the time window. Use UP or DOWN buttons to change. (0.5) Press ENTER.
6. "ADJUST MAX SPEED" will scroll across the screen. A number will be in the time window. Use UP or DOWN buttons to change. (12.0) Press ENTER.
7. "ADJUST MAX ELEVATION" will scroll across the screen. A number will be in the time window. Use UP or DOWN buttons to change. (15)

WARNING - DO NOT STAND ON BELT FOR NEXT STEP

8. Press START. Unit will now auto-calibrate speed then incline. Unit will reset when it completes calibration.