

Sportcraft tx335, tx5.0 Treadmill Error 7

Error code seven is due to the console getting locked.

1. Unplug the treadmill for five min and then re-plug the treadmill.
2. Now push the ON/OFF switch to ON and insert the safety key.
3. Now press the MODE and STOP button simultaneously.
4. Without releasing the buttons take out the safety key and insert it again.
5. Now you should hear a beep and the display will come on.
6. Release MODE & STOP and now press the Speed increment (+) button
7. Treadmill belt should begin moving.
8. Done