

Embedded Screen Continuously Beeps on Boot-Up

Embedded Touch Screens (Version 1)

Symptom

When starting up a product with an Embedded Touch Screen, the screen will continuously beep and will not boot up.

Possible Causes

- The DOM memory card is loose.
- The screen is faulty.

Solution

1. Remove the head from the unit and remove sheet metal from the back of the screen and locate the DOM card (Fig. 1 and 2).

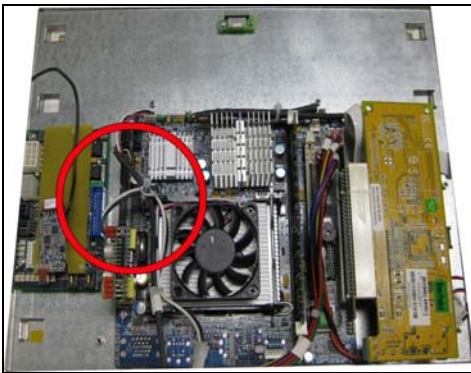


Fig. 1



Fig. 2

2. Remove the DOM card from the slot completely (Fig. 3) and reseat it back into the motherboard (Fig. 4).

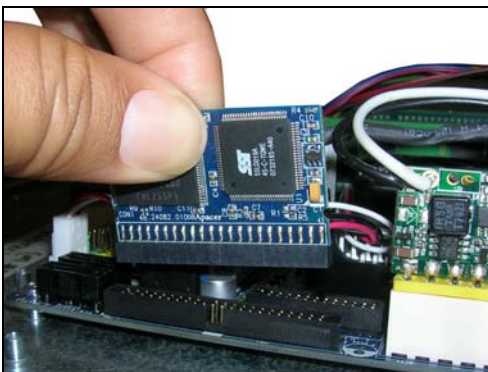


Fig. 3

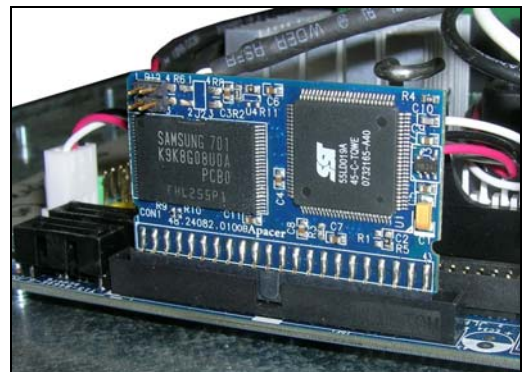


Fig. 4

3. Reassembly the screen and test. If the screen continues to beep on boot up, replace the screen.