

Code: NO STO Flowchart

Definition: "NO STOP KEY"

Possible Cause: Disconnected or shorted stop switch.

Note 1: Try pushing the emergency stop switch on & off. If switch appears to stick, replace stop switch assembly.

Note 2: Press and hold the "0", "2" & "START" keys down at the same time, then release the "1" key. The display will read: MAINTENANCE. Press and release the 5 key.

