

DIAGNOSTICS (Available only in SS90 Machines)

To enter diagnostic mode, press and hold the **FAST** and **SLOW** buttons while pushing in the safety key.

The control panel will show “Diagnostics”.

Press the **UP** button: Total Hours (in whole hours)

Press the **UP** button: Distance (in miles, two digits past decimal point)

Press the **UP** button: Average Speed (in mph)

Error List (This is an error log, but just a list of errors possible on the unit.)

S1: Lube

S2: Clean

S3: Motor

S4: Sensor

E1: Minimum

E2: Overspeed

E2: Cal

E3: EPROM

Remove Safety Key to exit Diagnostics