

Computer display "0" blinking and button doesn't work-2

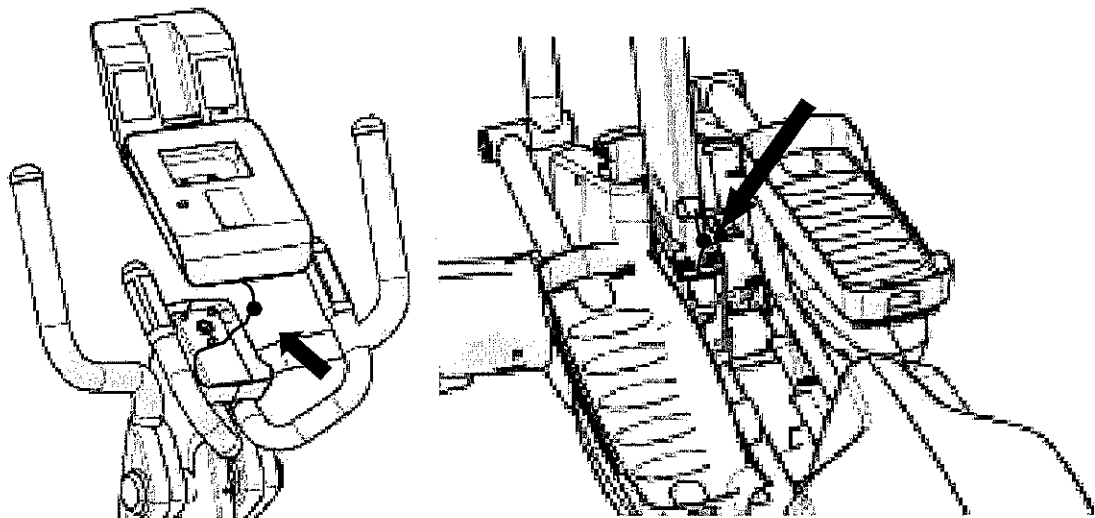


FIG. 1 : Check assembly console and center upright tube bottom 2 piece 8pins connector.

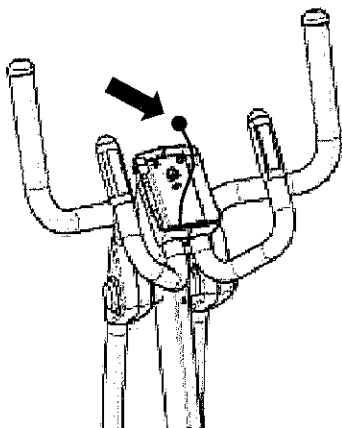


FIG. 2: Pull out 8pins wire from center upright right tube then check it whole wire.

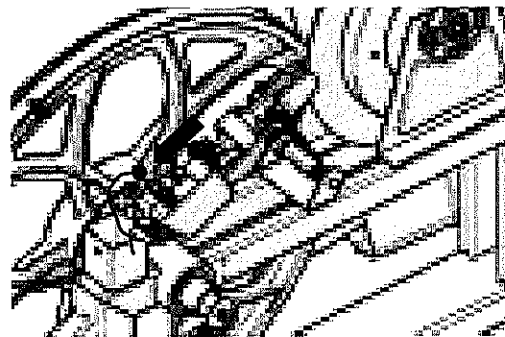


FIG. 3 : Follow open main cover instruction to move out both side covers then pull out and check 8pins wire from resistance motor to assembly center upright right tube frame.

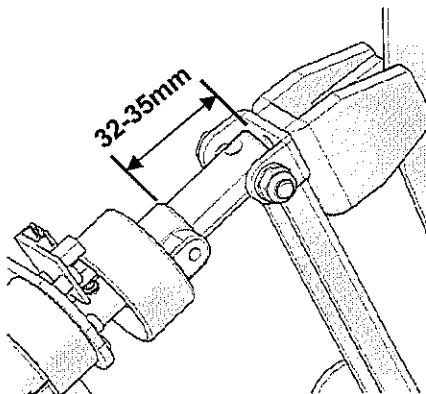


FIG. 4: Check resistance motor plastic limit ring distance position at 32-35mm

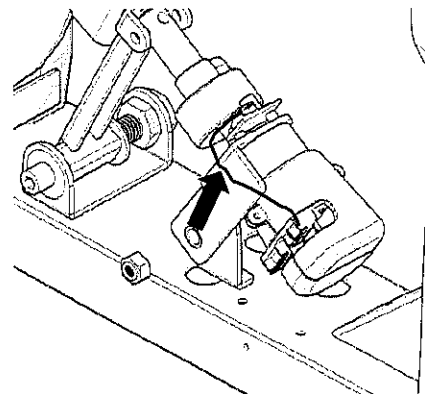


FIG. 5: Check resistance motor bottom PC board to limit sensor 3pins wire both side plug well.

Computer display "0" blinking and button doesn't work-3

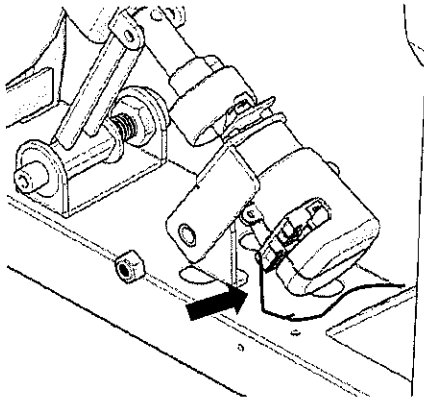


FIG. 6: Check resistance motor bottom PC board 6pins plug well.

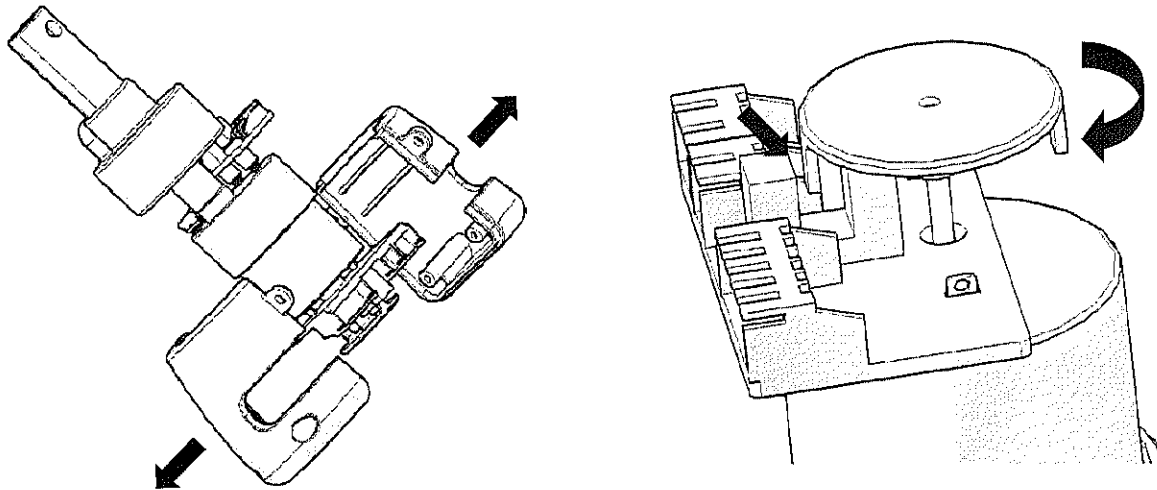


FIG. 7: Use Phillip screwdriver to open resistance motor set both covers then use finger to turning plastic optical disk check this disk turning well.