

Removing the shrouds:

1. Open access panels.
2. Remove pedal arms from crank arms.
3. Remove three interior screws (471) at top and rear of shroud
4. Remove exterior screws (409) near power switch and front of shrouds.
5. Remove screws (510) from center plastic covers.
6. Remove one screw from the rear vent.
7. Separate shrouds and pull to the rear.



