

The black arrow in the picture shows the set screw that needs to be loosened so the black calibration collar can be adjusted. This is not necessary in all cases, but it may be helpful to remove the bolt holding the drive shaft to be able to make an accurate adjustment.

If you do not have a ruler that measures in mm, the measurement in inches would be 1.3-1.4 inches.

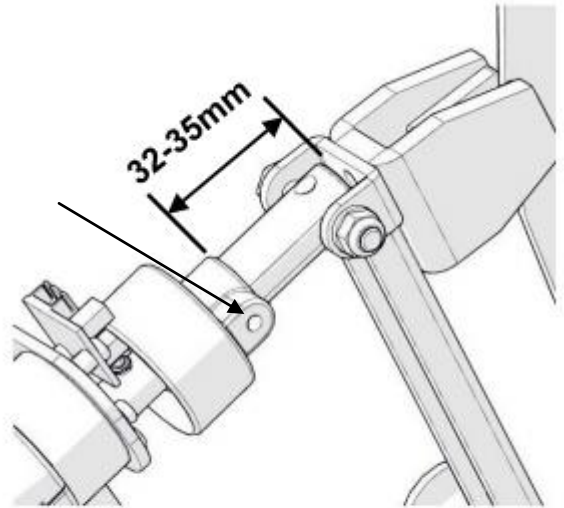


FIG. 4: Check resistance motor plastic limit ring distance position at 32-35mm