

How to Re-Configure a Stairmaster

The console of the Stairmaster can be used on many different types of equipment. It can be used on Nautilus as well as Stairmaster. The console **MUST** be configured to the type of equipment it is being used on.

To configure the console

Press Level Up

Press 8

Press Enter

The console should display configure

Press Level Up until it displays "Change Machine"

Press Enter

Scroll Using Level Up until you have the desired machine

Press Enter