

Stuck Key Error Codes

If your console displays one of the error codes from the table below when the treadmill is turned on, it means there is a stuck key. Replace the appropriate overlay per the code shown on your console. (These codes will display after cycling power [all models] or on the home screen [T6 only]—they do not display in response to a key getting stuck during a workout.)

	Left/Incline Quick Keys
	Right/Speed Quick Keys
	Main Console
	Left Handlebar
	Right Handlebar

Example: Error code C1D5 in Table 1 means Speed Key 8 is stuck. Replace the speed quick key keypad membrane and manipulate membrane to resolve the issue.

The codes in **Table 1** are used on these models only, and the unit must be at the noted software version or higher:

- **7.4AT-04: V4.006**
- **7.8AT-04: V3.002**

Table 1	D1	D2	D3	D4	D5	D6	D7	D8
C1	Incline 0	Incline 3	X	Fan	Speed 8	Speed 2	X	X
C2	Incline 9	Incline 15	X	X	Speed 7	Speed 4	X	X
C3	Incline 7	Incline 8	Incline 10	Incline 12	Speed 10	Speed 6	Speed 1	Speed 9
C4	Incline 2	Incline 4	Incline 5	Incline 6	Speed 12	Speed 5	Speed 3	Speed 11
C5	Music Next	Music Prev	X	Bluetooth	Music Play/Pause	Music Stop	X	X
C6	X	X	START	STOP	Select	X	X	X
C7	X	X	X	X	X	Left Handle	Right Handle	X

The codes in **Table 2** are used on this model only, and the unit must be at the noted software version or higher:

- **T101-07: S4.09**

Table 2	D1	D2	D3	D4	D5	D6	D7	D8
C1	Incline 1	Incline 2	X	X	Speed 3	Speed 6	Speed 4	X
C2	Incline 0	X	Incline 4	Incline 10	Speed 2	Speed 5	X	Speed 10
C3	X	Incline 6	Incline 3	Incline 8	X	X	Speed 7	Speed 8
C4	Start	Incline Up	Change Display	X	X	X	X	X
C5	Incline Down	X	Enter	X	X	X	X	X
C6	X	X	Fan	Speed Down	X	X	X	X
C7	X	Speed Up	X	Stop	X	X	X	X
C8	X	X	X	X	X	X	X	X

Stuck Key Error Codes

	Left/Incline Quick Keys
	Right/Speed Quick Keys
	Main Console
	Left Handlebar
	Right Handlebar

The codes in **Table 3** are used on this model only, and the unit must be at the noted software version or higher:

➤ **7.0AT-04 (V5.004) & 7.0AT-05**

Table 3	D1	D2	D3	D4	D5	D6	D7	D8
C1	Incline 4	Incline 2	Incline 3	Fan	Left Handle	X	X	X
C2	Incline 6	Incline 0	X	Incline 5	X	X	X	X
C3	X	Incline 12	Incline 9	Incline 7	Music Stop	X	X	X
C4	Stop	Incline 15	Incline 10	Incline 8	Select	X	X	X
C5	Speed 4	Speed 2	Speed 3	Bluetooth	Music Play/Pause	X	X	X
C6	Speed 6	Speed 1	X	Speed 5	Right Handle	X	X	X
C7	Music Prev	Speed 11	Speed 9	Speed 7	X	X	X	X
C8	Music Next	Speed 12	Speed 10	Speed 8	START	X	X	X

The codes in **Table 4** are used on this model only, and the unit must be at the noted software version or higher:

➤ **T202-06: V8.002**

Table 4	D1	D2	D3	D4	D5	D6	D7	D8
C1	Incline 1	Incline 2	X	X	Speed 3	Speed 6	Speed 4	X
C2	Incline 0	X	Incline 6	Incline 12	Speed 2	Speed 5	X	Speed 12
C3	X	Incline 8	Incline 4	Incline 10	X	X	Speed 8	Speed 10
C4	Start	Incline Up	Change Display	X	X	X	X	X
C5	Incline Down	Bluetooth	Enter	X	X	X	X	X
C6	X	X	Fan	Speed Down	X	X	X	X
C7	X	Speed Up	X	Stop	X	X	X	X
C8	X	X	X	X	X	X	X	X

Stuck Key Error Codes

	Left/Incline Quick Keys
	Right/Speed Quick Keys
	Main Console (Center Keys)
	Left Handlebar
	Right Handlebar
	Keys of Console Base Board

The codes in **Table 5** are used on this model only:

➤ **BFX T9**

Table 5	D1	D2	D3	D4	D5	D6	D7
C1	Incline 0	Incline 5	Incline 10	Speed 1	Speed 5	Speed 10	Speed Down
C2	Incline 2	Incline 6	Incline 12	Speed 2	Speed 6	Speed 11	Speed Up
C3	Incline 3	Incline 7	Incline 15	Speed 3	Speed 7	Speed 12	Select/Enter
C4	Incline 4	Incline 8	X	Speed 4	Speed 8	X	X
C5	Fan	Change Display	X	Split	BT	START	Left Handle/Incline Scroll key
C6	Incline Down	Incline Up	Previous	Next	X	STOP	Right Handle/Speed Scroll key


The codes in **Table 6** are used on this model only:

➤ **Horizon T101-08**

Table 6	0D01	0D02	0D04	0D08
C001	Quick Incline 10	Quick Incline 4	Quick Incline 3	Quick Incline 7
C002	X	Quick Incline 2	Quick Incline 1	Quick Incline 5
C004	Quick Incline 8	Quick Incline 6	X	Quick Incline 9
C010	Start	Incline Down	X	x
C020	Stop	Fan	BT	x
C040	Change	Incline Up	Programs	x
C080	Speed Up	X	Speed Down	Stop
C200	Quick Speed 1	X	Quick Speed 6	Quick Speed 4
C400	Quick Speed 5	Quick Speed 9	Quick Speed 10	X
C800	Quick Speed 3	X	Quick Speed 8	Quick Speed 2

Stuck Key Error Codes

When a stuck key error occurs on the **BFX T6** console, text will display on the LCD display and in the Distance and Time windows as shown in the diagram below:

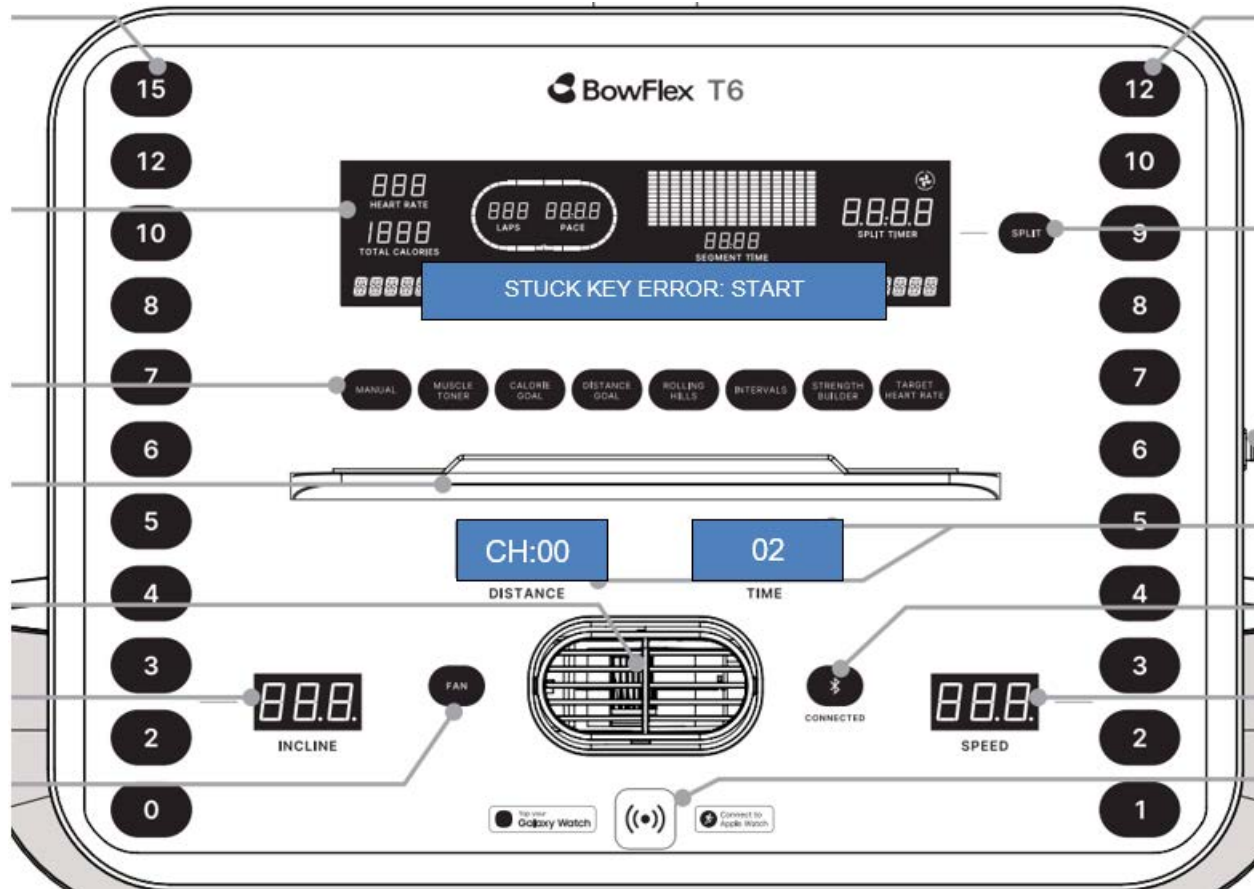

Refer to Table 7, which starts on page 5, for a full list of BFX T6 error codes.

Stuck Key Error Codes

The codes in **Table 7** are used on this model only:

➤ **BFX T6**

Stuck Key	LCD Window	Distance Window	Time Window
START	STUCK KEY ERROR: START	CH:00	2
STOP	STUCK KEY ERROR: STOP	CH:00	1
ENTER	STUCK KEY ERROR: ENTER	CH:00	0C
ROTARY_L_SET	STUCK KEY ERROR: ROTARY_L_SET	CH:00	6A
ROTARY_R_SET	STUCK KEY ERROR: ROTARY_R_SET	CH:00	6D
Quick Speed 1	STUCK KEY ERROR: QS1	CH:02	3B
Quick Speed 2	STUCK KEY ERROR: QS2	CH:01	3C
Quick Speed 3	STUCK KEY ERROR: QS3	CH:01	3D
Quick Speed 4	STUCK KEY ERROR: QS4	CH:01	3E
Quick Speed 5	STUCK KEY ERROR: QS5	CH:01	3F
Quick Speed 6	STUCK KEY ERROR: QS6	CH:01	40
Quick Speed 7	STUCK KEY ERROR: QS7	CH:01	41
Quick Speed 8	STUCK KEY ERROR: QS8	CH:01	42
Quick Speed 9	STUCK KEY ERROR: QS9	CH:01	43
Quick Speed 10	STUCK KEY ERROR: QS10	CH:01	44
Quick Speed 11	STUCK KEY ERROR: QS11	CH:02	45
Quick Incline 1	STUCK KEY ERROR: QI1	CH:01	4A

Continues on next page

Stuck Key Error Codes

Table 7 - continued

Stuck Key	LCD Window	Distance Window	Time Window
Quick Incline 2	STUCK KEY ERROR: QI2	CH:01	4B
Quick Incline 3	STUCK KEY ERROR: QI3	CH:01	4C
Quick Incline 4	STUCK KEY ERROR: QI4	CH:01	4D
Quick Incline 5	STUCK KEY ERROR: QI5	CH:01	4E
Quick Incline 6	STUCK KEY ERROR: QI6	CH:01	4F
Quick Incline 7	STUCK KEY ERROR: QI7	CH:01	50
Quick Incline 8	STUCK KEY ERROR: QI8	CH:01	51
Quick Incline 9	STUCK KEY ERROR: QI9	CH:01	52
Quick Incline 10	STUCK KEY ERROR: QI10	CH:01	53
Quick Incline 11	STUCK KEY ERROR: QI11	CH:01	54
FAN	STUCK KEY ERROR: FAN	CH:01	11
BT	STUCK KEY ERROR: BT	CH:01	14
SPLIT	STUCK KEY ERROR: SPLIT	CH:01	12
MANUAL	STUCK KEY ERROR: MANUAL	CH:01	31
MUSCLE TONER	STUCK KEY ERROR: MUSCLE TONER	CH:01	32
CALORIE GOAL	STUCK KEY ERROR: CALORIE GOAL	CH:01	33

Stuck Key Error Codes

Table 7 - continued

Stuck Key	LCD Window	Distance Window	Time Window
DISTANCE GOAL	STUCK KEY ERROR: DISTANCE GOAL	CH:01	34
ROLLING HILLS	STUCK KEY ERROR: ROLLING HILLS	CH:01	35
INTERVALS	STUCK KEY ERROR: INTERVALS	CH:01	36
STRENGTH BUILDER	STUCK KEY ERROR: STRENGTH BUILDER	CH:01	37
TARGET HEART RATE	STUCK KEY ERROR: TARGET HEART RATE	CH:01	38