


# NEW MODEL

## TO RESET TREADMILL RECALLIBRATION

1/ PRESS DOWN AND STOP TOGETHER THEN RELEASE

2/PRESS LEFT AND RIGHT TOGETHER THEN RELEASE.

THE MACHINE WILL THEN GO THROUGH A FULL SYSTEM RESET GOING THROUGH ALL FUNCTIONS AUTOMATICALLY. Once this has completed turn the treadmill off at the mains and then turn it back on and use as normal.

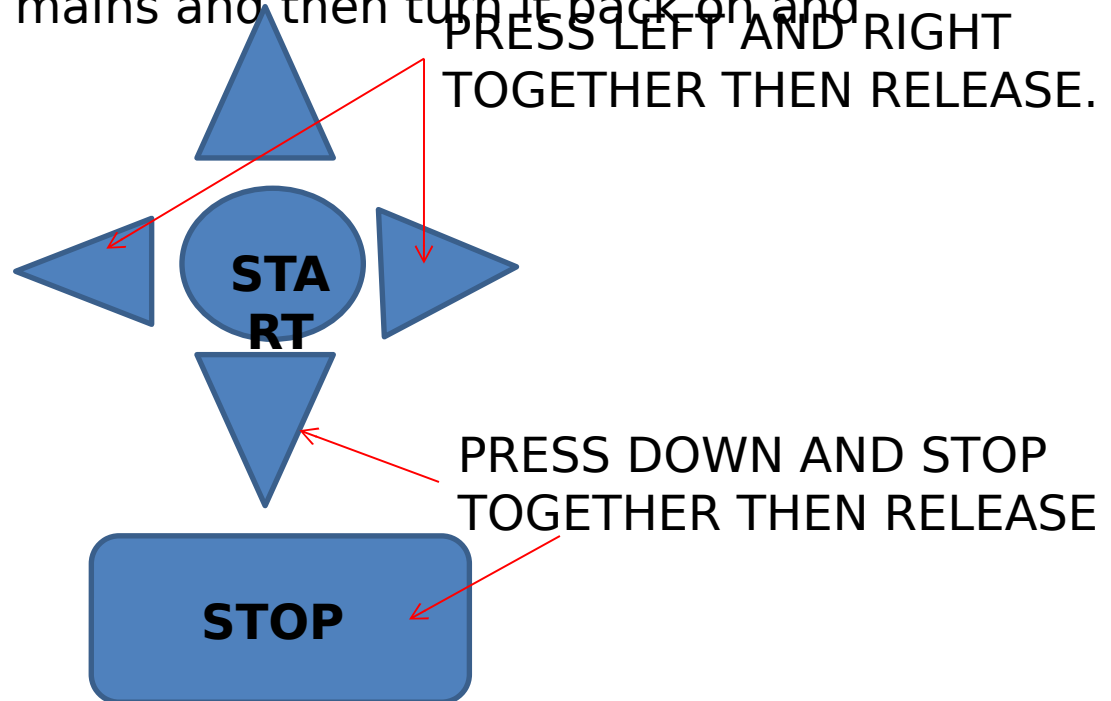

# **OLD MODEL**

## **RECALIBRATION**

1/ Press Enter + Up + Down on the incline at the same time and then release.

Machine will go through a full system reset and perform all functions Automatically.

