

			Troubleshooting Guide: Pedal Arm Alignment		
Prepared by: Kelly Neis		Date Prepared: 7/26/2017		Models Affected: Retail ellipticals	

Symptom	Possible Cause	Test Procedure	Repair
Noise externally while pedaling, rough feel while pedaling, or the pedal arm jumps off guide rail.	Improper assembly or loose assembly bolts	Verify assembly steps using the owner's guide.	Tighten all bolts used for assembly.
	Loose crank arms		Tighten crank arms.
	Alignment issues with the pedal arms due to improper welds	Disconnect appropriate link arm from the lower handlebar assembly and pedal the unit.	• If the noise ceases or pedal does not jump off guide rail: Replace the handlebar. • If there is no change: Replace link arm, pedal arm and crank.