 


Treadmill 95Ti

General Assembly

95T-0XXXX-02
S/N TTJ100000

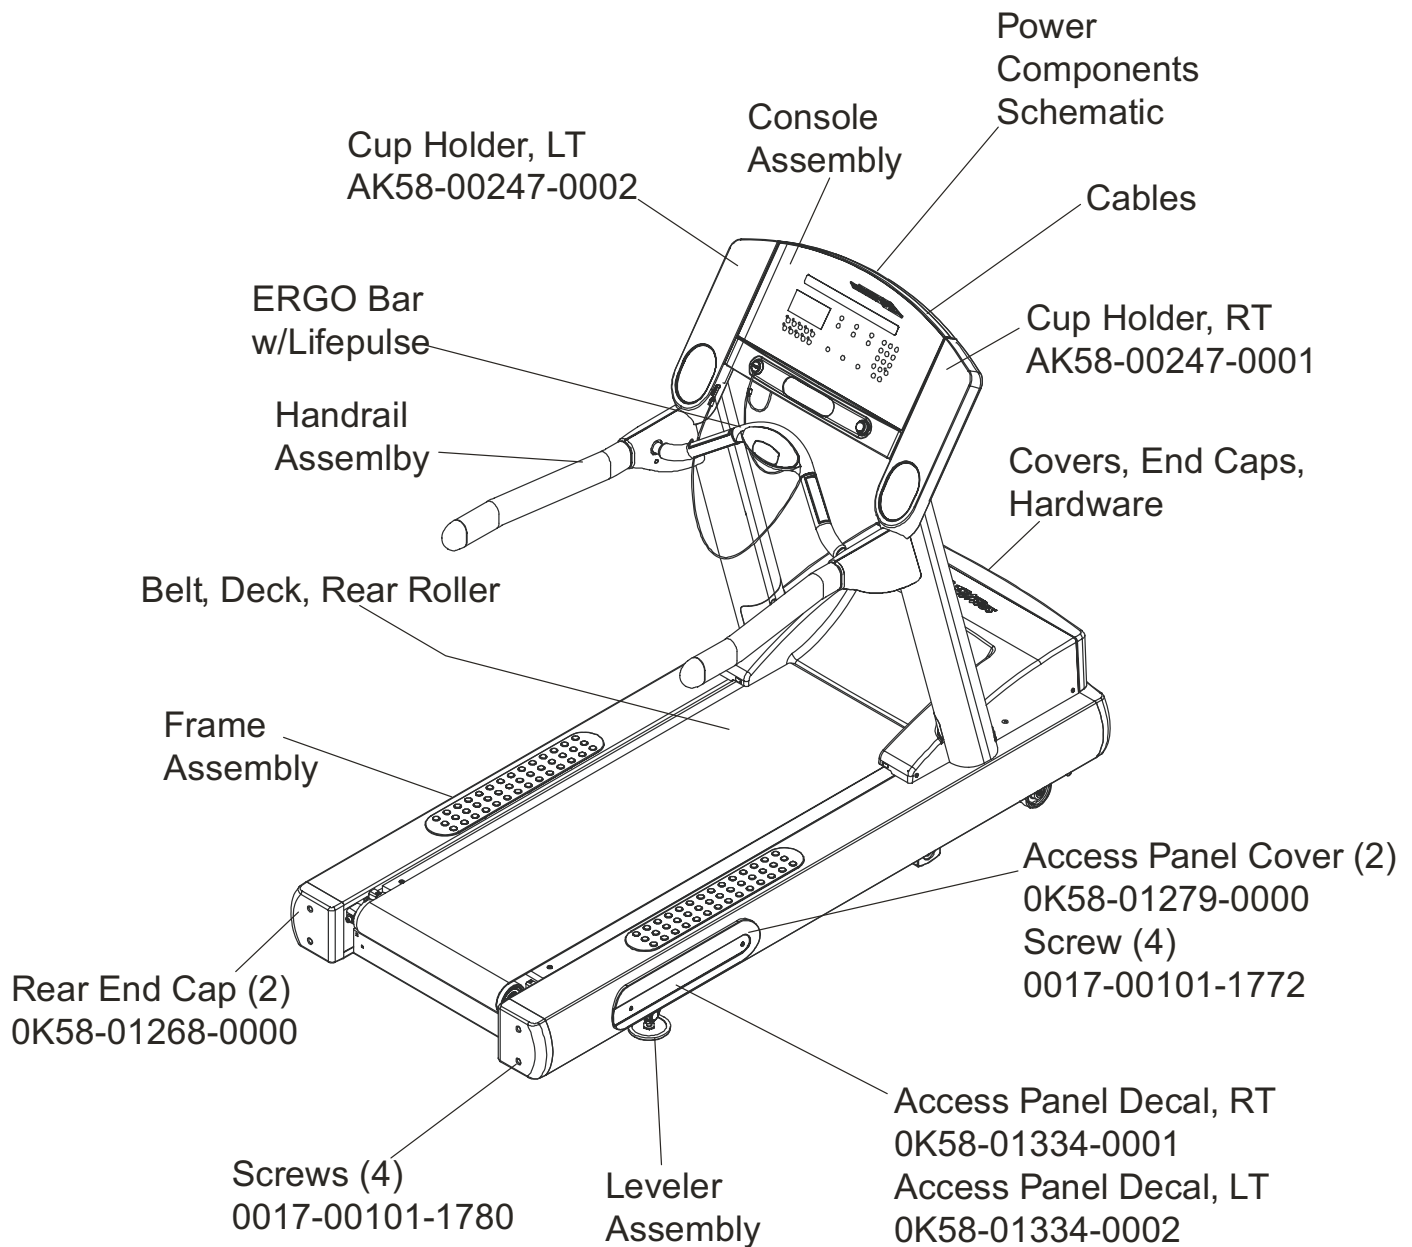


Touch-Up Paint	Color	Container
0017-00008-0196	Silver Bullet	Bottle
0017-00008-0197	Silver Bullet	Spray Can
0017-00008-0198	Stealth Gray	Bottle
0017-00008-0199	Stealth Gray	Spray Can

Manual/Video	Part Number
Operation Manual, Eng	M051-00K58-B080
Service Manual	M051-00K58-A097
Installation Video	M051-00K58-A098
Service Video	M051-00K58-A099
Installation Manual	M051-00K58-C088

Treadmill 95Ti


Frame Assembly

 95T-0XXXX-02
S/N TTJ100000

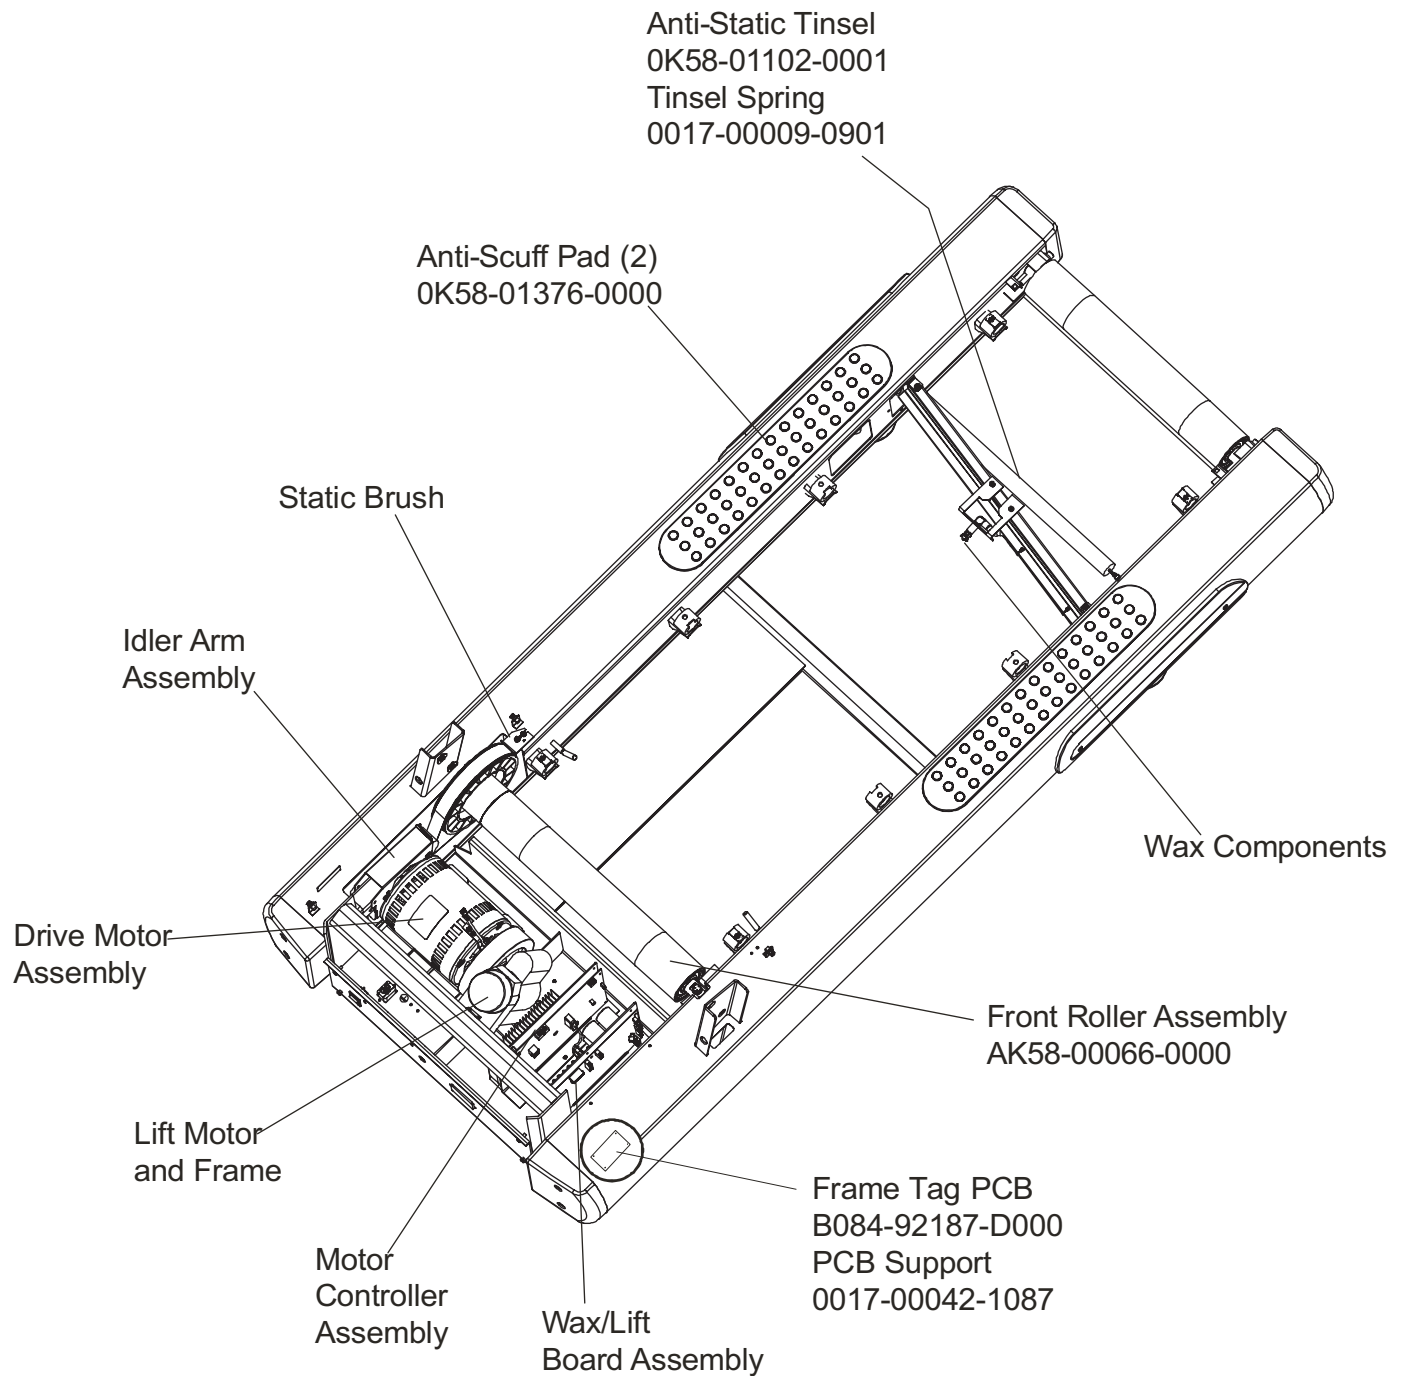

Treadmill 95Ti
Console Assembly

 95T-0XXXX-02
S/N TTJ100000

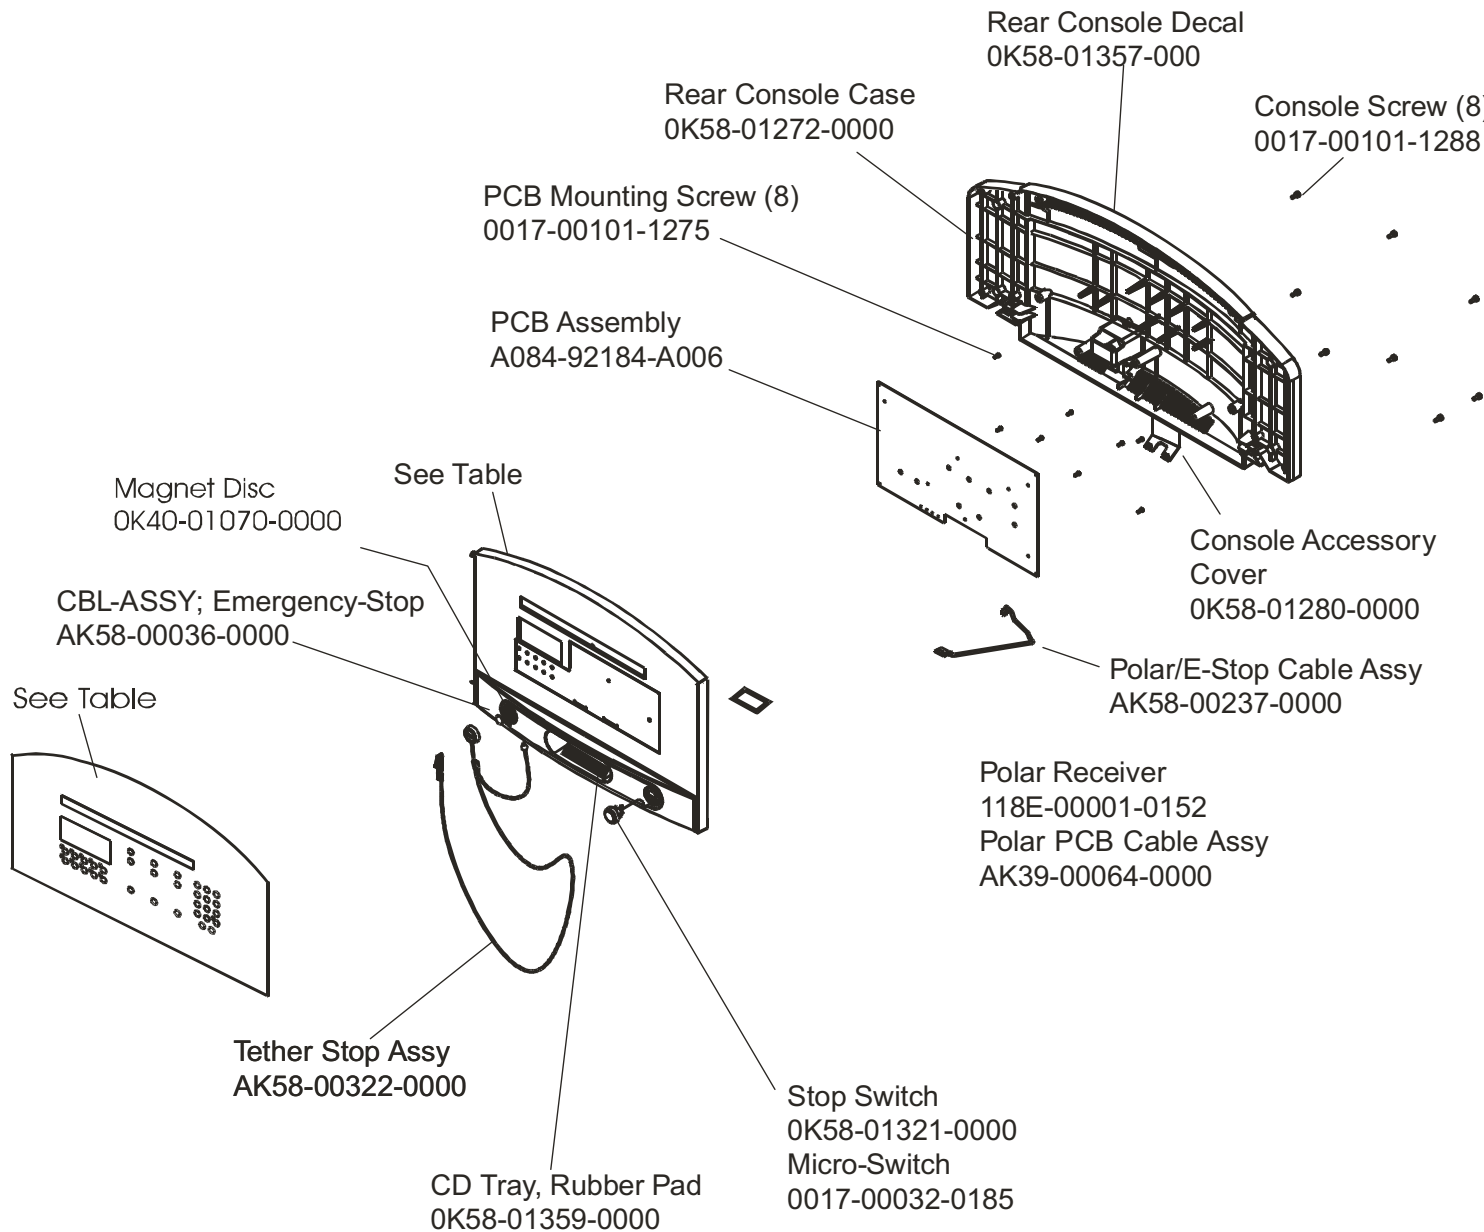


Console Assembly	Overlay Switch Bezel Assy
AK58-00197-0001	AK58-00203-0001
AK58-00197-0002	AK58-00203-0001
AK58-00197-0003	AK58-00203-0003
AK58-00197-0004	AK58-00203-0004
AK58-00197-0006	AK58-00203-0006
AK58-00197-0007	AK58-00203-0007
AK58-00197-0008	AK58-00203-0008
AK58-00197-0009	AK58-00203-0009
AK58-00197-00010	AK58-00203-00010
AK58-00197-00011	AK58-00203-00011

Treadmill 95Ti

Handrail Assembly


95T-0XXXX-02
S/N TTJ100000

 Hardware Bag Assembly AK58-00226-0000

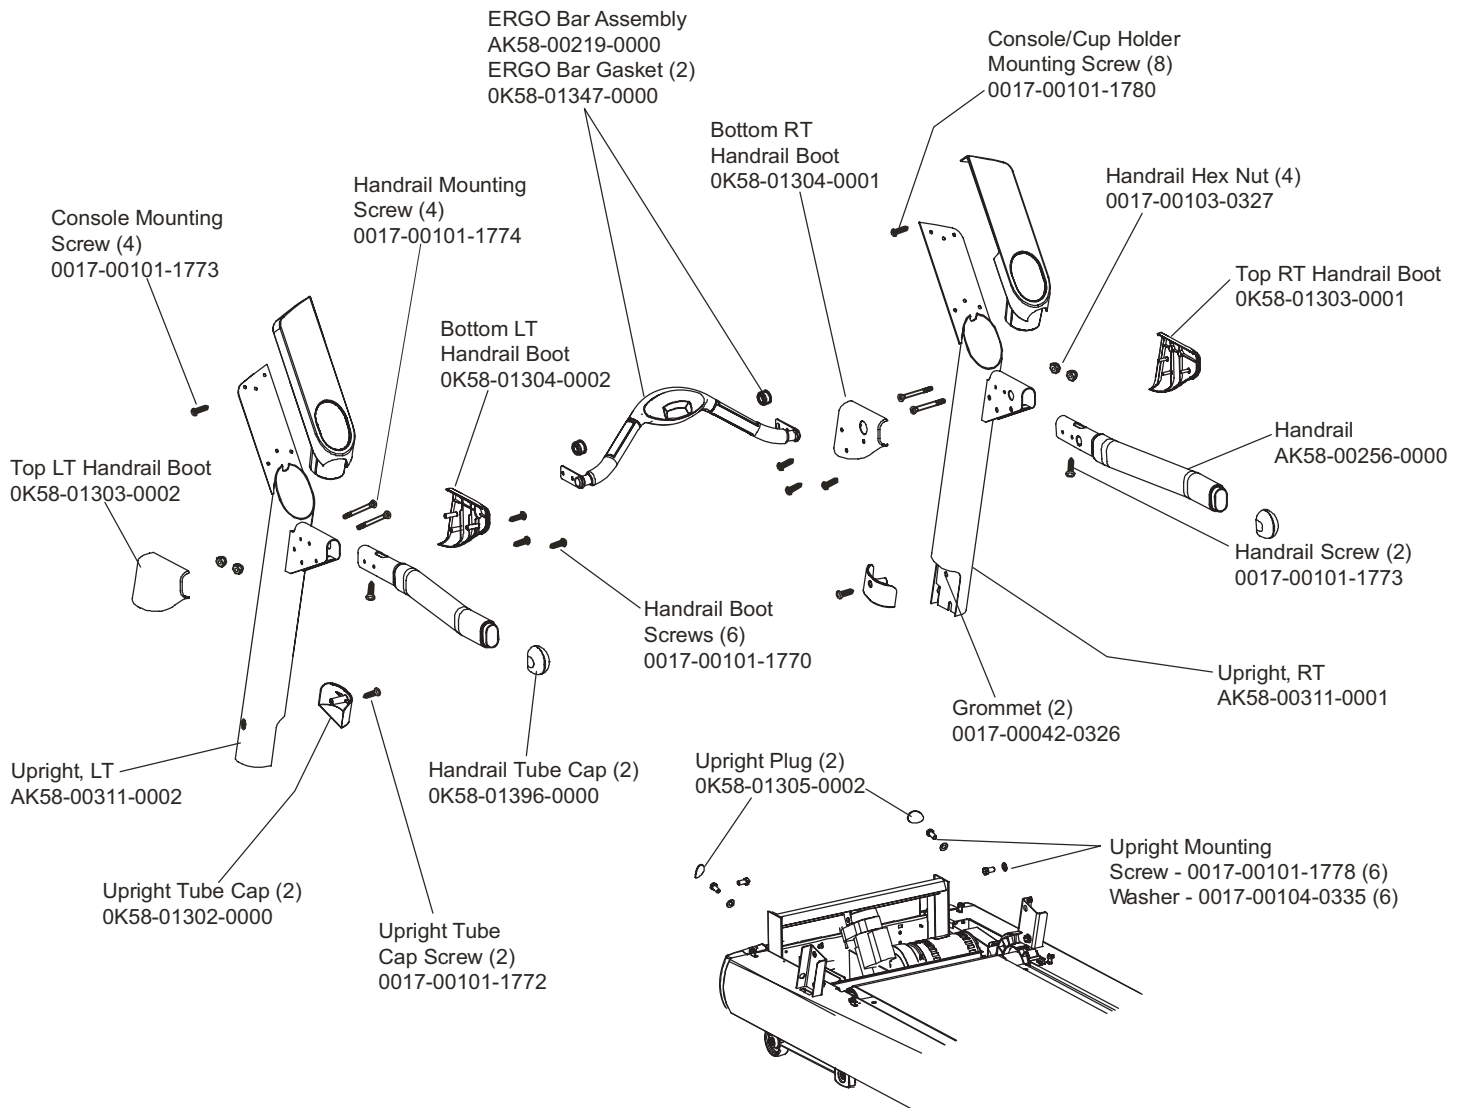

Treadmill 95Ti
Covers, End Caps, Hardware


 
95T-0XXXX-02
S/N TTJ100000

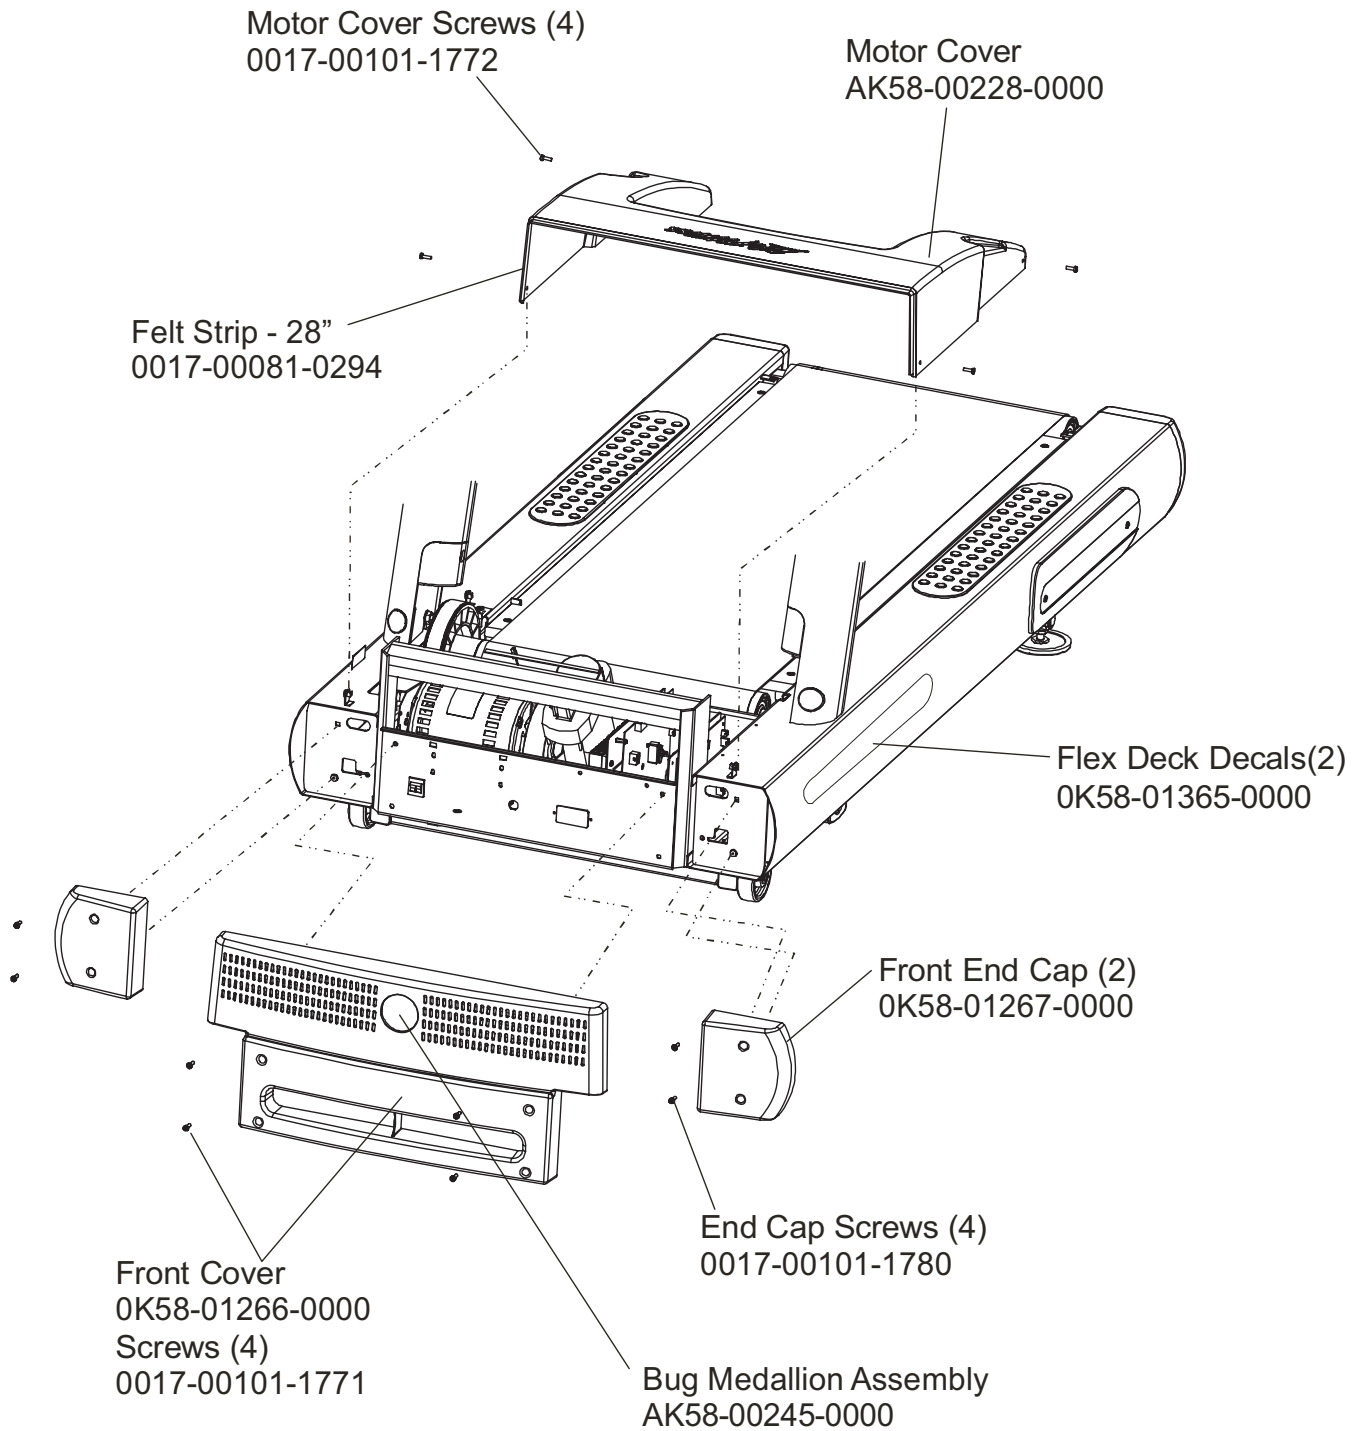

Treadmill 95Ti

Belt, Deck, Rear Roller

 
 
95T-0XXXX-02
S/N TTJ100000

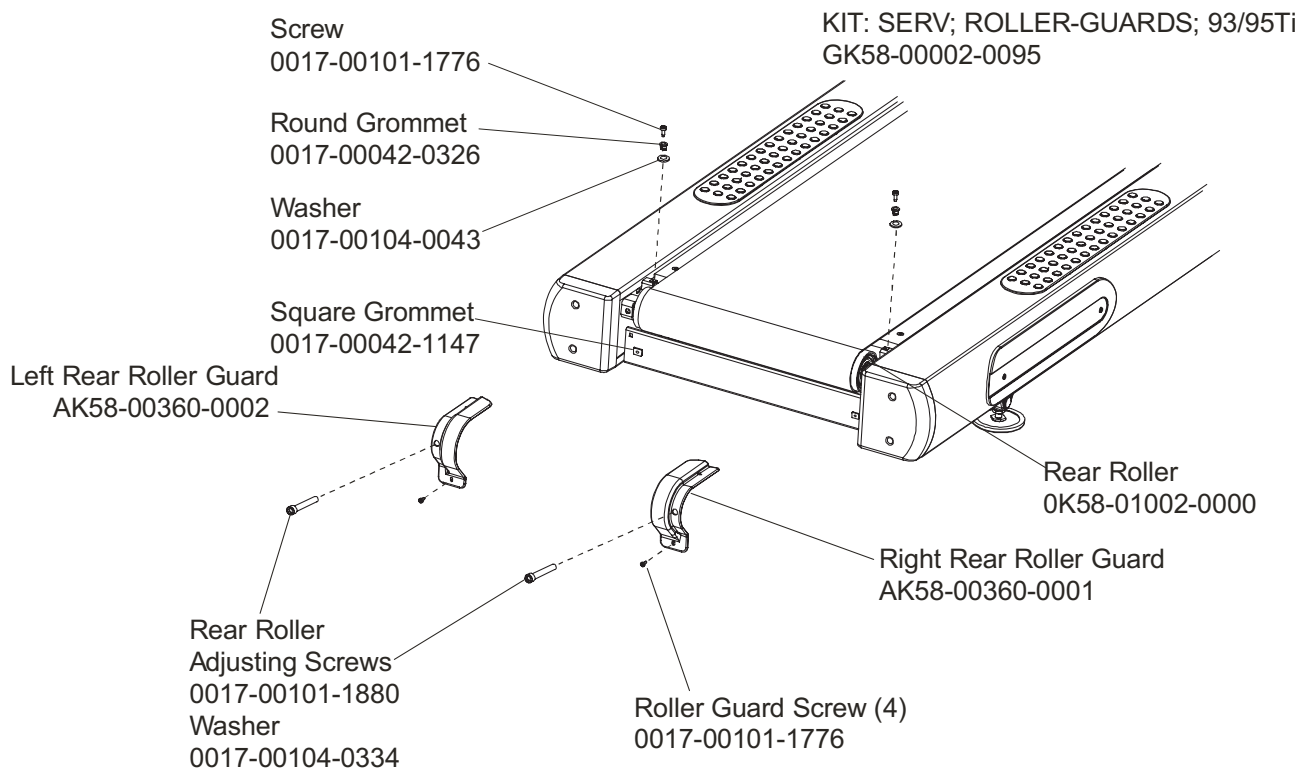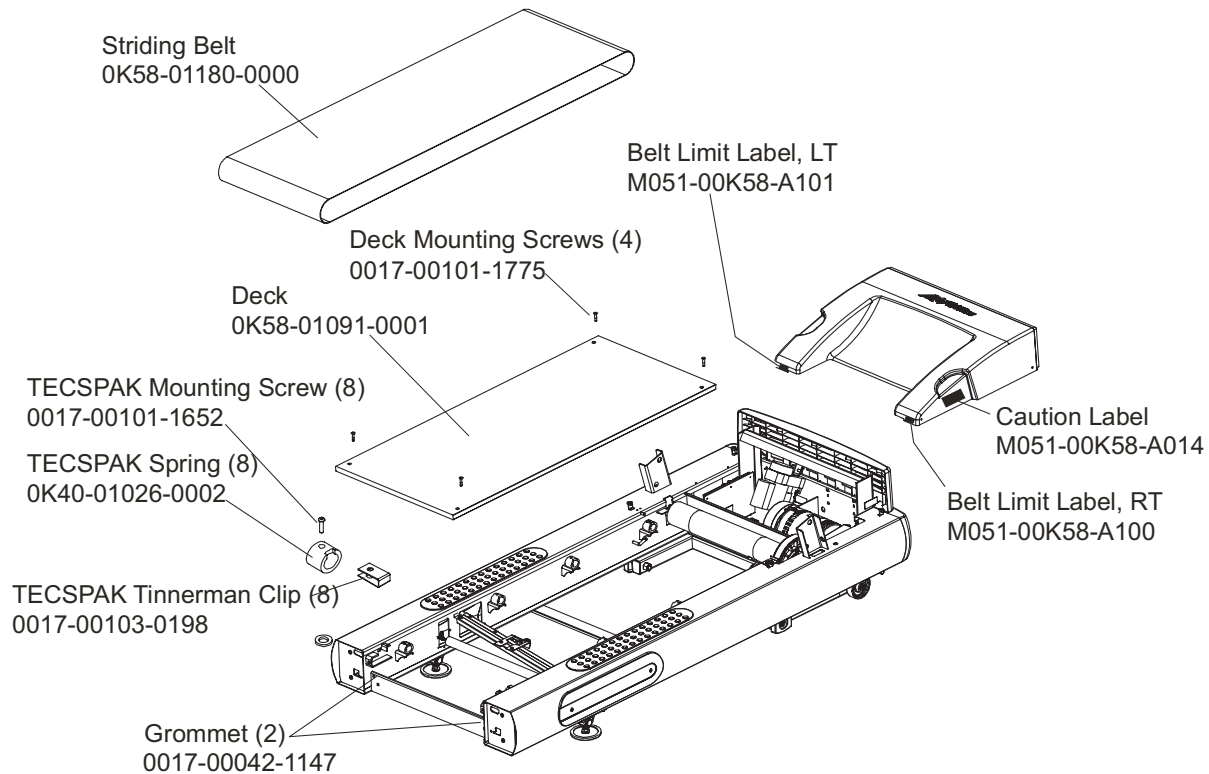

Treadmill 95Ti


Lift Motor and Frame

  95T-0XXXX-02
S/N TTJ100000

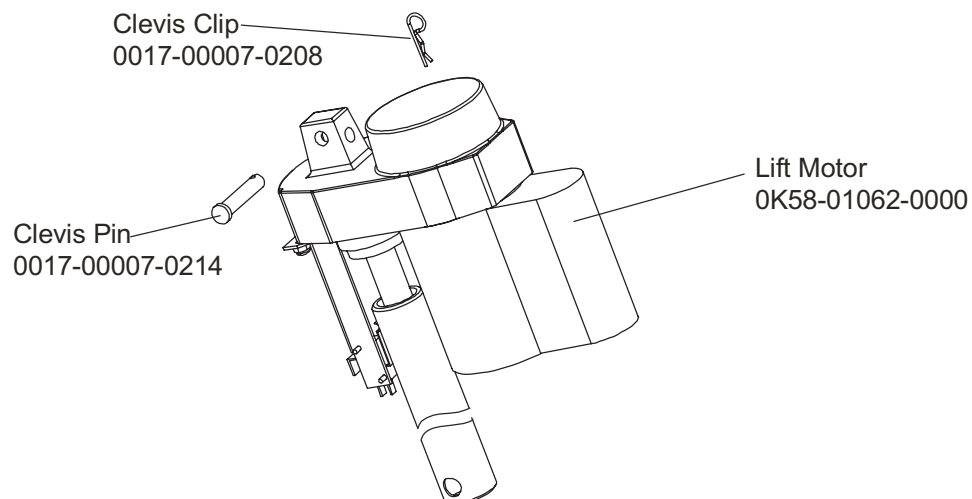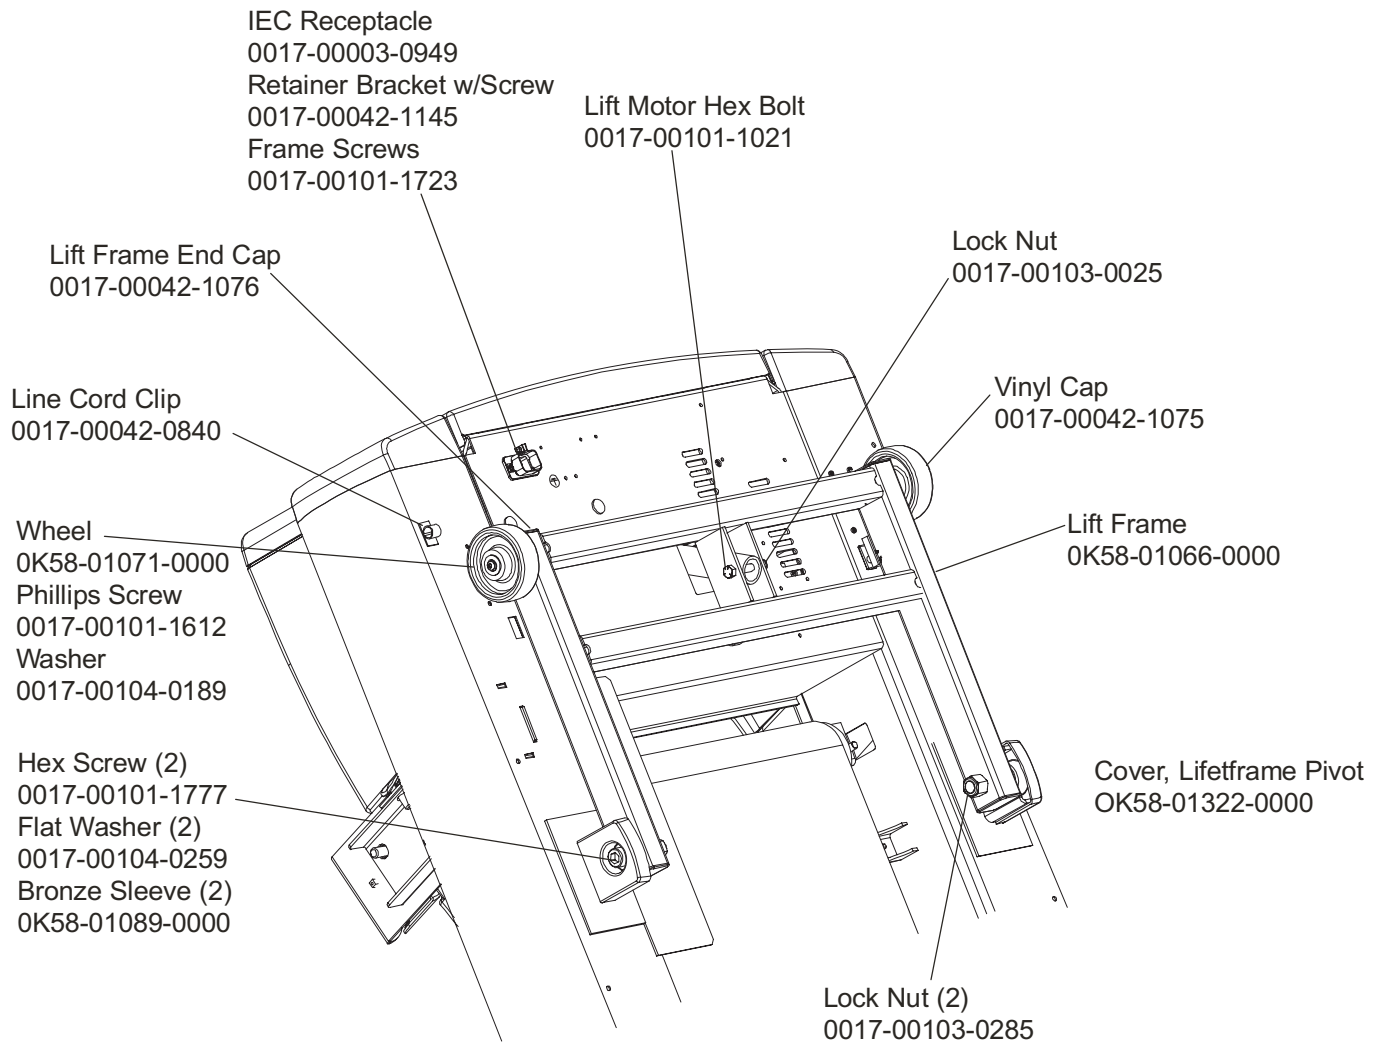

Treadmill 95Ti
Wax/Lift Assembly

 
95T-0XXXX-02
S/N TTJ100000

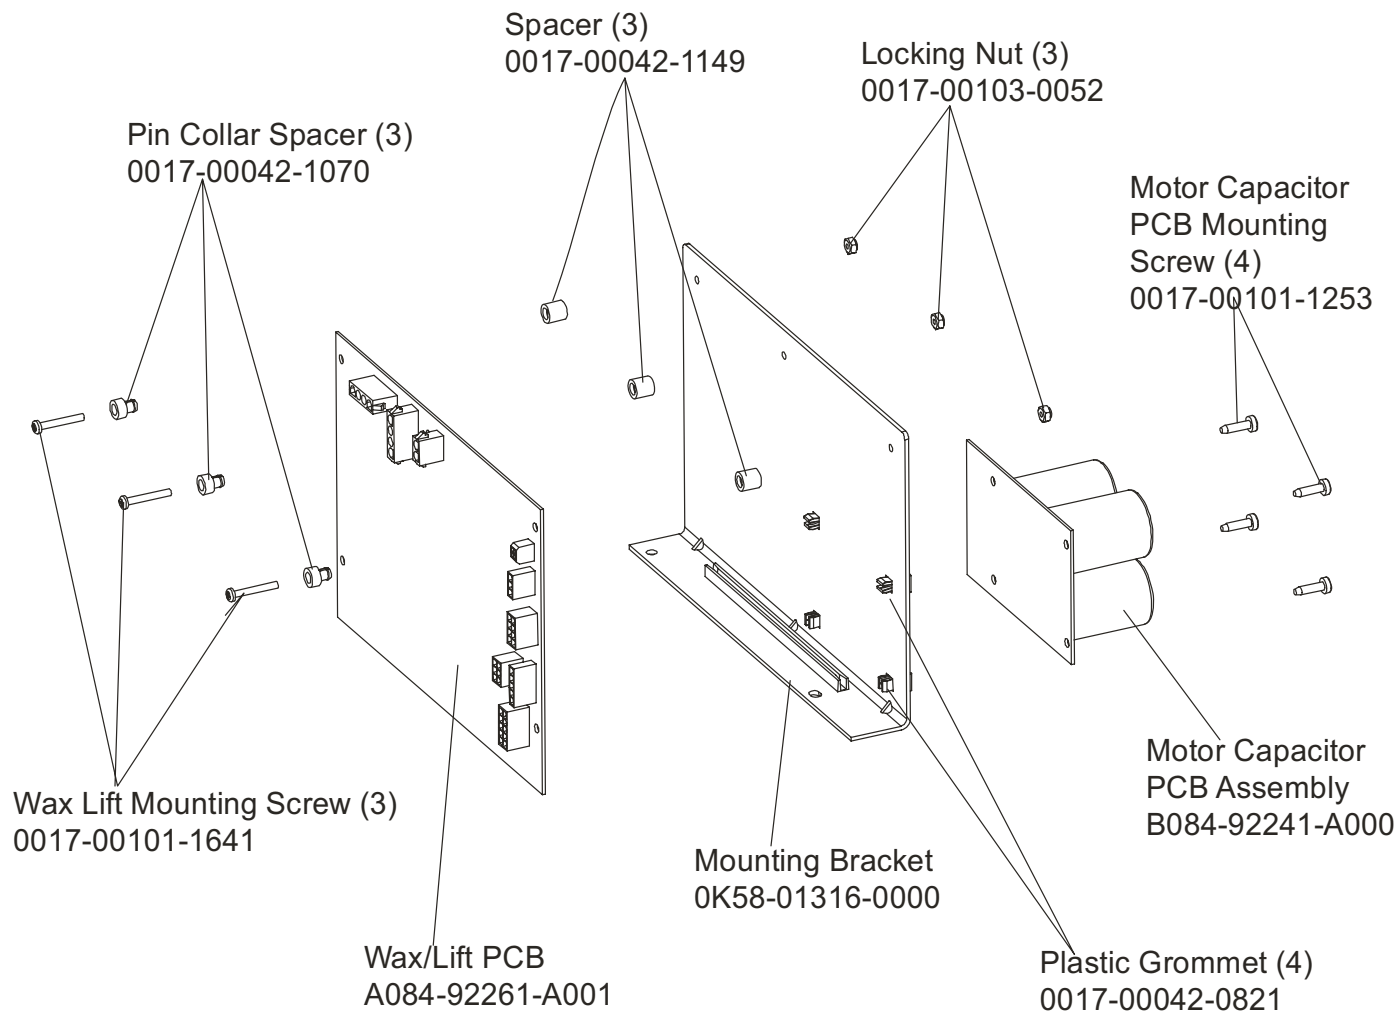

Treadmill 95Ti

Motor Controller Assembly

 
95T-0XXXX-02
S/N TTJ100000

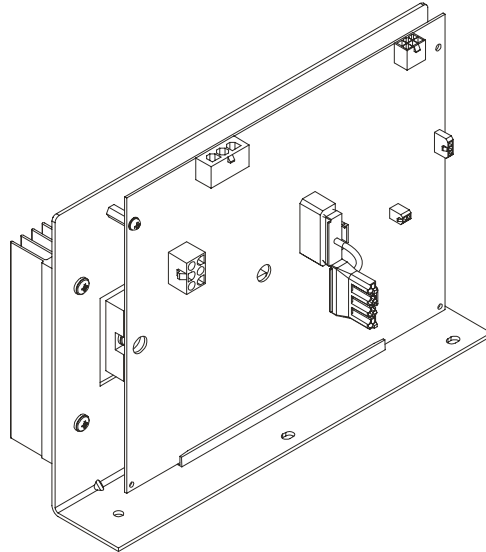

AK60-00171-0000	MTR-CNTRL W/O FERRITE ASY: 100-120
<i>Model SKU</i>	<i>Description</i>
95T-0100-02	95Ti.ENG/ENG.120/60.DOM
95T-0105-02	95Ti.ENG+MET.100/50.DOM
95T-0300-02	95Ti.FRN/MET.120/60.DOM
95T-0400-02	95Ti.SPN/MET.120/60.DOM
95T-0705-02	95Ti.JAP/MET.100/50.DOM
95T-0800-02	95Ti.POR/MET.120/60.DOM
AK60-00171-0001	MTR-CNTRL W/O FERRITE ASY: 200-240
<i>Model SKU</i>	<i>Description</i>
95T-0103-02	95Ti.ENG+MET.220/60.DOM
95T-0104-02	95Ti.ENG+MET.240V+. AUS
AK60-00171-0003	MTR-CNTRL W/FERRITE ASY: MFG.200-240
<i>Model SKU</i>	<i>Description</i>
95T-0101-02	95Ti.ENG+MET.230/50.CON
95T-0102-02	95Ti.ENG+MET.240/50.U.K
95T-0106-02	95Ti.ENG+MET.200/50.DOM
95T-0109-02	95Ti.ENG+MET.230/50.U.K
95T-0201-02	95Ti.GER/MET.230/50.CON
95T-0301-02	95Ti.FRN/MET.230/50.CON
95T-0401-02	95Ti.SPN/MET.230/50.CON
95T-0501-02	95Ti.ITA/MET.230/50.CON
95T-0601-02	95Ti.DUT/MET.230/50.CON
95T-0706-02	95Ti.JAP/MET.200/50.DOM
95T-0801-02	95Ti.POR/MET.230/50.CON



Treadmill 95Ti
Drive Motor Assembly

 95T-0XXXX-02
S/N TTJ100000

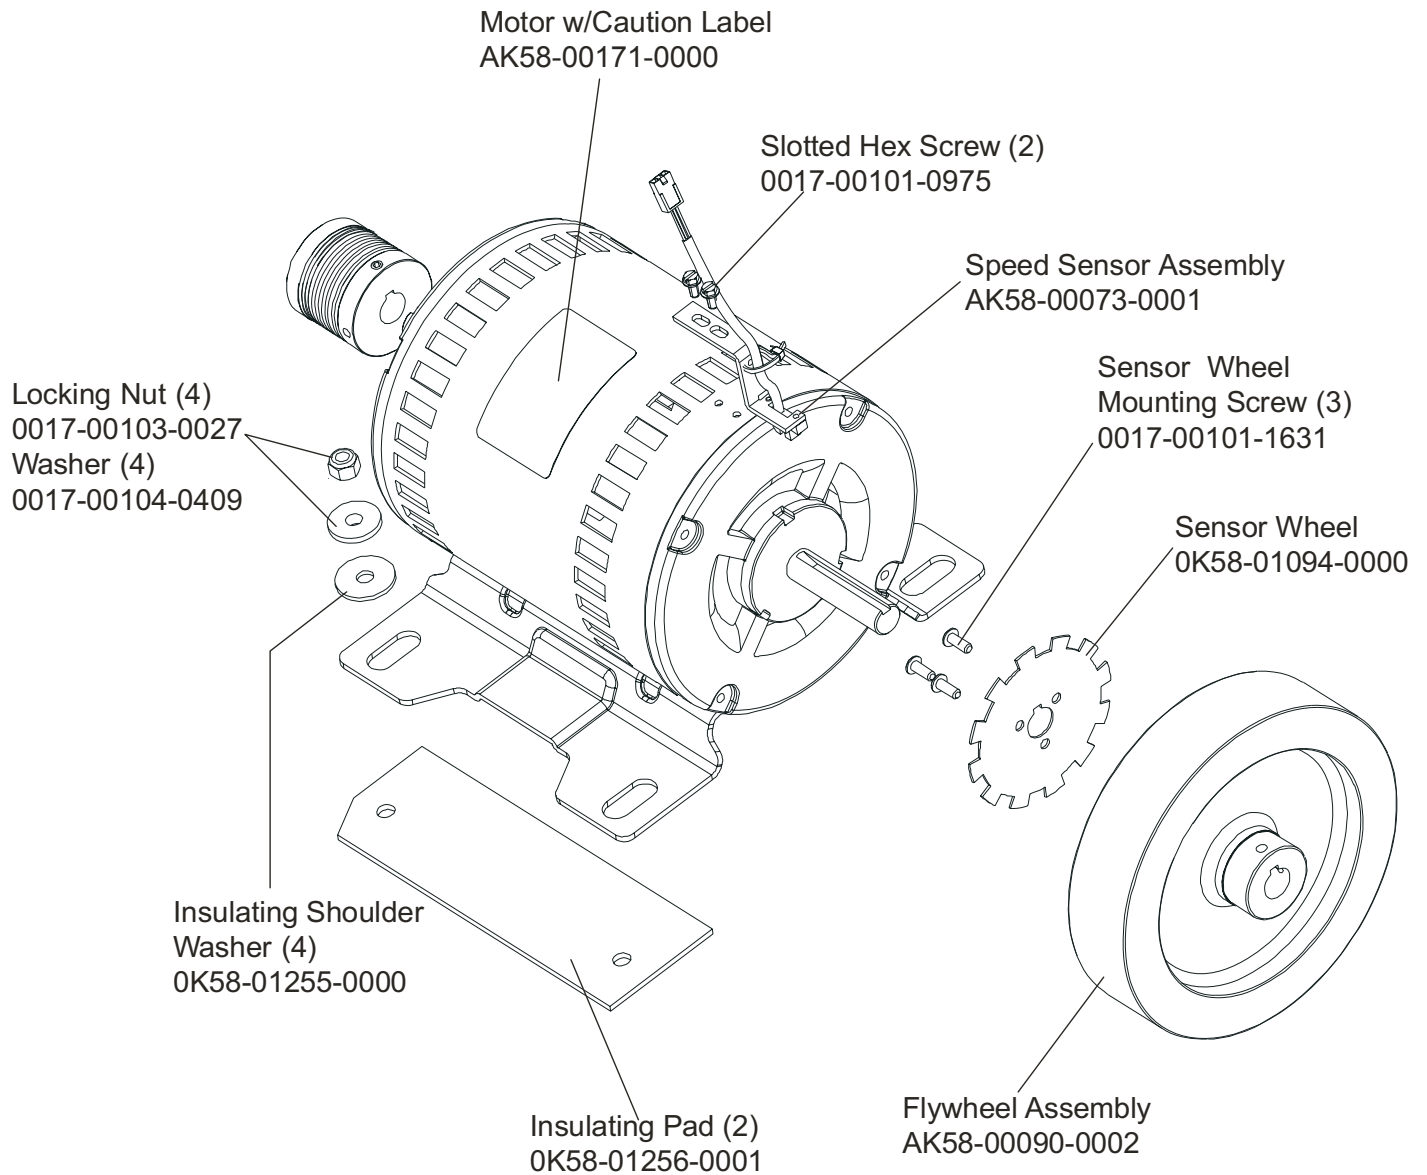

Treadmill 95Ti
Wax Components

  95T-0XXXX-02
S/N TTJ100000

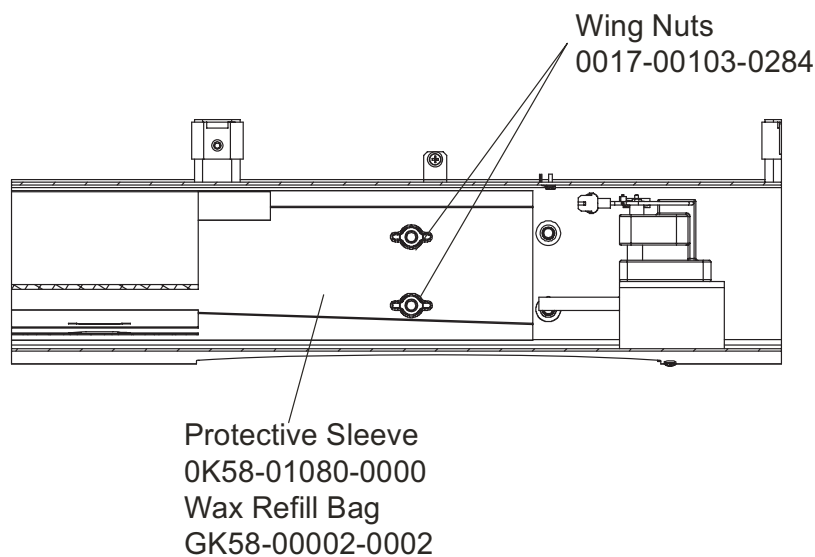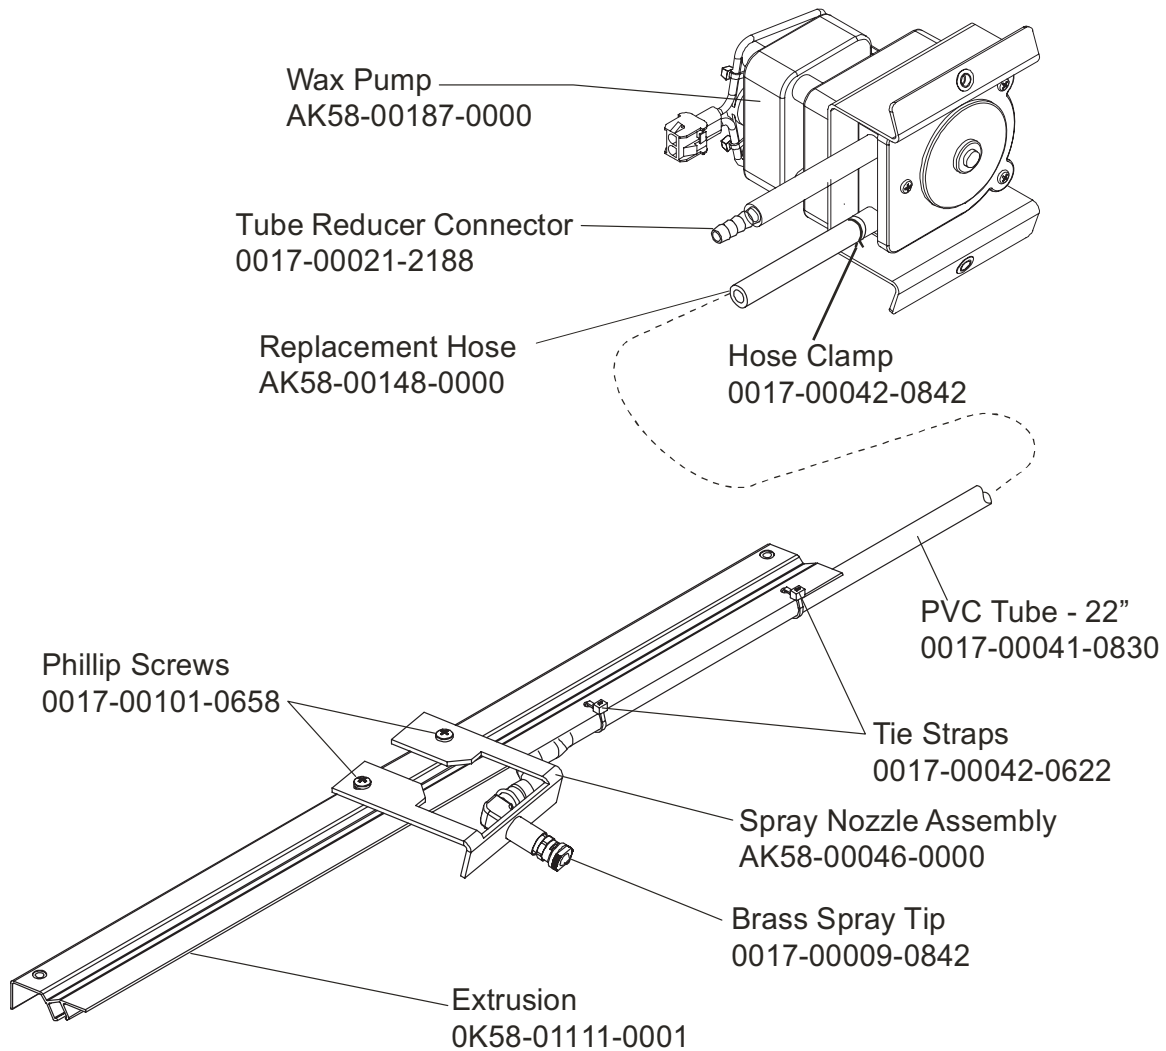


Treadmill 95Ti

Idler Arm Assembly & Static Brush


95T-0XXXX-02

 
S/N TTJ100000

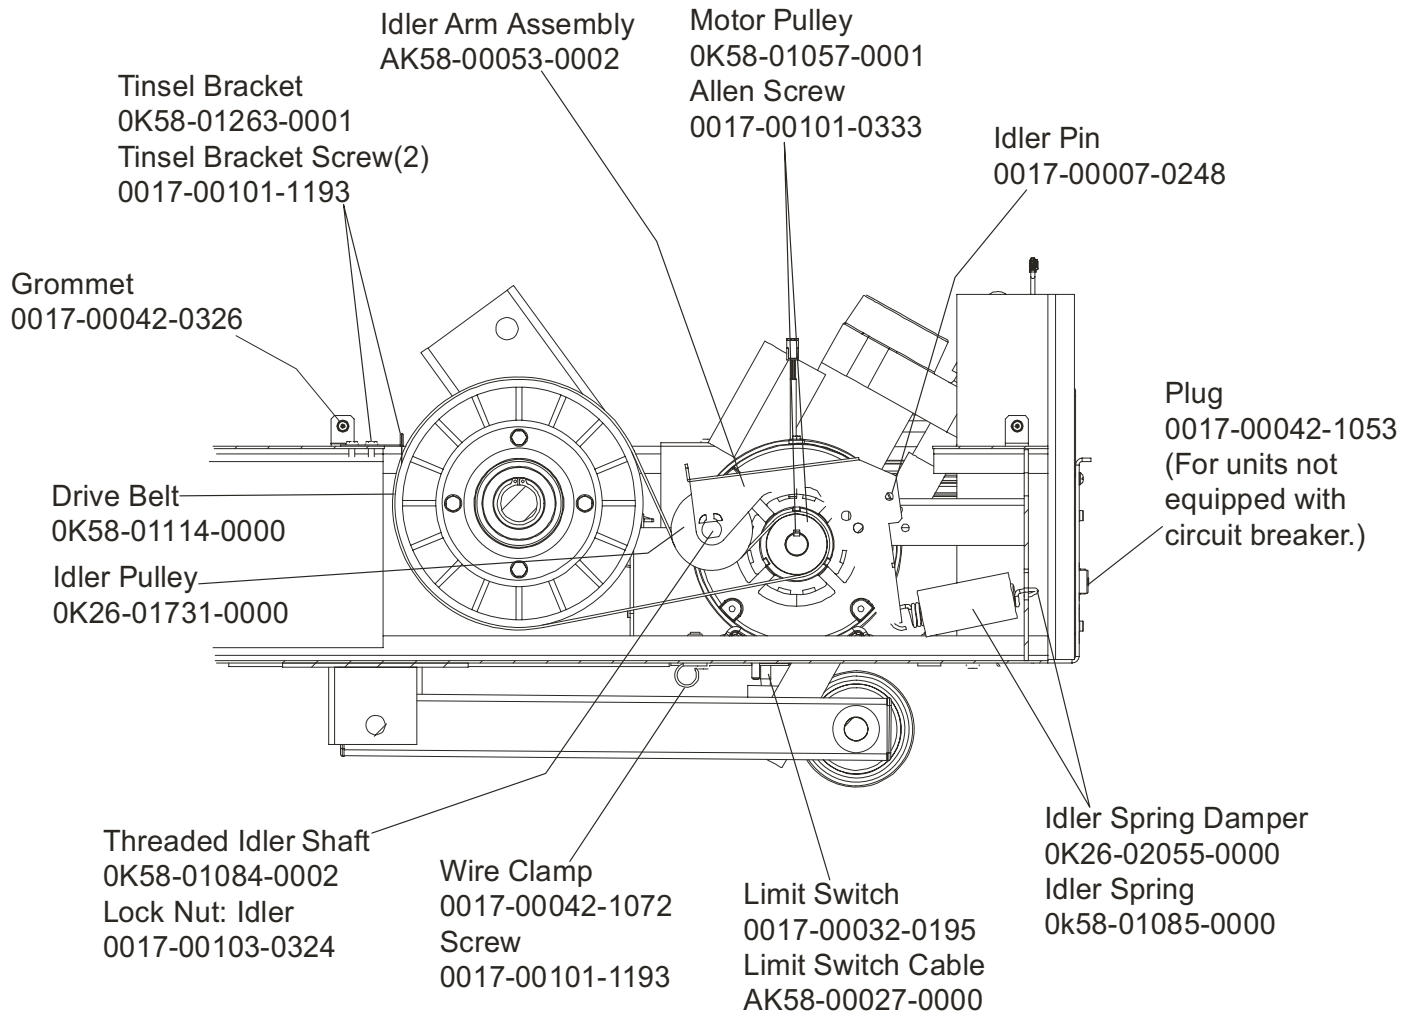

Treadmill 95Ti
Leveler Assembly AK58-00370-0000

  
95T-0XXXX-02
S/N TTJ100000

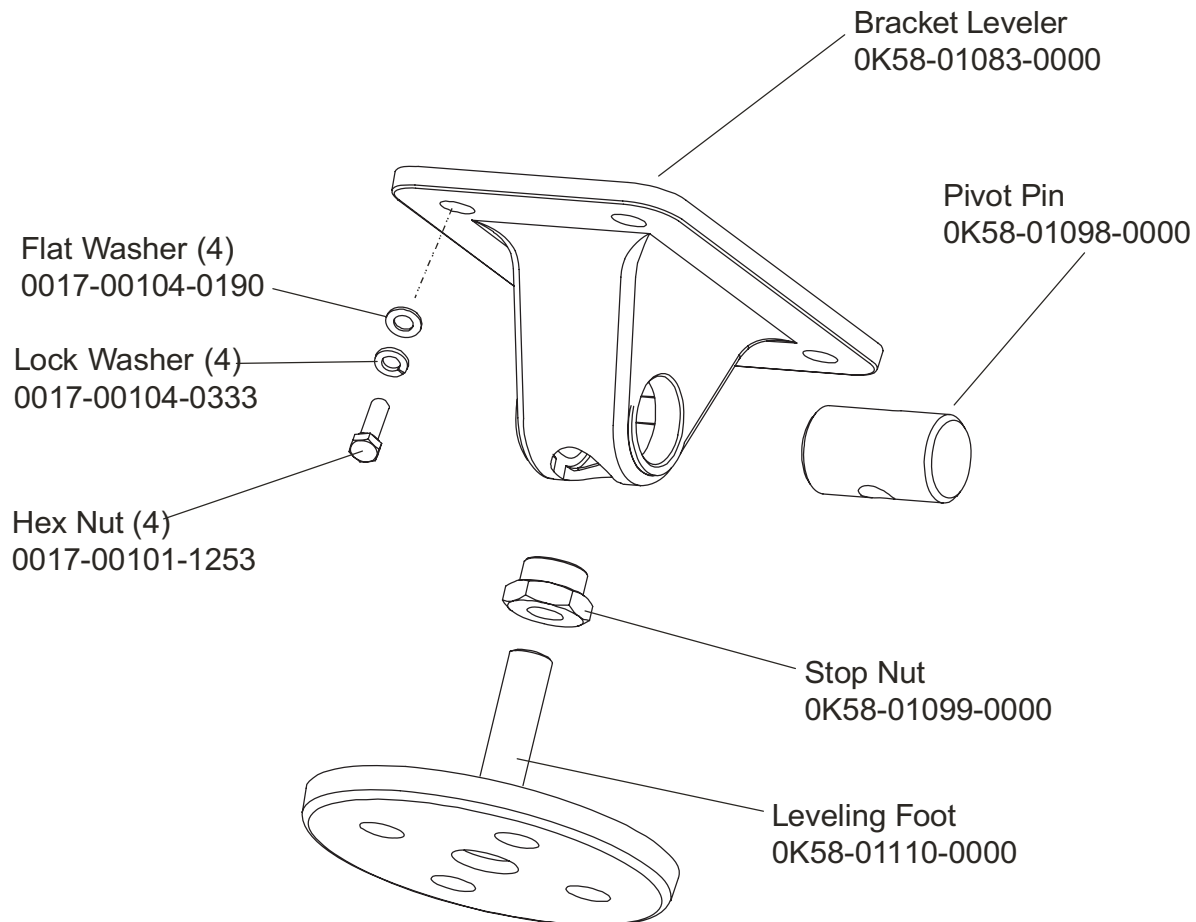

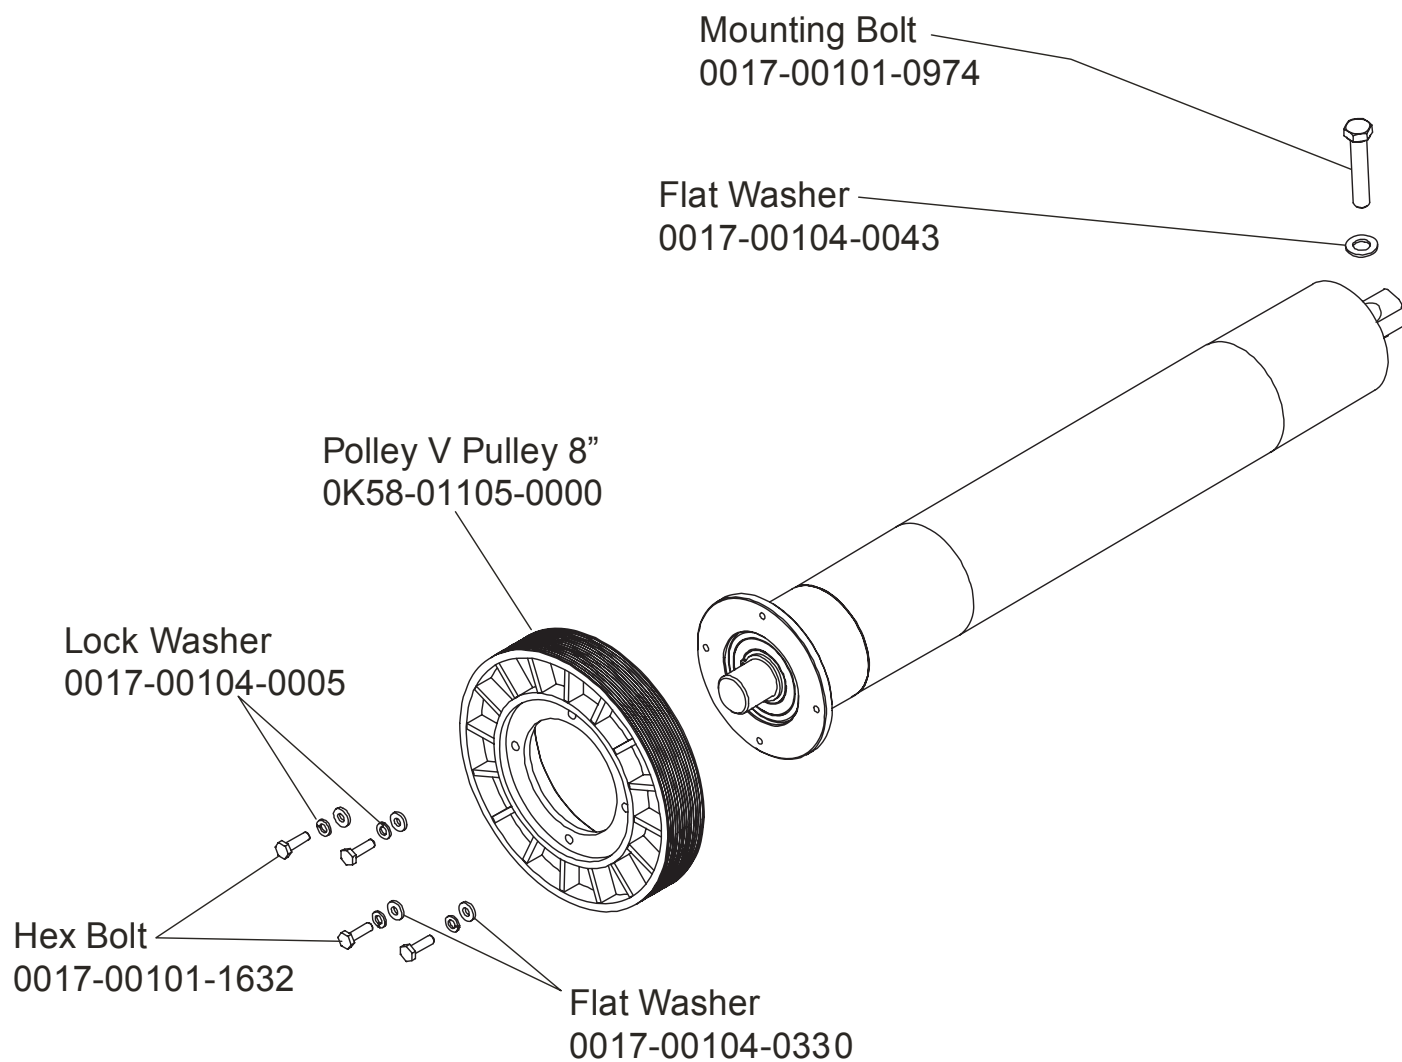

Treadmill 95Ti
ERGO Bar w/Lifepulse

 95T-0XXXX-02
S/N TTJ100000

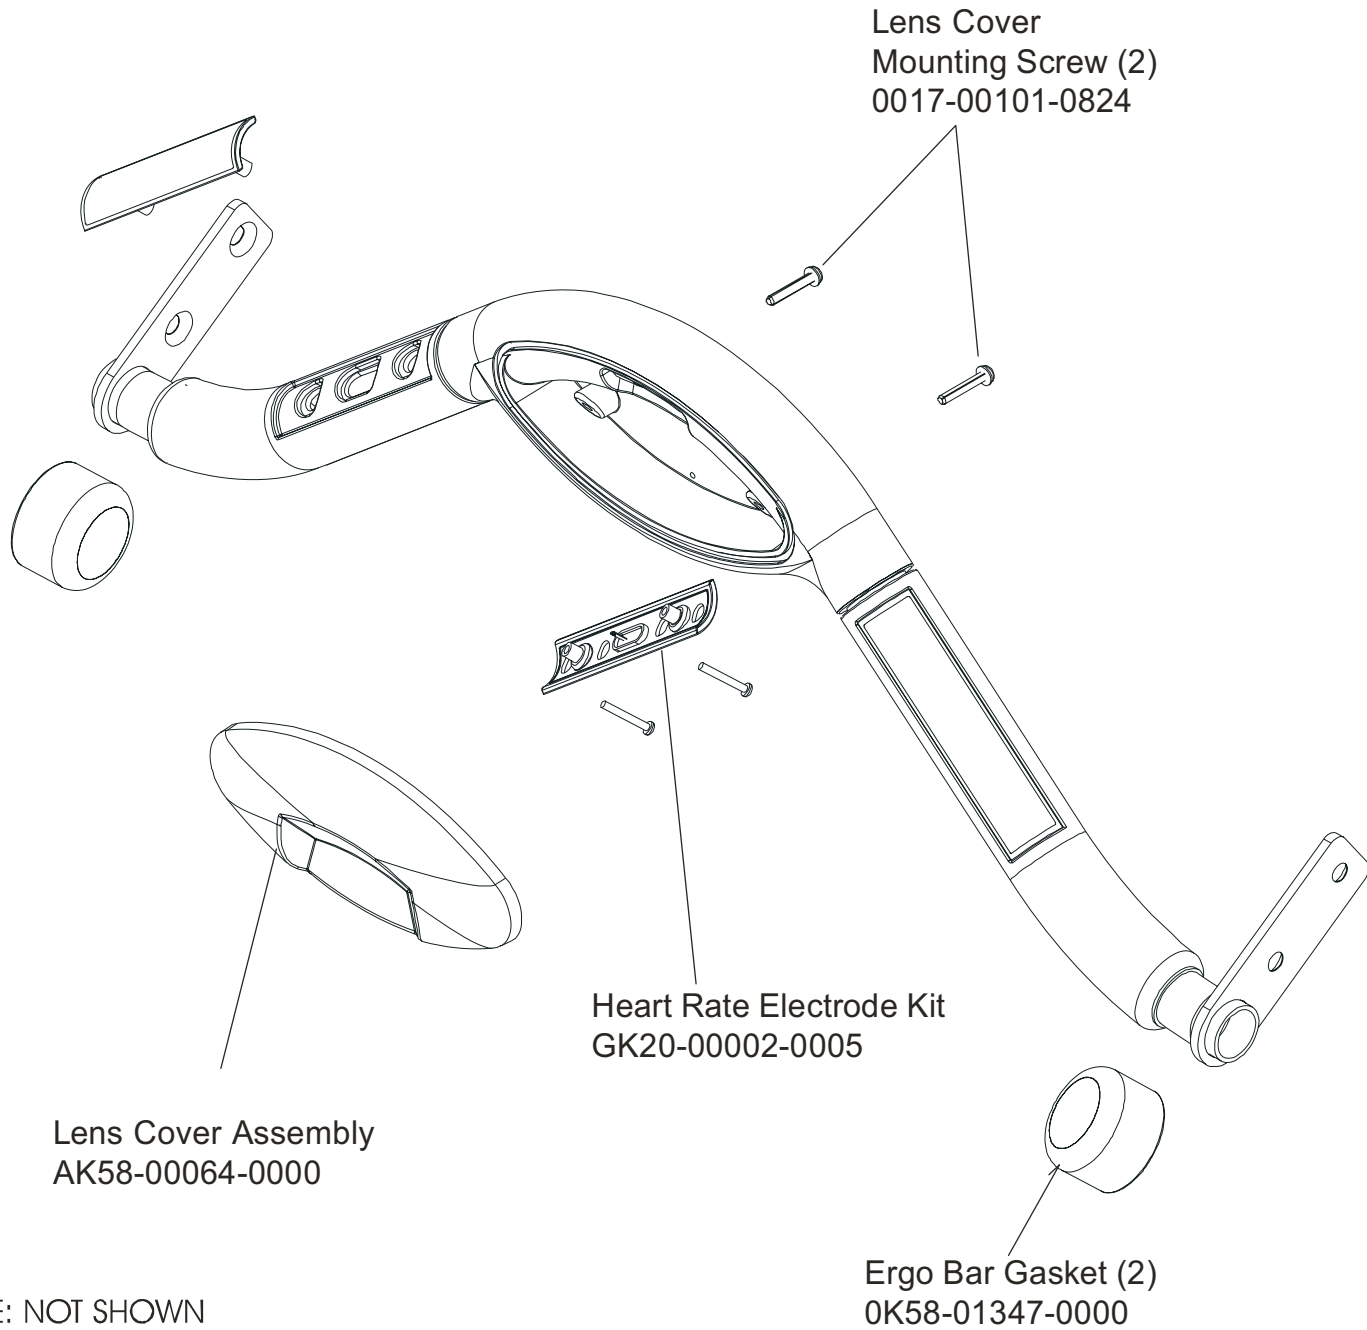


CBL-ASSY: H/R Sensors
AK58-00041-0001

CBL-ASSY: User Sense Prox.
AK58-00032-0000

Treadmill 95Ti

Power Components Schematic

 95T-0XXXX-02
S/N TTJ100000

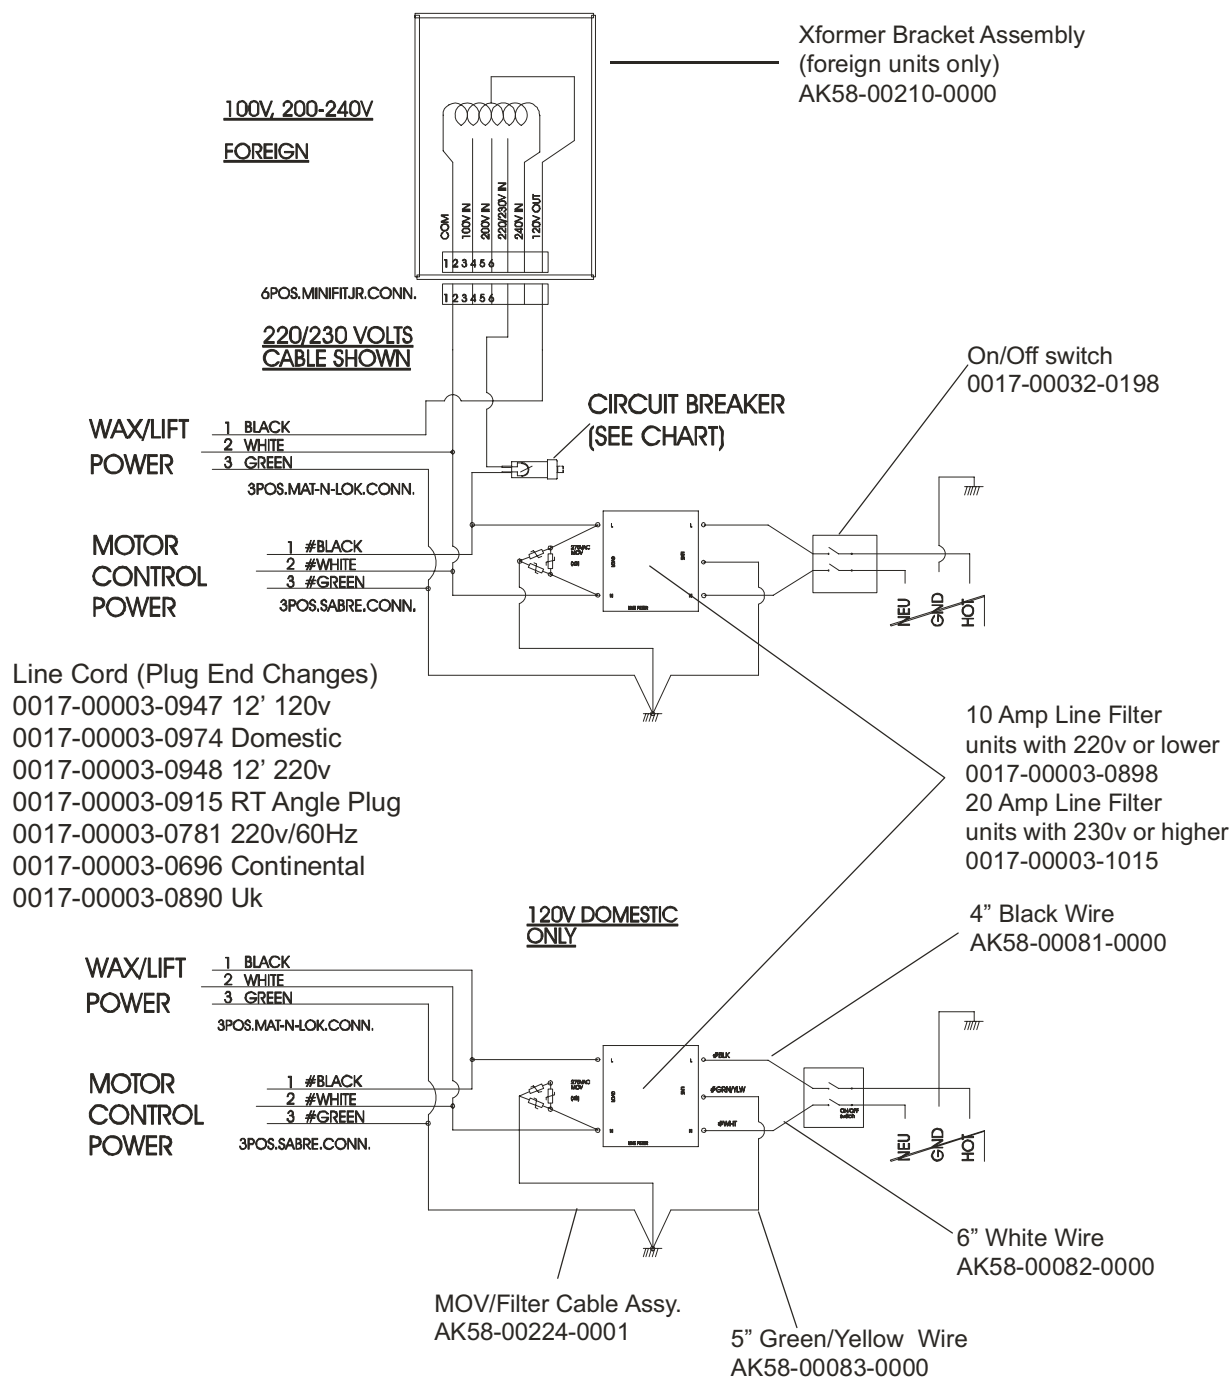

Voltage	Power Cable Part No.	Breaker AMP/Part No.
100v	AK58-00258-0001	4 AMP/0017-00003-0950
200v	AK58-00258-0002	4 AMP/0017-00003-0626
220/230v	AK58-00258-0003	2 AMP/0017-00003-0626
240+	AK58-00258-0004	2 AMP/0017-00003-0626

Treadmill 95Ti
Cables

95T-0XXXX-02
S/N TTJ100000

