 


Calibration Guide

600 Series

Models: X6600HRC/DA (XXXXEP09) & X6600HRC (XXXXEP05)

1. Hold the **"LEVEL UP"** button and **"START"** buttons. Begin pedaling the unit until the display window is activated. Wait for beep and scrolling message in the DOT matrix window (this will be about 5 seconds).

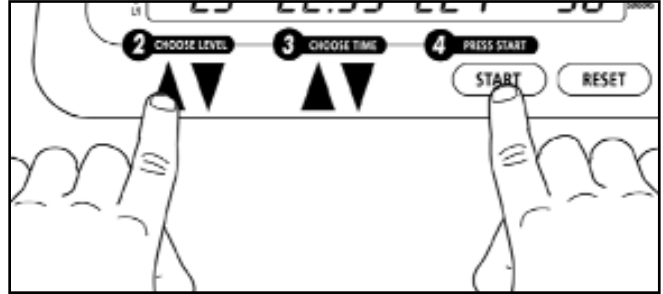


2. Press either the **"LEVEL UP"** or **"LEVEL DOWN"** buttons to select desired model. This is located in the Watts window of the display.


E = Elliptical: X6600DA, X6600

B = bike: E3600, R2600

The number in the Time window means ACCUMULATED TIME. The total in the Calories window means ACCUMULATED DISTANCE.

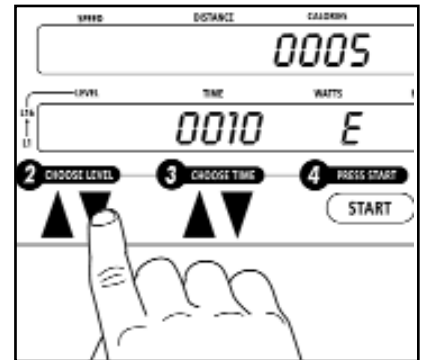

3. Press and hold **"START"** button for at least 5 seconds and wait for a long beep sound - Setup completes and is saved.

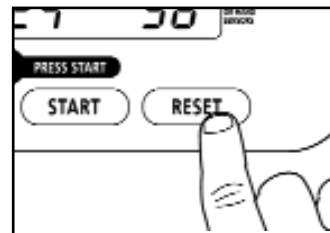

4. To return to the regular mode, press the **"RESET"** key.