


T9800 Series TREADMILLS

TV BRACKET


ASSEMBLY GUIDE

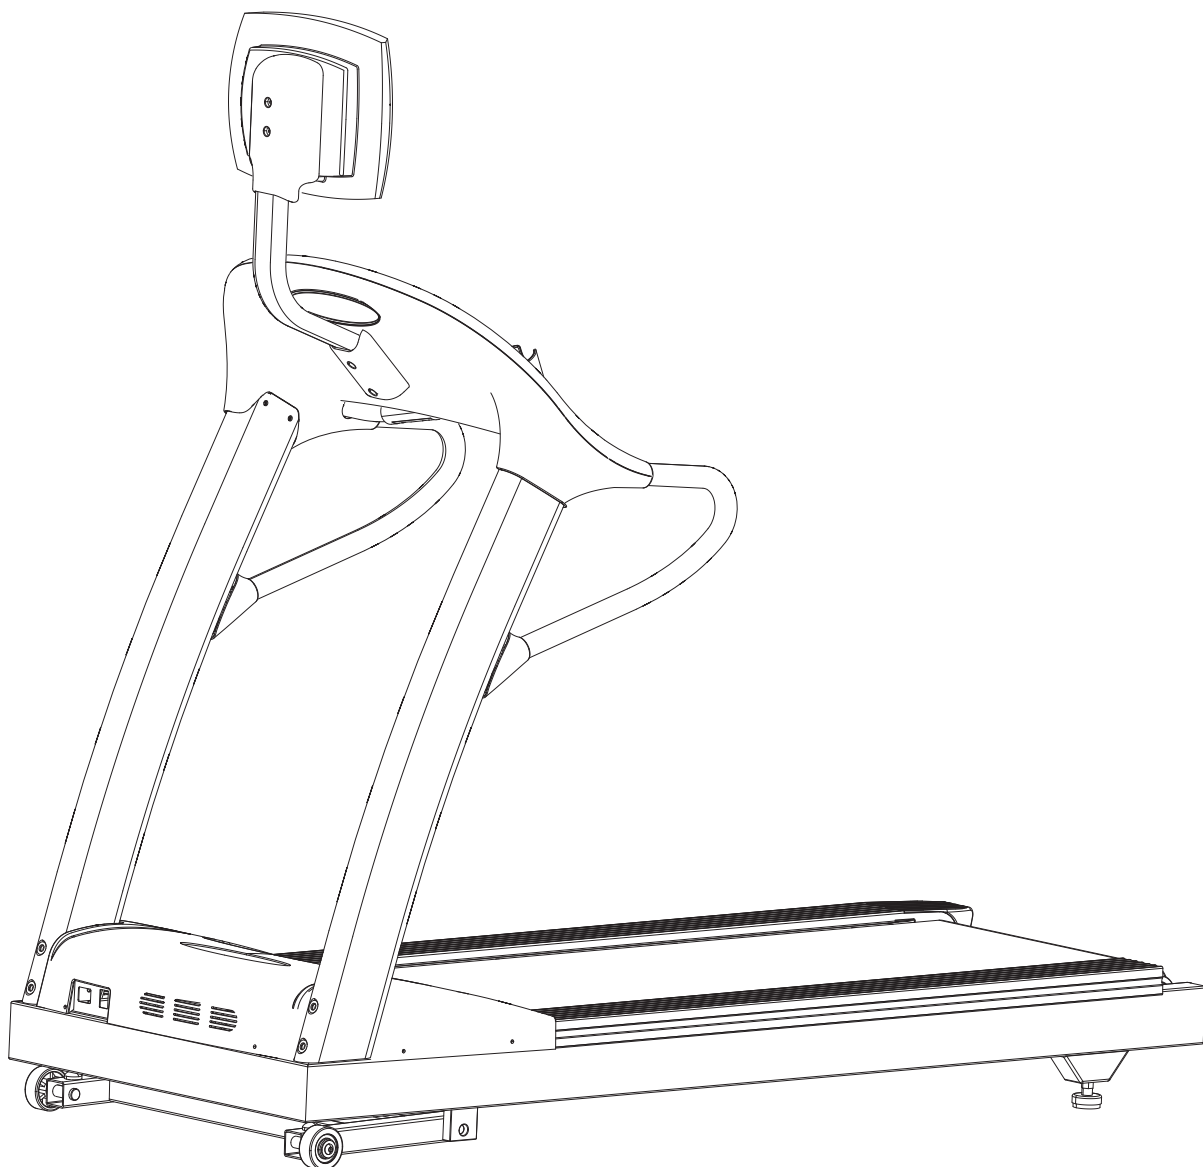


TOOLS & PARTS INCLUDED



M5x12L Bolt
Quantity: 4

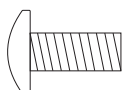

Lock Washer
Quantity: 4

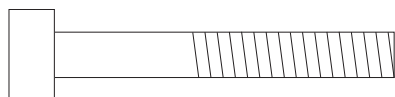

M6x45L Socket Head Bolt
Quantity: 4



500 South CP Avenue ▪ P.O. Box 280 ▪ Lake Mills, WI 53551
toll free 800.335.4348 ▪ phone 920.648.4090 ▪ fax 920.648.3373
www.visionfitness.com

©2007 Vision Fitness. All Rights Reserved. 5.07
AG18.55PRD
REV1

ASSEMBLY STEPS

TV BRACKET

(1) Remove the TV bracket cover from the back of the treadmill console.

(2) Connect the TV power cable and the coaxial cable from the TV bracket with the power cable and coaxial cable from the back of the console. Be sure the cables are firmly connected.

(3) Attach the TV bracket to the back of the console using four socket head bolts (M6x45L) and four spring washers. First insert one bolt and one washer at the top of the bracket, and one bolt and one washer at the bottom of the bracket to help align all of the holes. Insert all four bolts and washers before fully tightening.

(4) Attach the console bracket cover to the bottom of the TV bracket using two bolts (M5x12L). Insert both bolts before fully tightening.

(5) If mounting bolts are inserted in the TV, remove them from the back of the TV. If the TV uses the larger bolt hole pattern, remove the square metal plate from the TV bracket.

(6) Attach the TV power cable and coaxial cable from the TV bracket to the TV. Be sure the cables are firmly connected.

(7) Attach the TV to the TV bracket using the four TV mounting bolts that were removed from the TV. Insert all four bolts before fully tightening.

(8) Attach the TV bracket cover to the TV bracket using two bolts (M5x12L). Insert both bolts before fully tightening.

