

Incline Elliptical Trainers – Commercial General Maintenance

*Model: X6750HRT (VEP0075, EP75B),
X6850HRT (VEP0074, VEP0078, EP70B)*

GENERAL MAINTENANCE TIPS

- To reduce the risk of electrical shock always unplug the Incline Elliptical Trainer from the electrical outlet before cleaning or maintaining.
- Locate Incline Elliptical Trainer in a cool, dry place.
- Make sure all bolts and fasteners are kept tight.
- Keep the display console free from fingerprints and salt buildup caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the Incline Elliptical Trainer.
Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

PREVENTIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

ITEM	DAILY	MONTHLY	ANNUALLY
DISPLAY CONSOLE	CLEAN	INSPECT	
ALL BOLTS AND HARDWARE		INSPECT	
FRAME	CLEAN		INSPECT
HANDLEBARS	CLEAN	INSPECT	
GUIDE RAILS	CLEAN		
ROLLER WHEELS	CLEAN	INSPECT	
PLASTIC COVERS	CLEAN		
FOOTPLATES	CLEAN		
POWER CORD		INSPECT	