


Assembly Guide Supplement

Please note changes to assembly STEP 5.

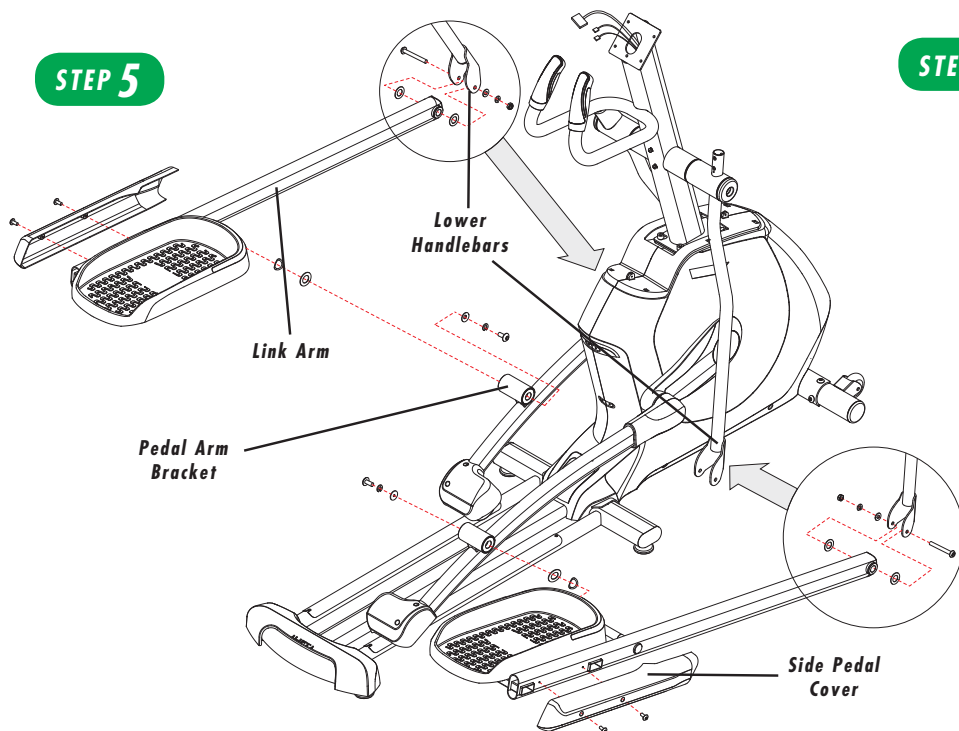

STEP 5

OPEN HARDWARE FOR STEP 5


Attach Link Arms

- Slide wavy washer and 27mm flat washer onto link arm before sliding link arm onto pedal arm bracket
- Attach link arm to pedal arm using 1 flat washer, 1 spring washer and 1 bolt
- Align opposite end of link arm with bracket on bottom of lower handlebar
- Place Teflon washers on both sides of the link arm. While holding Teflon washers slide link arm into bottom end of lower handlebar
- Secure the joint with 1 bolt, 1 flat washer, 1 spring washer and secure with one nut
- Repeat on other side


Attach Side Pedal Covers

- Secure side pedal covers with 2 pre-attached screws on each side

STEP 3

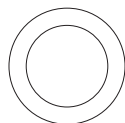


17x0.5t Wavy Washer. Quantity: 2



8x20x1.5t Flat Washer. Quantity: 2



8x15x2t Spring Washer. Quantity: 2



M8x20mm Oval Hex Socket Bolt. Quantity: 2


STEP 5




8x15x2t Spring Washer. Quantity: 4




M8 Nylon Nut. Quantity: 2




8x20x1.5t Flat Washer. Quantity: 4




M8x70mm Oval Hex Socket Bolt. Quantity: 2




M8x20mm Oval Hex Socket Bolt. Quantity: 2

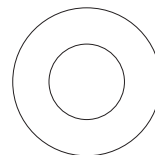

16x28x1t Teflon Washer. Quantity: 4

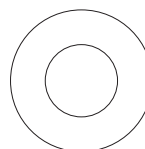

20x27x1.5t Flat Washer. Quantity: 2

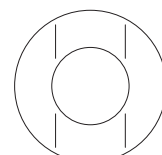

20x29x0.3t Wavy Washer. Quantity: 2

Please note changes to hardware content for STEP 3 and STEP 5.