


Life Fitness Model 9100 and 9500 Series Treadmills How To...FILL THE AUTOMATIC WAXING SYSTEM

Tools Required: 5/32" hex key wrench

WARNING: Failure to observe safety procedures when servicing this unit could result in injury from electrical shock. Check expiration date on wax container box before proceeding. If expiration date is exceeded, return the unopened container to Life Fitness Customer Support Services for replacement.

Step 1

Turn power OFF at the On/Off switch and unplug the line cord from the electrical outlet.

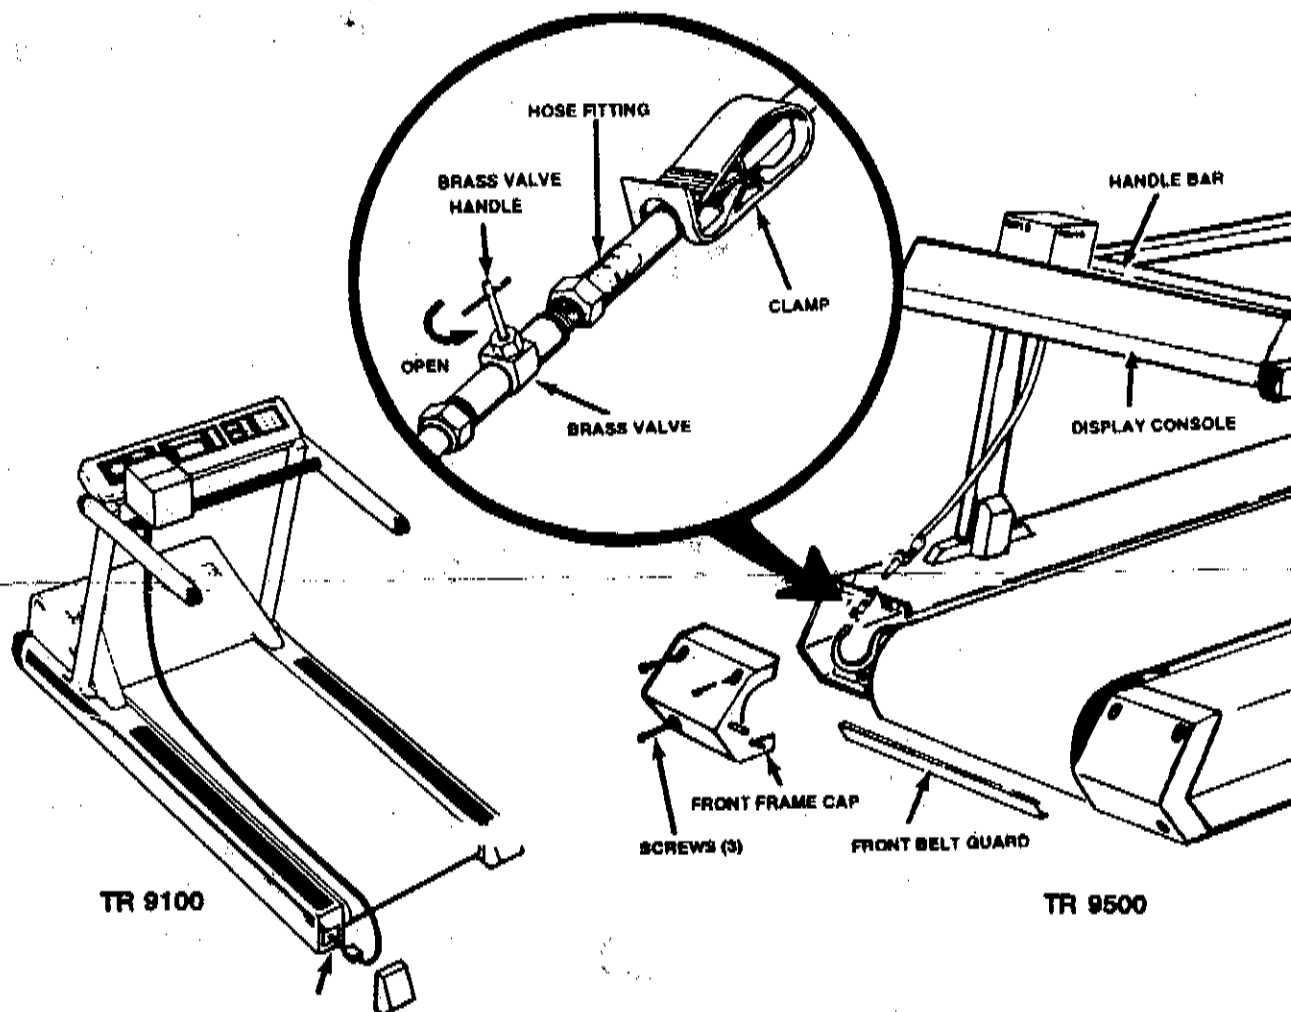

Step 2

TR 9500: Using a 5/32" hex key wrench, remove the two SCREWS from the *right*, FRONT FRAME CAP. Remove the CAP and the FRONT BELT GUARD and set aside.


TR 9100: Using a 5/32" hex key wrench, remove the three SCREWS from the *left*, REAR FRAME CAP. Remove the CAP and set aside.

Step 3

Locate the BRASS VALVE and HOSE within the treadmill and gently pull it out for easier access.

Step 4

Open the WAX KIT and remove the plastic bag containing the FILLING HOSE, HOSE CLAMP and WAX BAG CAP. Remove the perforated circle on the corrugated WAX BOX to access the existing CAP on the WAX BAG.

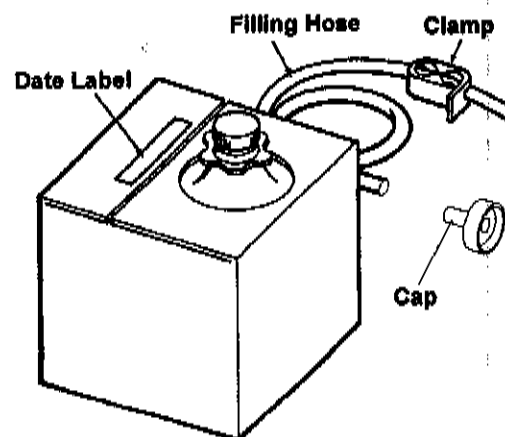

Step 5

Install the HOSE CLAMP on one end of the HOSE included with the WAX KIT and pinch closed. Place your fingers beneath the plastic "Daisy" below the existing CAP on the WAX BAG to support the BAG in an upright position. Remove the existing CAP from the WAX BAG and replace with the new CAP included in the KIT. Slide the HOSE end opposite of the CLAMP securely onto the nipple on the newly installed CAP.

CAUTION: The wax in the WAX BAG is in a liquid state. Do not tilt the BOX prior to checking that the HOSE is attached securely to the CAP and the CLAMP is properly "pinching" the HOSE to prevent any wax from escaping.

Step 6

Lift and position the WAX BOX upside down between the HANDLEBAR and DISPLAY CONSOLE of the treadmill. Route the filling HOSE between the HANDLEBAR and DISPLAY CONSOLE and slip the HOSE end with the CLAMP on to the BRASS VALVE fitting located inside the treadmill. Allow the HOSE to fill completely with WAX prior to opening the CLAMP.

Step 7

Turn the BRASS VALVE HANDLE completely counter-clockwise to a full "OPEN" position. Release the CLAMP on the filling HOSE and the liquid wax will flow freely out of the WAX BAG and into the WAX RESERVOIR of the treadmill.

NOTE: It will take approximately eight minutes for all five quarts of wax to drain completely to the treadmill.

Step 8

The wax transfer is complete when bubbles appear in the filling HOSE. Check to insure that the WAX BAG has emptied. Press the HOSE CLAMP tightly to seal and turn the BRASS VALVE HANDLE completely clockwise to a fully "CLOSED" position.

Step 9

Remove the HOSE from the BRASS VALVE and discard the WAX KIT. The wax filling procedure is now complete. Replace the BRASS FITTING in the treadmill and reinstall the END CAPS (and the FRONT BELT GUARD on the 9500).

CAUTION: Remaining wax solution may drain from between the HOSE and the CLAMP.

Step 10

See chart below to reset wax fill percent to 100% and count to zero times waxed.

The machine is now fully operational and the wax solution will last approximately one year.

Treadmill Model	Refill Wax Reservoir	To Fire Wax Pump (Service Only)
TR 9100/TR 9500 Software Version Control 3.7 or earlier Logic 2.2 or earlier	- Press 125, ENTER - Display will read: "FILL WAXER FULL" - Press ENTER	- Press 919, ENTER - Fit Test program light "ON", ENTER
TR 9100/TR 9500 Software Version Control 4.2 or later Logic 2.2 or later		Press 7373, ENTER
TR 9100/TR 9500 Software Version Control 5.0 or later Logic 5.0 or later		
TR 9500HR Software Version Control 14.9 or earlier Logic 13.0 or earlier	- Press 125, ENTER - Display will read: "FILL WAXER FULL" - Press ENTER	- Press 919, ENTER - Fit Test program light "ON", ENTER
TR 9100HR/TR 9500HR Software Version Control 15.0 or later Logic 15.0 or later	- Press 5125, ENTER - Display will read: "FILL WAXER FULL" - Press ENTER	Press 7373, ENTER
To Identify Software Version, Press 919, ENTER. Random and Fit Test programs "ON". Display will scroll through to logic and control.		

If you have any problems or questions with these instructions notify:

Life Fitness Customer Support Services

(800) 351-3737 or (708) 451-0036

FAX (708) 451-3702

Be sure to have the model and serial number of the treadmill available so the phone technicians can help you as quickly and easily as possible.

M051-00K26-A250