

Life Fitness Model 9000 Treadmill

How To...INSTALL THE AUTOMATIC WAXING SYSTEM

Tools Required: Phillips screwdriver, Scissors

Step 1

While standing next to the treadmill, enter the diagnostic mode by pressing **9-1-9, ENTER**. Press and hold the **INCLINE UP ARROW KEY** until the incline percentage reaches 12.0.

Step 2

Turn the unit **OFF** at the **I/O** switch to keep the treadmill elevated. Unplug the unit from the electrical outlet.

Step 3

With the help of another person, tilt the unit onto its user right side.

⇒ For Refills...

Step 4

Remove the two **PHILLIPS SCREWS** from the **LUBRICANT BAG COVER**. Guide the two tabs on the **LUBRICANT BAG COVER** out of the two slots in the **MOTOR PAN** and remove the **LUBRICANT BAG COVER** from the treadmill. Close the **FLOW CONTROL CLAMP** on the **INLET TUBE** and remove the empty **LUBRICANT BAG** from the treadmill by opening the **HOSE CLAMP** and disconnecting the **HOSE** from the **INLET TUBE** barbed fitting.

Step 5

- Turn the power **ON** at the **I/O** switch.
- Press **CLEAR** twice.
- Enter the Diagnostic mode by pressing **5-1-2-5**, then **ENTER**.
- Press **ENTER** key to clear wax stats.
- Press the **STOP** key to exit diagnostics.


⇒ For New Installations...

Step 4

Remove the retaining tape that holds the **INLET TUBE** to the underside of the **MOTOR PAN**. Extend the **INLET TUBE** out to the right side of the unit.

Step 5

Attach the **FLOW CONTROL CLAMP** (included in Lubricant kit) to the new **LUBRICANT BAG TUBING** and close the **CLAMP** to fully seal the tube. Cut the **LUBRICANT BAG TUBING** approximately $\frac{3}{4}$ " from the plugged end. Discard the **BARBED PLUG**.

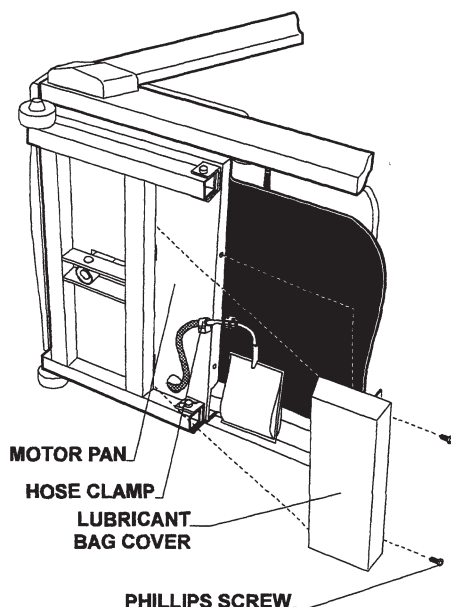

Step 6

Attach the **LUBRICANT BAG** tube to the barbed fitting at the end of the **INLET TUBE**.

Step 7

Release the **FLOW CONTROL CLAMP**.

Step 8

Place the **LUBRICANT BAG** into the **BAG COVER** and orient the bag as shown at right. Position the **BAG COVER** under the treadmill. The **TUBING** will fold across the top of the **BAG**.

Step 9

Attach the **LUBRICANT BAG COVER** to the **MOTOR PAN** by sliding the two tabs on the **COVER** into the two slots in the **MOTOR PAN**. Secure the cover to the **MOTOR PAN** with the two **PHILLIPS SCREWS**.

NOTE: BE CAREFUL NOT TO PINCH THE LUBRICANT BAG OR THE TUBING BETWEEN COVER AND MOTOR PAN.

