



## **New Balance Treadmill Calibration Instructions**

***This process resets all the electronic components back to their original setting***

The treadmill belt will ramp up from 0 to maximum speed and the elevation motor inclines from 0 – 12%. When finished the unit will turn itself off.

### **Step One**

- a. check your serial number (known as series number has letters TM within the number) and model number you have (1200, 1400, 1500, 1600, 1800, 2500)
- b. use that serial number and model number to determine which set of calibration instructions to use

### **Step Two**

- a. the power to the computer is turned off during this process but the red safety key remains on. **(again only the main power switch by your power cord should be on during this process)**

**These calibration instructions are for the following serial numbers and models 1200, 1400, 1600, 1800 .....**

Serial numbers beginning with the first two numbers 05 all the way up to this number 0634tm follow these instructions below

**\*\*\* The power to the computer is turned off during this process but the red safety key remains on\*\*\***


- 1. Hold down all three of these keys at the same time  
Speed + and – Keys and Black Select key**
- 2. Hold down until the letters C A L appears**
- 3. Once C A L appears let the keys go and step off your walking deck.**
- 4. The unit is going to ramp up from 0 mph to maximum speed and the elevation motor inclines from 0% - 12% and comes back down.**
- 5. When finished the unit will shut itself off.**

**6. Once the unit shuts itself off step on the deck and test the unit by using it as you normally would.**

**If you continue to have a problem after this calibration process please contact us at the phone number of 1-800-321-9236 Monday – Friday from 8:30 – 5:00pm \*\*a message can be left after 5:00pm Eastern Standard Time ask for Extension 4501 or 4521 this are treadmill technicians and please leave your email address as well as your name and phone number\*\***  
**These calibration instructions are for the following serial numbers and models 1200, 1400, 1500, 1600, 1800, 2500 .....**

**Serial numbers beginning with the 0635TM and up please follow these calibration instructions below**

- 1. Remove safety key from the computer**
- 2. Turn the main power switch by power cord to OFF position**
- 3. Unplug power cord from beside the main power switch.**

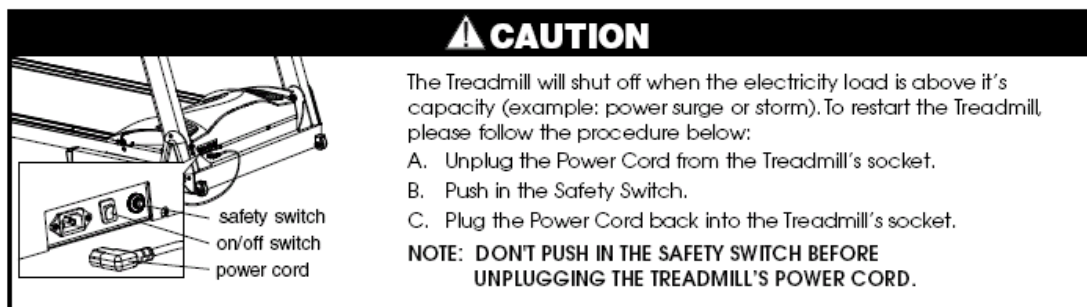

- 4. Press Black safety switch button twice located on the other side of the main power switch.**
- 5. Plug power cord back into unit.**
- 6. Turn the main power switch to the ON position.**
- 7. Place the safety key back onto the computer.**
- 8. Press power button on the computer and test the unit by using it as you normally would.**

**If you continue to have a problem after this calibration process please contact us at the phone number of 1-800-321-9236 Monday – Friday from 8:30 – 5:00pm \*\*a message can be left after 5:00pm Eastern Standard Time ask for Extension 4501 or 4521 this are treadmill technicians and please leave your email address as well as your name and phone number\*\***