


Sanibel i35 Replace console insert instruction

Parts and tools requirement :

1. Phillip screwdriver X 1pcs
2. Console display overlay X 1pcs
3. Console main PCB with E1.2 software and plastic insert X 1pcs



Step 1: Use hand carefully to move out the console overlay from console upper plastic cover.

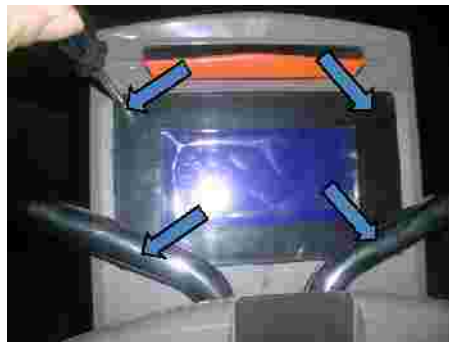

Step 2: Use a Phillip screw driver to open fix console main PCB 4 bolts on the upper console plastic cover.



Step 3: Carefully lift up the with console main PCB plastic insert from console upper plastic cover.



Step 4: Carefully use hand disconnect All connector on the main PCB.



Hand pulse sensor

Connect to lower
PC board

Wireless heart
receiver

Wireless heart
receiver

Cool fan