

Calibration Guide

Simple Console


Models: X1500 (EP224), X6000 (EP223), X6200 (EP225)

This guide will assist you in entering the Engineering Mode of the console to view and/or change the following variables:

- Console Tests
 - LCD display testing
- Machine Accumulated Variables/ ECB testing
 - Total Time
 - Total Distance
 - ECB test
- Software Version and Measurement Variables
 - Software version test
 - Miles or Kilometers
- Default Time
- Default Level
- Machine Type/Model
 - Bike (BI)
 - 1500, 2050, 2250, 3200
 - Elliptical
 - 1500, 6000, 6200
- Setting the console for:
 - Miles or Kilometers

ENTER ENGINEERING MODE

- Press and hold the **"UP"** and **"DOWN"** buttons simultaneously for approximately three seconds.
- You will hear a series of beeps and the display will read **"ENG1"**. You are now in ENGINEERING MODE.
- Use the **"UP"** and **"DOWN"** buttons to scroll through the six Eng mode subgroups. Press **"ENTER"** to select mode.

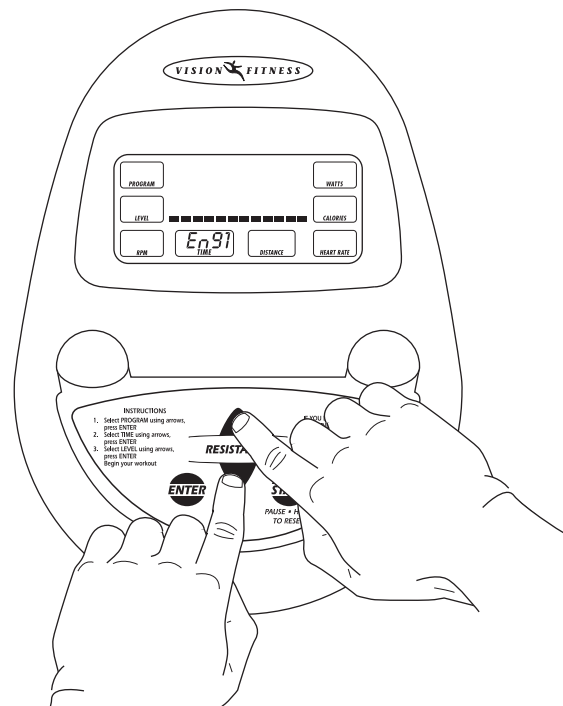

ENGINEERING MODE SUBGROUPS

- Eng1 (LCD Display testing)
 - Press **"UP"** and **"DOWN"** buttons to test LCD displays.
 - To exit, press and hold **"START"** for three seconds.
- Eng2 (Total Time, Total Distance, ECB test)
 - Press **"UP"** and **"DOWN"** buttons to test brake movement through cycle.
 - Lower left display shows location of ECB brake.
 - Left center display shows the accumulated hours of use on machine.
 - Right center display shows the accumulated distance in miles or kilometers on machine.
 - To exit, press and hold **"START"** for three seconds.
- Eng3 (Software version test, MI or KM)
 - Matrix display shows Miles or Kilometers.
 - Lower left display shows Bike or Elliptical mode.
 - Left center display shows software version.
 - To exit, press and hold **"START"** for three seconds.

Calibration Guide

Simple Console

Models: X1500 (EP224), X6000 (EP223), X6200 (EP225)

ENGINEERING MODE SUBGROUPS (continued)

- Eng4 (Default Time)
 - Press **"UP"** and **"DOWN"** buttons to set the default workout time.
 - To save, press and hold **"ENTER"**.
 - To exit, press and hold **"START"** for three seconds.
- Eng5 (Default Level)
 - Press **"UP"** and **"DOWN"** buttons to set the default workout level.
 - To save, press and hold **"ENTER"**.
 - To exit, press and hold **"START"** for three seconds.
- Eng6 (Machine Type/Model)
 - Press **"UP"** and **"DOWN"** buttons to select machine, Bike (BI) or Elliptical (EP).
 - Press **"ENTER"** to save.
 - Press **"UP"** and **"DOWN"** buttons to select model, for Bike (1500, 2050, 2250, 3200) or for Elliptical (1500, 6000, 6200).
 - Press **"ENTER"** to save.

EXIT ENGINEERING MODE

- To exit engineering mode, press and hold **"START"** for approximately three seconds.

SETTING: MILES VS. KILOMETERS

- The console can be configured for **Miles or Kilometers**. This setting is selected via a small DIP switch inside the console. Remove the console to access the switch.

